

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [Clikon](#) /
- › Clikon CK2252 10-in-1 Food Processor User Manual

Clikon CK2252

Clikon CK2252 10-in-1 Food Processor User Manual

Model: CK2252

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Clikon CK2252 Food Processor. Retain this manual for future reference.

- **Electrical Safety:** Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting. Do not immerse the motor unit, cord, or plug in water or any other liquid.
- **Blade Handling:** Blades are sharp. Handle with extreme care, especially when assembling, disassembling, or cleaning. Always hold blades by the plastic hub.
- **Supervision:** Close supervision is necessary when any appliance is used by or near children. Keep the appliance and its cord out of reach of children.
- **Usage Environment:** Do not use the appliance outdoors. Place the appliance on a stable, flat, and dry surface.
- **Overload Protection:** The appliance is equipped with an overload protection system. If the motor stops due to overheating, unplug it and let it cool down for at least 30 minutes before resuming use.
- **Attachments:** Only use attachments and accessories recommended or sold by the manufacturer.
- **Maintenance:** Unplug the appliance from the power outlet before cleaning or when not in use.
- **Damage:** Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact authorized service personnel for examination, repair, or adjustment.

2. PRODUCT OVERVIEW AND COMPONENTS

The Clikon CK2252 is a versatile 10-in-1 food processor designed to assist with various kitchen tasks. Familiarize yourself with its components:

- Motor Unit with Control Dial (Pulse, 0, 1, 2 settings)

- Food Processor Bowl (1.2 Liters capacity)
- Food Processor Lid with Feeder Tube and Pusher
- Stainless Steel Chopping Blade
- Slicing/Shredding Disc
- Blender Jar with Lid
- Grinder Jar with Lid
- Chopper Jar with Lid



Image 2.1: The Clikon CK2252 Food Processor showcasing the main motor unit, food processor bowl, blender jar, chopper jar, and grinder jar.

3. SETUP AND ASSEMBLY

Before first use, wash all detachable parts (bowls, jars, lids, blades, discs) in warm soapy water, rinse thoroughly, and dry. Wipe the motor unit with a damp cloth.

3.1 Assembling the Food Processor

1. Place the motor unit on a stable, flat surface.
2. Carefully place the food processor bowl onto the motor unit, aligning the bowl's handle with the locking mechanism on the motor unit. Turn clockwise until it locks securely.
3. Insert the desired accessory (chopping blade or slicing/shredding disc) onto the central shaft inside the bowl.
4. Add your ingredients to the bowl.
5. Place the lid onto the food processor bowl, ensuring the feeder tube aligns with the bowl's handle. Turn clockwise until it locks securely. The appliance will not operate unless the bowl and lid are correctly locked.



Image 3.1: The food processor bowl with the chopping blade inserted, ready for use.

3.2 Assembling the Blender

1. Ensure the blender blade assembly is securely attached to the blender jar.
2. Add ingredients to the blender jar. Do not exceed the maximum fill line.
3. Place the blender lid onto the jar and secure it.
4. Place the assembled blender jar onto the motor unit, aligning it with the locking mechanism. Turn clockwise until it locks securely.



Image 3.2: The blender jar filled with fruit, ready for blending.

3.3 Assembling the Grinder/Chopper Jars

1. Add ingredients to the grinder or chopper jar.
2. Securely attach the blade assembly and lid to the jar.
3. Place the assembled jar onto the motor unit, aligning it with the locking mechanism. Turn clockwise until it locks securely.



Image 3.3: The grinder jar containing nuts, prepared for grinding.

4. OPERATING INSTRUCTIONS

Once assembled, plug the appliance into a suitable power outlet. Use the control dial to select the desired speed setting.

- **'0' (Off):** The appliance is off.
- **'P' (Pulse):** Provides short bursts of power at maximum speed. Useful for quick chopping or blending, or for controlling consistency.
- **'1' (Low Speed):** Suitable for lighter tasks like mixing, gentle blending, or processing soft ingredients.
- **'2' (High Speed):** Ideal for heavier tasks such as chopping hard vegetables, blending thick liquids, or shredding.

4.1 Food Processor Functions (Chopping, Slicing, Shredding, Emulsifying, Doughing)

1. Ensure the food processor bowl and desired blade/disc are correctly assembled and locked.
2. For chopping, add ingredients directly into the bowl. For slicing/shredding, feed ingredients through the feeder tube using the pusher.
3. Select speed '1' or '2' for continuous operation, or 'P' for pulse control.
4. Process until desired consistency is achieved. Do not operate continuously for more than 1 minute. Allow a 2-minute rest period between cycles.

4.2 Blending

1. Ensure the blender jar is correctly assembled and locked onto the motor unit.

2. Add liquids and solid ingredients. For best results, add liquids first.
3. Select speed '1' or '2' for continuous blending, or 'P' for pulse.
4. Blend until smooth. Do not blend hot liquids.

4.3 Grinding/Chopping with Small Jars

1. Ensure the grinder or chopper jar is correctly assembled and locked onto the motor unit.
2. Add dry ingredients (e.g., coffee beans, spices, nuts for grinding; small quantities of herbs, garlic for chopping).
3. Use speed '2' or 'P' for quick processing.
4. Process in short bursts to avoid overheating and achieve desired texture.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your appliance.

1. **Unplug:** Always unplug the appliance from the power outlet before cleaning.
2. **Disassemble:** Carefully disassemble all removable parts (bowls, jars, lids, blades, discs).
3. **Wash Removable Parts:** Wash all removable parts in warm soapy water. Rinse thoroughly and dry immediately. **Note:** The manufacturer recommends hand washing for all parts to maintain their integrity.
4. **Clean Motor Unit:** Wipe the motor unit with a damp cloth. Never immerse the motor unit in water or any other liquid.
5. **Storage:** Store the appliance and its accessories in a dry, safe place, out of reach of children. Ensure all parts are completely dry before storing.

6. TROUBLESHOOTING

If you encounter issues with your Clikon CK2252 Food Processor, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Bowl/lid not correctly locked; Power outage.	Check power connection; Ensure bowl/lid are securely locked (Auto Lock Protection); Check household circuit breaker.
Motor stops during operation.	Overload protection activated; Too much food; Food too hard.	Unplug and let cool for 30 minutes; Reduce quantity of ingredients; Cut food into smaller pieces.
Poor processing results.	Incorrect speed setting; Dull blade/disc; Insufficient liquid (for blending).	Adjust speed; Ensure blade/disc is clean and sharp; Add more liquid for blending.
Leakage from jar/bowl.	Lid not properly sealed; Overfilled; Blade assembly not tight.	Ensure lid is securely fastened; Do not exceed max fill line; Check blade assembly for tightness.

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Detailed technical specifications for the Clikon CK2252 Food Processor:

Feature	Detail
Brand	Clikon
Model Number	CK2252
Power / Wattage	400 Watts
Input Power	220-240V, 50/60Hz
Material	Plastic housing, Stainless Steel Blade
Food Processor Bowl Capacity	1.2 Liters
Number of Speeds	3 (Pulse, 1, 2)
Special Features	Adjustable Speed Control, Auto Lock Protection
Product Dimensions	Approximately 26.8 x 42.2 x 37.6 cm
Item Weight	Approximately 5.18 Kilograms

8. WARRANTY AND SUPPORT

The Clikon CK2252 Food Processor is designed for durability and performance. For information regarding product warranty, including terms and conditions, please refer to the warranty card included with your purchase or contact Clikon customer service.

For technical assistance, spare parts, or service inquiries, please contact your local Clikon authorized service center or visit the official Clikon website for support contact details.