



Manuals.plus /

› HOTT /

› HOTT CD511 Portable CD Player Instruction Manual

HOTT CD511

HOTT CD511 Portable CD Player Instruction Manual

Model: CD511

1. INTRODUCTION

Thank you for choosing the HOTT CD511 Portable CD Player. This manual provides detailed instructions for the proper setup, operation, and maintenance of your device. Please read this manual thoroughly before use to ensure optimal performance and longevity of your CD player.

2. PRODUCT OVERVIEW

2.1 Key Features

- **CD/MP3 Compatibility:** Supports CD, CD-R, CD-RW, and MP3 discs.
- **Electronic Anti-Skip/Anti-Shock Protection (ESP/ASP):** Ensures smooth playback even during movement.
- **Power Supply Options:** Can be powered by batteries or via USB charging.
- **Button Lock Function:** Prevents accidental button presses during use.
- **Multiple Sound Effects:** Includes BBS, Classic, Jazz, Pop, and Rock EQ modes.
- **Various Play Modes:** Offers play in order, repeat a track, repeat all, intro (first 10 seconds), and shuffle.
- **Resume Function:** Remembers the last played position even after power off.

2.2 Components and Controls

Familiarize yourself with the various parts and controls of your HOTT CD511 CD player.

Button Functions



Image 1: Top view of the HOTT CD511 Portable CD Player, highlighting the LCD display and various control buttons for navigation, sound effects, and play modes.

Button Functions

“HOLD” -- Key to lock or unlock the cd player
(Slide it to “OFF” position before turn on the CD player)



Image 2: Bottom and side view of the HOTT CD511 Portable CD Player, showing the HOLD switch, volume control, disc compartment open switch, headphone jack, power socket, and battery cover.

2.3 Compatibility



Image 3: The HOTT CD511 CD player supports various disc formats including standard CD, CD-R, CD-RW, and MP3 discs.

3. SETUP

3.1 Powering the Device

The HOTT CD511 can be powered in two ways:

1. **Batteries:** Open the battery cover on the bottom of the player. Insert two (2) 1.5V AA batteries, ensuring correct polarity. Close the battery cover securely.
2. **USB Power:** Connect the provided USB cable to the power socket on the side of the player and to a USB power adapter (not included) or a computer's USB port.

Note: Ensure the "HOLD" switch is in the "OFF" position before turning on the CD player.

3.2 Inserting a CD

1. Slide the "OPEN" switch to open the disc compartment lid.
2. Carefully place the CD onto the center spindle with the label side facing up.
3. Gently press the CD until it clicks into place.
4. Close the disc compartment lid firmly until it latches.

3.3 Connecting Headphones

Insert your 3.5mm headphones into the headphone jack located on the side of the player.

4. OPERATING INSTRUCTIONS

4.1 Basic Playback

- **Power On:** Press the **PLAY/PAUSE** button twice.
- **Play/Pause:** Press the **PLAY/PAUSE** button once to play or pause.

- **Stop:** Press the **STOP** button.
- **Power Off:** Press the **STOP** button twice.

4.2 Navigation

- **Next Track:** Press the **NEXT/FORWARD** button.
- **Previous Track:** Press the **PREVIOUS/BACK** button.
- **Fast Forward/Rewind:** Press and hold the **NEXT/FORWARD** or **PREVIOUS/BACK** button during playback.

4.3 Volume Control

Adjust the volume using the **VOLUME +/-** buttons located on the side of the player.

4.4 Play Modes and Sound Effects



5 PLAY MODES

- Play in order
- Repeat a track
- Repeat all
- Intro: Play first 10 secs of per track
- Shuf: Play in a random order

BBS **Pop** **Jazz** **Rock** **Classic**

Image 4: The HOTT CD511 offers various play modes and sound effects for a customized listening experience.

- **MODE Button:** Press to cycle through play modes: Single Repeat, All Repeat, Intro, Shuffle.
- **EQ Button:** Press to cycle through sound effects: BBS, Pop, Jazz, Rock, Classic.
- **DIR Button (MP3 mode only):** Selects the playlist or folder when playing MP3 discs.

4.5 HOLD Function

Slide the **HOLD** switch on the side of the player to the "ON" position to lock all buttons. This prevents accidental operation during transport. Slide it to "OFF" to unlock the buttons.

4.6 Anti-Skip/Anti-Shock Protection (ASP)

The ASP feature is automatically activated to prevent interruptions during playback caused by minor shocks or vibrations. The duration of anti-shock protection varies depending on the disc type (e.g., CD: 40 seconds, MP3 CD: 120 seconds).

4.7 Car Connectivity



Image 5: The HOTT CD511 can be connected to a car's auxiliary input using a 3.5mm audio cable for playback through the car's sound system.

The CD player supports connection to car audio systems via a 3.5mm auxiliary cable. Connect one end of the cable to the player's headphone jack and the other end to your car's AUX input. This feature is compatible with most car models including Toyota, Honda, and Hyundai.

4.8 Usage Scenarios



Image 6: The HOTT CD511 is suitable for various activities such as relaxation, learning, prenatal education, and travel.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the player. For the lens, use a specialized CD lens cleaning kit. Do not use abrasive cleaners or solvents.
- **Disc Care:** Handle CDs by their edges. Keep them clean and free from scratches. Store discs in their cases when not in use.
- **Battery Replacement:** Replace batteries when the low battery indicator appears on the LCD screen or when playback becomes inconsistent. Remove batteries if the player will not be used for an extended period.
- **Storage:** Store the player in a cool, dry place away from direct sunlight, high temperatures, and humidity.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not power on.	Batteries are dead or incorrectly inserted. USB cable is not connected or faulty. HOLD switch is ON.	Replace batteries, check polarity. Ensure USB cable is securely connected. Turn HOLD switch OFF.
Disc does not play.	Disc is dirty, scratched, or inserted incorrectly. Disc format is not supported.	Clean the disc, check for damage. Reinsert the disc correctly. Ensure disc is CD, CD-R, CD-RW, or MP3.
Sound skipping or interruption.	Disc is dirty or scratched. Player is subjected to excessive shock.	Clean the disc. Avoid strong vibrations. ASP function is active but has limits.
No sound from headphones.	Headphones not connected properly. Volume is too low. Headphones are faulty.	Ensure headphones are fully plugged in. Increase volume. Test with different headphones.

7. SPECIFICATIONS

- **Model:** CD511
- **Product Dimensions:** 5.6 x 5.6 x 0.6 inches
- **Item Weight:** 15.5 ounces
- **Brand:** HOTT
- **Color:** Black
- **Connectivity Technology:** Auxiliary, USB
- **Special Feature:** Portable
- **Number Of Discs:** 1
- **Manufacturer:** HOTT
- **First Available:** March 10, 2019

8. OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video 1: An official product video demonstrating the features and usage of the HOTT CD Player.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your product packaging or visit the official HOTT website. Keep your purchase receipt as proof of purchase for warranty claims.