Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Bodum /
- > BODUM Bistro Electric Coffee Grinder Model 10903-913EURO-3 User Manual

Bodum 10903-913EURO-3

BODUM Bistro Electric Coffee Grinder User Manual

Model: 10903-913EURO-3

INTRODUCTION

This manual provides instructions for the safe and efficient operation, maintenance, and troubleshooting of your BODUM Bistro Electric Coffee Grinder, Model 10903-913EURO-3. For optimal coffee flavor, grinding beans just before preparation is recommended. This electric coffee grinder is designed to facilitate this process.



Image: The BODUM Bistro Electric Coffee Grinder, showing whole coffee beans in the top hopper and ground coffee in the lower collection container.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- 1. Read all instructions before operating the appliance.
- 2. Do not touch hot surfaces. Use handles or knobs.
- 3. To protect against electric shock, do not immerse cord, plugs, or appliance in water or other liquid.
- 4. Close supervision is necessary when any appliance is used by or near children.
- 5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- 6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- 7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- 8. Do not use outdoors.
- 9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
- 10. Do not place on or near a hot gas or electric burner, or in a heated oven.
- 11. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- 12. Do not use appliance for other than intended use.
- 13. Ensure the lid is securely in place before operating.
- 14. Do not remove the collection container while the grinder is operating.

PRODUCT OVERVIEW AND COMPONENTS

The BODUM Bistro Electric Coffee Grinder consists of several key components designed for efficient coffee grinding.

- Bean Hopper: Transparent container at the top for whole coffee beans.
- Conical Burrs: Internal grinding mechanism for consistent results.
- Grind Setting Dial: Adjustable dial to select desired grind fineness.
- Timer Dial: Controls the grinding duration.
- Power Button: Initiates and stops the grinding process.
- Borosilicate Glass Collection Container: Anti-static container for ground coffee.
- Lid: Covers the bean hopper.



Image: The BODUM Bistro Electric Coffee Grinder, showing the main unit with the collection container empty and attached.

INITIAL SETUP

Before first use, follow these steps:

1. **Unpack:** Carefully remove all packaging materials from the grinder.

- 2. **Clean:** Wash the borosilicate glass collection container and its lid with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the grinder with a damp cloth. Ensure all parts are dry before assembly.
- 3. **Assemble:** Place the clean, dry collection container securely into its designated slot on the grinder. Ensure the bean hopper is properly seated on the base.
- 4. Placement: Position the grinder on a stable, flat, and dry surface.
- 5. Power Connection: Plug the power cord into a suitable electrical outlet.

OPERATING INSTRUCTIONS

1. Adding Coffee Beans

- Remove the lid from the bean hopper.
- Pour whole, roasted coffee beans into the hopper. Do not overfill. The grinder has a capacity of 220g.
- Replace the lid securely on the bean hopper.

2. Adjusting Grind Settings

The grinder offers 12 grinding settings, from fine to coarse. Rotate the grind setting dial located around the bean hopper to your desired fineness. Refer to the markings on the dial for guidance.

- Fine: Suitable for espresso machines.
- Medium: Ideal for drip coffee makers.
- Coarse: Recommended for French press or percolators.

3. Using the Timer Function

The grinder features an adjustable timer function for precise grinding duration. Rotate the timer dial to select the desired grinding time (e.g., 5, 10, 15, 20 seconds). This allows for consistent grinding of specific quantities.



Image: A detailed view of the grinder's top, showing the red timer dial with time markings (5, 10, 15, 20 seconds) and the grind fineness selector with various icons.

4. Starting and Stopping Grinding

- Ensure the collection container is correctly in place and the bean hopper lid is secure.
- Press the power button located on the front of the unit to start grinding. The grinder will operate for the duration set on the timer dial.
- To stop grinding manually before the timer finishes, press the power button again.



Image: A close-up of the grinder's side, highlighting the round, red power button.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your coffee grinder.

- 1. **Unplug:** Always unplug the grinder from the power outlet before cleaning.
- 2. **Empty Hopper:** Remove any remaining coffee beans from the hopper.
- 3. Remove Collection Container: Carefully slide out the borosilicate glass collection container.
- 4. Clean Collection Container: Wash the glass collection container and its lid with warm, soapy water. The borosilicate glass is anti-static and designed to prevent coffee powder from clinging. Rinse thoroughly and dry completely before reattaching.
- 5. **Clean Burrs:** Use a small brush (often supplied with grinders, or a stiff brush) to remove any ground coffee residue from the conical burrs. Do not use water directly on the burrs or inside the motor housing.
- 6. Wipe Exterior: Wipe the exterior of the grinder with a damp cloth. Do not immerse the main unit in water.
- 7. **Reassemble:** Ensure all parts are completely dry before reassembling the grinder.



Image: The BODUM Bistro Electric Coffee Grinder with its borosilicate glass collection container detached and placed next to the main unit, illustrating ease of cleaning.

TROUBLESHOOTING

If you encounter issues with your coffee grinder, refer to the following common problems and solutions:

• Grinder does not start:

- Ensure the power cord is securely plugged into a working outlet.
- Check that the bean hopper lid is properly closed and the collection container is correctly inserted. Safety mechanisms prevent operation if these are not in place.
- Verify that the timer dial is set to a grinding duration.

· Inconsistent grind:

- Ensure the burrs are clean and free of old coffee residue. Refer to the Cleaning and Maintenance section.
- Check that the grind setting dial is securely in position and has not shifted during operation.

• Grinder stops unexpectedly:

- The grinder may have overheated. Unplug the unit and allow it to cool down for at least 30 minutes before attempting to use it again.
- · Check for any obstructions in the burr area.

• Excessive static cling of ground coffee:

While the borosilicate glass container is designed to be anti-static, some static may occur in very dry
environments. Lightly dampen the inside of the collection container with a few drops of water before
grinding to reduce static.

If the problem persists after attempting these solutions, please contact customer support.

TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Bodum
Model Number	10903-913EURO-3
Color	White
Style	Coffee Grinder
Grinding Settings	12 (Fine to Coarse)
Grinder Type	Conical Burr
Bean Hopper Capacity	220g
Collection Container Material	Borosilicate Glass (Anti-static)
Item Weight	4.12 pounds
Package Dimensions	12.17 x 7.17 x 6.97 inches

Feature	Specification
Manufacturer	BODUM
UPC	699965397029

WARRANTY AND CUSTOMER SUPPORT

For information regarding warranty coverage, please refer to the warranty card included with your product packaging or visit the official Bodum website. If you require further assistance, have questions, or need to report a defect, please contact Bodum customer support directly.

You can typically find contact information on the Bodum website or through the retailer where the product was purchased.

Related Documents - 10903-913EURO-3



BODUM BISTRO 10903 Electric Coffee Grinder User Manual and Instructions

Comprehensive user manual for the BODUM BISTRO 10903 electric coffee grinder, including setup, operation, safety guidelines, maintenance, and warranty information.



Bodum BISTRO Adjustable Electric Coffee Grinder User Manual

Comprehensive instructions for using, cleaning, and maintaining the Bodum BISTRO Adjustable Electric Coffee Grinder (Model 12041). Includes safety precautions, technical specifications, and warranty information.



BODUM BISTRO Programmable Coffee Maker User Manual and Instructions

This comprehensive user manual provides essential information for the BODUM BISTRO Programmable Coffee Maker, model 11754. Learn about setup, operation, safety precautions, and maintenance for brewing delicious coffee at home.



Bodum French Press Coffee Maker Instructions for Use

Comprehensive instructions for using the Bodum French Press coffee maker, covering setup, brewing, cleaning, and safety precautions in multiple languages.



Bodum French Press Coffee Maker User Manual - Instructions for Use

Comprehensive user manual for Bodum French Press Coffee Makers, detailing setup, brewing instructions, cleaning procedures, and essential safety guidelines in English.



BODUM KENYA Coffee Maker - Instructions for Use

Detailed instructions for using and cleaning the BODUM KENYA Coffee Maker. Learn how to brew the perfect cup of coffee safely and effectively.