

BELIFE BN59-01198Q

BELIFE Replacement Remote Control User Manual

For Samsung UE40J6289 and UE40J6300 Series TVs

1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your BELIFE Replacement Remote Control, model BN59-01198Q. This remote is designed to be fully compatible with Samsung UE40J6289 and UE40J6300 series televisions, offering immediate functionality without the need for complex programming.

2. PRODUCT OVERVIEW

The BELIFE Replacement Remote Control is a direct replacement for your original Samsung TV remote, providing access to all essential functions. Its ergonomic design ensures comfortable handling and intuitive button placement.





Image 1: Front view of the BELIFE Replacement Remote Control, model BN59-01198Q. The remote is black with clearly labeled buttons for power, source, number pad, volume, channel, navigation, and media controls.

Key Button Functions:

- **Power (Red Circle with Line):** Turns the TV on or off.
- **Source:** Selects input sources (HDMI, AV, etc.).
- **Number Pad (0-9):** Direct channel selection and numerical input.
- **SPORTS:** Accesses sports-related features or modes.
- **TTX/MIX:** Teletext/Mix mode.
- **PRE-CH:** Returns to the previous channel.
- **Volume (+/-):** Adjusts the TV volume.

- **MUTE:** Mutes or unmutes the TV audio.
- **Channel (P Up/Down):** Changes TV channels sequentially.
- **CH LIST:** Displays the channel list.
- **MENU:** Opens the TV's main menu.
- **SMART HUB (Colored Cube):** Accesses the Smart Hub for apps and online content.
- **GUIDE:** Displays the electronic program guide.
- **TOOLS:** Provides quick access to common TV functions and settings.
- **INFO:** Displays information about the current program or input.
- **Navigation Pad (Up, Down, Left, Right, Enter):** Navigates through menus and confirms selections.
- **RETURN:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or function.
- **Color Buttons (A, B, C, D):** Functionality varies by application or menu.
- **E-MANUAL:** Accesses the TV's electronic manual.
- **EXTRA:** Additional functions, context-dependent.
- **SEARCH:** Initiates a search function.
- **PIC SIZE:** Adjusts the picture size/aspect ratio.
- **PICTURE:** Accesses picture settings.
- **AD/SUBT.:** Audio Description / Subtitle control.
- **Media Controls (Rewind, Play/Pause, Fast Forward, Stop, Record):** Controls media playback.

3. SETUP

3.1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by an arrow to open it.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.

Note: Batteries are not included with this replacement remote control.

3.2. Initial Use

This BELIFE replacement remote control requires no programming. Once batteries are correctly installed, it is ready for immediate use with your compatible Samsung UE40J6289 or UE40J6300 series TV.

4. OPERATING INSTRUCTIONS

Point the remote control directly at the infrared receiver on your Samsung TV. Ensure there are no obstructions between the remote and the TV.

4.1. Basic Functions

- **Power On/Off:** Press the **Power** button once.
- **Volume Adjustment:** Use the **Volume Up (+)** or **Volume Down (-)** buttons.
- **Channel Change:** Use the **Channel Up (P+)** or **Channel Down (P-)** buttons, or enter the channel number directly using the number pad.

- **Source Selection:** Press the **Source** button to cycle through available input sources.

4.2. Advanced Functions

- **Accessing Smart Hub:** Press the **SMART HUB** button (colored cube icon) to open the Smart Hub interface for applications and streaming services.
- **Navigating Menus:** Use the **MENU** button to open the main menu. Use the **Navigation Pad** (Up, Down, Left, Right arrows) to move through options and the central **Enter** button to select.
- **Media Playback:** When viewing media, use the **Rewind**, **Play/Pause**, **Fast Forward**, **Stop**, and **Record** buttons for control.

5. TROUBLESHOOTING

If your remote control is not functioning as expected, please refer to the following common issues and solutions:

- **Remote not responding:** Check if the batteries are inserted correctly with the correct polarity (+/-). Replace old batteries with new AAA alkaline batteries.
- **Remote range is limited:** Ensure there are no obstructions between the remote control and the TV's infrared sensor. The maximum effective range is approximately 10 meters.
- **Specific buttons not working:** If only certain buttons are unresponsive, try replacing the batteries. If the issue persists, the remote may require replacement.
- **TV not responding to any remote:** Ensure the TV is powered on and not in standby mode. Check the TV's own power button.

6. SPECIFICATIONS

Feature	Detail
Brand	BELIFE
Manufacturer	Generic
Model Number	BN59-01198Q
Compatible Devices	Samsung UE40J6289, Samsung UE40J6300
Connectivity Technology	Infrared
Controller Type	Button Control
Maximum Range	10 Meters
Battery Type	2 x AAA Alkaline (not included)

7. WARRANTY AND SUPPORT

This product is typically covered by a return policy allowing for refund or replacement within 31 days of purchase. For specific warranty details or support inquiries, please contact the seller, FERNBEDIENUNG-EXPERT, directly through your purchase platform. Ensure you retain your proof of purchase for any claims.

Related Documents - BN59-01198Q

	<p>BELIFE S11 Stick Vacuum Cleaner User Manual - Operation, Safety, and Troubleshooting</p> <p>Comprehensive user manual for the BELIFE S11 stick vacuum cleaner. Learn about product specifications, safety guidelines, assembly, operation, cleaning, and troubleshooting common issues. Get the most out of your BELIFE S11.</p>
	<p>BELIFE TV Wall Mount Installation Guide</p> <p>Step-by-step instructions for installing a BELIFE TV wall mount, including parts list and mounting procedures.</p>
	<p>Belife Cordless Vacuum Cleaner User Manual and Troubleshooting Guide</p> <p>Comprehensive guide for the Belife cordless vacuum cleaner, covering assembly, operation, troubleshooting, and maintenance for optimal performance. Learn how to clean filters, brush, and cyclone unit.</p>
	<p>Belife Cordless Vacuum Cleaner User Guide and Troubleshooting</p> <p>Comprehensive user guide for the Belife Cordless Vacuum Cleaner, covering assembly, operation, troubleshooting, and maintenance of filters and brush head. Features include 22Kpa suction, 45mins runtime, and LED touch screen.</p>
	<p>Belife BVC11 Cordless Vacuum Cleaner User Guide and Maintenance</p> <p>Comprehensive user guide for the Belife BVC11 Cordless Vacuum Cleaner, covering assembly, operation, troubleshooting, and detailed cleaning instructions for filters, dust cup, brush, and bearing. Learn how to maintain your vacuum for optimal performance.</p>
	<p>Belife BVC-V11/V12 Cordless Vacuum Cleaner User Manual</p> <p>User manual for the Belife BVC-V11/V12 Cordless Vacuum Cleaner, covering safety instructions, product parts, preparation, usage, cleaning, maintenance, technical specifications, troubleshooting, and warranty information.</p>

