

Leitmotiv LM1857GD

LEITMOTIV LM1857GD Pendant Lamp User Manual

Model: LM1857GD

Brand: Leitmotiv

INTRODUCTION

This manual provides essential instructions for the safe installation, operation, and maintenance of your LEITMOTIV LM1857GD Pendant Lamp. Please read this manual thoroughly before installation and retain it for future reference. This product is designed for indoor use only.

IMPORTANT SAFETY INFORMATION

- **Electrical Safety:** Installation should be performed by a qualified electrician or a competent person in accordance with local electrical codes. Always disconnect power at the main circuit breaker before installation, maintenance, or bulb replacement.
- **Bulb Type:** Use only E27 bulbs with a maximum wattage of 40W. Exceeding the maximum wattage can cause overheating and damage to the fixture or create a fire hazard.
- **Handling:** Handle the lamp with care. Avoid dropping or subjecting it to strong impacts.
- **Cleaning:** Do not use abrasive cleaners or solvents on the lamp. Clean with a soft, dry cloth only.
- **Ventilation:** Ensure adequate air circulation around the lamp. Do not cover the lamp with any materials.

PACKAGE CONTENTS

Please check that all components are present and undamaged before proceeding with installation.

- 1 x LEITMOTIV LM1857GD Pendant Lamp (Black/Gold)
- 1 x Ceiling Canopy
- Mounting Hardware (screws, anchors, terminal block)
- Instruction Manual



A front view of the LEITMOTIV LM1857GD pendant lamp, showcasing its distinctive black and gold aluminum slat design and the central bulb holder.

SETUP AND INSTALLATION

Follow these steps carefully to install your pendant lamp. Ensure power is disconnected before starting.

1. **Prepare for Installation:** Turn off the main power supply to the installation area at the circuit breaker. Ensure the power is off using a voltage tester.
2. **Mark Mounting Location:** Identify the desired location for the lamp. Use the ceiling canopy as a template to mark the drilling points for the mounting screws on the ceiling.
3. **Install Mounting Bracket:** Drill holes at the marked points. Insert appropriate wall anchors (if necessary) and secure the mounting bracket to the ceiling using the provided screws.
4. **Connect Wiring:** Carefully connect the electrical wires from the ceiling to the terminal block on the lamp's ceiling canopy. Connect the Live (L), Neutral (N), and Ground (E) wires according to local electrical codes. Ensure all connections are secure.

5. **Secure Ceiling Canopy:** Carefully push the ceiling canopy up against the ceiling, ensuring no wires are pinched. Secure the canopy to the mounting bracket using the provided screws or fasteners.
6. **Adjust Suspension Length:** If adjustable, set the desired height of the pendant lamp by adjusting the suspension cable. Ensure the lamp hangs level.
7. **Install Bulb:** Screw an E27 bulb (max 40W) into the lamp holder. Do not overtighten.
8. **Restore Power:** Once installation is complete and all connections are secure, restore power at the main circuit breaker. Test the lamp to ensure it functions correctly.



A close-up image showing the black circular ceiling canopy, the braided electrical cable, and the thin suspension wire, indicating the components for mounting the lamp.







An angled view of the LEITMOTIV LM1857GD pendant lamp, highlighting the E27 bulb socket and the light source within the black and gold aluminum structure.

OPERATING INSTRUCTIONS

The LEITMOTIV LM1857GD Pendant Lamp operates with a standard E27 bulb (not included) and is powered via a corded electrical connection. Once installed and a bulb is fitted, the lamp can be switched on and off using your room's wall switch connected to the lamp's circuit.

- **Bulb Requirement:** Requires one E27 bulb.
- **Maximum Wattage:** Do not exceed 40W for the bulb.
- **Power Source:** Corded electric, controlled by an external wall switch.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your lamp.

- **Cleaning:** To clean the lamp, ensure the power is off. Use a soft, dry, lint-free cloth to gently wipe the surfaces. Do not use water, cleaning sprays, or abrasive materials, as these can damage the finish or electrical components.
- **Bulb Replacement:** Before replacing the bulb, always turn off the power supply at the main circuit breaker. Allow the old bulb to cool completely before unscrewing it. Screw in a new E27 bulb (max 40W) gently until secure. Restore power after replacement.
- **Inspection:** Periodically inspect the lamp and its wiring for any signs of damage or wear. If any issues are found, disconnect power and consult a qualified electrician.

TROUBLESHOOTING

If you encounter issues with your lamp, refer to the following common problems and solutions:

- **Lamp Does Not Turn On:**
 - Check if the main power supply to the lamp is on.
 - Ensure the light bulb is correctly screwed in and not faulty. Try replacing the bulb with a known working one.
 - Verify that the electrical connections are secure and correctly wired. If unsure, consult a qualified electrician.
- **Lamp Flickers:**
 - Ensure the bulb is screwed in tightly.
 - The bulb might be faulty or incompatible. Try a different E27 bulb (max 40W).
 - Check for loose wiring connections at the lamp or wall switch. Disconnect power before checking.
- **Lamp Overheats:**
 - Ensure the installed bulb does not exceed the maximum wattage of 40W.
 - Verify that the lamp is not covered or obstructed, allowing for proper heat dissipation.

SPECIFICATIONS

Model Number	LM1857GD
Brand	Leitmotiv

Product Dimensions	75 x 75 x 52.5 cm (L x W x H)
Weight	2.9 kg
Color	Black/Gold
Material	Aluminum
Style	Design
Fixture Shape	Hanger (Pendant)
Room Type	Dining Room (suitable for various indoor spaces)
Power Source	Corded Electric
Shade Material	Aluminum
Number of Light Sources	1
Bulb Base	E27
Max Wattage	40W

WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. For specific warranty details, please refer to the documentation provided at the time of purchase or contact your retailer. For technical support or inquiries, please contact the retailer where the product was purchased or the Leitmotiv customer service department.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question