

Karlsson KA5753YE

Karlsson KA5753YE Gummy Digital LCD Alarm Clock User Manual

Model: KA5753YE

1. INTRODUCTION

Thank you for choosing the Karlsson KA5753YE Gummy Digital LCD Alarm Clock. This alarm clock is designed for simplicity and reliability, featuring a clear digital display, alarm function, snooze, and one-touch backlight. Its rubberized silicone surface provides a comfortable feel. This manual will guide you through the setup, operation, and maintenance of your new alarm clock.

2. PRODUCT OVERVIEW

The Karlsson Gummy alarm clock features a straightforward design with essential functions for daily use.

Key Features:

- Digital display for hours and minutes.
- Classic alarm function.
- Snooze button.
- One-touch backlight for easy reading in low light.
- Soft rubberized silicone surface.

Components:

1. LCD Display: Shows time and alarm status.
2. SNOOZE/LIGHT Button (Top): Activates snooze or backlight.
3. H (Hour) Button (Top): Adjusts hour.
4. M (Minute) Button (Top): Adjusts minute.
5. TIME SET Button (Back): Enters time setting mode.
6. ALARM ON/OFF Button (Right side of display): Toggles alarm.
7. ALARM SET Button (Left side of display): Enters alarm setting mode.
8. Battery Compartment (Back): Holds 3 AAA batteries.



Figure 1: Front view of the Karlsson KA5753YE Gummy Digital LCD Alarm Clock, showing the digital time display and top buttons.



Figure 2: Back view of the alarm clock, highlighting the TIME SET button and the battery compartment cover.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of the alarm clock (refer to Figure 2).
2. Remove the battery compartment cover.
3. Insert 3 new AAA batteries, ensuring correct polarity (+ and -). Batteries are not included.
4. Replace the battery compartment cover securely.

The clock display will illuminate once batteries are correctly installed.

4. OPERATING INSTRUCTIONS

4.1 Setting the Time

1. Press and hold the **TIME SET** button on the back of the clock until the hour digits begin to flash.
2. Press the **H** (Hour) button on the top to adjust the hour.
3. Press the **M** (Minute) button on the top to adjust the minute.
4. Press the **TIME SET** button again to confirm and exit time setting mode.

4.2 Setting the Alarm

1. Press and hold the **ALARM SET** button (located to the left of the display) until the alarm hour digits begin to flash.
2. Press the **H** (Hour) button on the top to adjust the alarm hour.
3. Press the **M** (Minute) button on the top to adjust the alarm minute.
4. Press the **ALARM SET** button again to confirm and exit alarm setting mode.

4.3 Activating/Deactivating the Alarm

- To turn the alarm **ON** or **OFF**, press the **ALARM ON/OFF** button (located to the right of the display). An alarm icon will appear on the LCD when the alarm is active.

4.4 Snooze Function

- When the alarm sounds, press the large **SNOOZE/LIGHT** button on the top of the clock to temporarily silence the alarm. The alarm will sound again after a few minutes.

4.5 Backlight

- Press the **SNOOZE/LIGHT** button on the top of the clock to illuminate the display for a few seconds.

5. MAINTENANCE

5.1 Cleaning

- Wipe the clock with a soft, dry cloth.
- Do not use abrasive cleaners or solvents, as they may damage the surface.

5.2 Battery Replacement

- When the display dims or the clock functions become erratic, replace all 3 AAA batteries.
- Always replace with new batteries of the same type.
- Dispose of old batteries responsibly according to local regulations.

6. TROUBLESHOOTING

- **Clock not displaying time / not turning on:**
 - Ensure batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
- **Alarm not sounding:**
 - Verify that the alarm is activated (alarm icon visible on display).

- Check if the alarm time is set correctly.
- Replace batteries if they are low.
- **Display is dim or flickering:**
 - Replace batteries.

7. SPECIFICATIONS

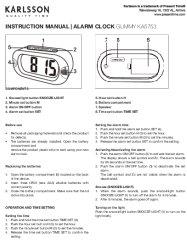 
Feature	Detail
Brand	Karlsson
Model Number	KA5753YE
Dimensions (L x W x H)	14 x 3.81 x 7 cm
Weight	200 grams
Material	Silicone
Display Type	Digital LCD
Power Source	Battery Powered (3 x AAA, not included)
Special Feature	Silent Clock, Backlight, Snooze

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or visit the official Karlsson website. Keep your purchase receipt as proof of purchase. For further assistance, you may contact Karlsson customer service through their official channels.[Visit Karlsson Website](#)

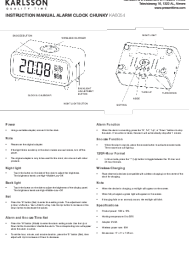 

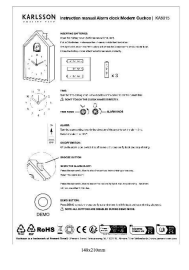 


© 2025 Karlsson. All rights reserved.

Related Documents - KA5753YE



[Karlsson Alarm Clock GUMMY KA5753 Instruction Manual](#)

Official instruction manual for the Karlsson Alarm Clock GUMMY KA5753. Learn how to set the time, alarm, use snooze, replace batteries, and understand warranty and maintenance information.

	<p>Karlsson Alarm Clock Chunky KA6054 Instruction Manual</p> <p>Comprehensive instruction manual for the Karlsson Alarm Clock Chunky KA6054, detailing setup, functions, wireless charging, specifications, warranty, and maintenance. Includes guidance on time setting, alarm functions, and light adjustments.</p>
	<p>Karlsson KA6035 Alarm Clock Instruction Manual</p> <p>Comprehensive instructions for operating the Karlsson KA6035 alarm clock, covering time setting, alarm configuration, snooze function, dimmer, and basic maintenance. Includes warranty information.</p>
	<p>Karlsson Modern Cuckoo Alarm Clock KA6015 Instruction Manual</p> <p>This instruction manual provides detailed guidance for setting up and operating the Karlsson Modern Cuckoo Alarm Clock KA6015, including battery installation, time and alarm setting, snooze function, and demo mode.</p>
	<p>Karlsson Gummy Alarm Clock Instruction Manual</p> <p>Instruction manual for the Karlsson Gummy Alarm Clock, including setup, operation, and warranty information for models KA5753BK, KA5753BL, KA5753GR, KA5753GY, KA5753PI, KA5753WH, and KA5753YE.</p>
	<p>Karlsson Alarm Clock Gummy Instruction Manual KA5753 Series</p> <p>Instruction manual for the Karlsson Alarm Clock Gummy, covering setup, operation, battery replacement, and warranty information for models KA5753BK, KA5753BL, KA5753GR, KA5753GY, KA5753PI, KA5753WH, and KA5753YE.</p>