Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Smoby /
- > Smoby Builder Max Tractor with Trailer Instruction Manual

Smoby 710301

Smoby Builder Max Tractor with Trailer - Instruction Manual

1. Introduction

The Smoby Builder Max Tractor with Trailer is a pedal-powered ride-on toy designed for children aged 3 to 6 years. This versatile toy features a functional front loader, a rear backhoe, an adjustable seat, and a steering wheel with an integrated horn, providing an engaging and interactive play experience for aspiring construction workers.

Safety Warnings:

- WARNING! Not suitable for children under 3 years.
- · Contains small parts. Choking hazard.
- Maximum weight capacity: 50 kg.
- · Adult supervision is required at all times.



Image 1: The Smoby Builder Max Tractor with Trailer, showcasing its main components.

2. SETUP AND ASSEMBLY

This product requires assembly. Please follow the detailed instructions provided in the separate assembly guide included with your purchase. Ensure all components are correctly identified and securely fastened before allowing a child to use the tractor.

Key Assembly Steps:

- 1. Unpack all components and verify against the parts list.
- 2. Assemble the main tractor chassis.
- 3. Attach the wheels and pedal mechanism.
- 4. Install the adjustable seat.
- 5. Mount the front loader and rear backhoe attachments.
- 6. Apply any included decals as per the guide.

Tools Required: Please refer to the assembly guide for a list of necessary tools. No specific tools are provided with the product.



Image 2: A child enjoying the Smoby Builder Max Tractor, demonstrating its use in an outdoor environment.

3. OPERATING INSTRUCTIONS

The Smoby Builder Max Tractor is designed for intuitive operation, allowing children to easily control its various functions.

3.1 Driving the Tractor

- **Pedal Power:** The tractor is propelled by pedals. Instruct the child to place their feet on the pedals and rotate them to move forward.
- **Steering:** Use the steering wheel to control the direction of the tractor. The steering wheel also includes an integrated horn for interactive play.
- Adjustable Seat: The seat can be adjusted to ensure the child is comfortably positioned and can reach the pedals effectively. Adjust the seat by loosening the fasteners, sliding it to the desired position, and re-tightening.





Image 3: Front view of a child on the tractor, highlighting the steering wheel and seat.

3.2 Using the Front Loader

The front loader is operated manually using the levers located near the steering wheel. It allows children to scoop up and transport light materials such as sand or small toys.

- **Scooping:** Lower the front loader bucket to the ground using the appropriate lever. Drive the tractor forward to scoop materials.
- **Lifting:** Raise the bucket using the lever to lift the scooped materials.
- **Dumping:** Tilt the bucket forward to dump the contents.



Image 4: A child demonstrating the use of the front loader with the attached trailer.

3.3 Using the Rear Backhoe and Trailer

The rear backhoe allows for digging and excavating. The detachable trailer can be used to transport materials.

- **Backhoe Operation:** The backhoe is operated manually. Use the handles to maneuver the arm and bucket for digging. A kickstand is integrated to stabilize the tractor during backhoe use.
- Trailer Attachment: The trailer can be easily attached to the rear of the tractor for hauling materials.



Image 5: A child operating the rear backhoe to dig into gravel.

4. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your Smoby Builder Max Tractor.

- Cleaning: Clean the tractor regularly with a damp cloth and mild soap. Avoid using abrasive cleaners or solvents, as these can damage the plastic.
- **Storage:** Store the tractor in a dry, sheltered area away from direct sunlight and extreme temperatures when not in use. This helps prevent material degradation and fading.
- **Inspection:** Periodically inspect all parts, especially moving components, wheels, and fasteners. Ensure all screws and bolts are tight. Replace any worn or damaged parts immediately.
- **Lubrication:** Moving parts, such as pedal axles or lever pivots, may benefit from occasional lubrication with a silicone-based spray to ensure smooth operation.



Image 6: The Smoby Builder Max Tractor ready for play or storage.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with the Smoby Builder Max Tractor.

Problem	Possible Cause	Solution
Tractor does not move when pedaling.	Pedal mechanism obstructed or chain dislodged.	Check for any foreign objects obstructing the pedals. Inspect the chain (if applicable) and ensure it is properly seated on the sprockets.
Wheels slip on certain surfaces.	Plastic wheels may lack sufficient grip on smooth or inclined surfaces.	This is a characteristic of the product's design. Avoid using the tractor on steep inclines or very smooth surfaces where traction is limited.
Front loader or backhoe levers are stiff.	Accumulation of dirt or lack of lubrication.	Clean the pivot points of the levers. Apply a small amount of silicone-based lubricant to improve movement. Ensure nuts are not overtightened.
Horn is not working.	Mechanism may be stuck or damaged.	Check if the horn button is obstructed. If the issue persists, contact customer support.

6. Specifications

Feature	Detail

Feature	Detail
Product Dimensions (L x W x H)	182 x 44 x 66 cm
Product Weight	11 kg
Recommended Age	36 months - 6 years
Maximum Weight Capacity	50 kg
Main Material	Plastic
Assembly Required	Yes
Batteries Required	No
Model Number	Kids Ride on Tractor and Trailer - (Internal Reference)
Educational Value	Learning, Playing, Riding, Moving

7. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your Smoby Builder Max Tractor with Trailer, please contact Smoby customer service. Specific information regarding spare parts availability is not provided in this manual. Please refer to the product packaging or the official Smoby website for the most current warranty and support details.

Related Documents - 710301



Smoby Tractor XL with Loader and Trailer Assembly Instructions

Step-by-step assembly guide for the Smoby Tractor XL toy, featuring a loader and trailer. Includes detailed part identification, essential safety warnings, and instructions for safe play and operation.



Smoby Baby Nurse Toilet Assembly Instructions and Safety Guide

Comprehensive assembly instructions and safety warnings for the Smoby Baby Nurse Toilet toy. Learn how to assemble the play toilet with clear steps and component identification.



Smoby Bercelonnette Assembly Instructions and Safety Guide

Detailed assembly instructions and safety information for the Smoby Bercelonnette toy. Includes part identification, step-by-step assembly guides, and important warnings for safe use.

<u>Smoby Pushchair + Pram Assembly Instructions</u>

Step-by-step guide for assembling the Smoby Pushchair + Pram (Model 03291X0/15). Includes important safety information, part identification, and assembly procedures.

Smoby Landau Calin Baby Doll Stroller Assembly Instructions

This document provides comprehensive assembly instructions for the Smoby Landau Calin baby doll stroller. It details the parts included, offers step-by-step guidance for assembly, and highlights crucial safety warnings for safe usage.



Smoby Baby Nurse Electronic Doll Bath - Assembly Instructions and Safety Guide

Comprehensive guide for assembling and safely using the Smoby Baby Nurse Electronic Doll Bath (Model AAP2330C), including parts list, step-by-step instructions, and important safety warnings for children.