

[Manuals.plus](#) /

› [Ultimaxx](#) /

› Ultimaxx Lightweight Portable Camera Tripod Stand (50") Instruction Manual

Ultimaxx TR50

Ultimaxx Lightweight Portable Camera Tripod Stand (50") Instruction Manual

Model: TR50 (704660949173)

1. INTRODUCTION

The Ultimaxx Lightweight Portable Camera Tripod is designed to provide stable support for a wide range of digital, video, and still cameras. Its adjustable height and user-friendly features make it suitable for both amateur and professional photographers seeking reliable stability and precise angle adjustments for capturing high-quality photographs and videos.



Figure 1.1: Ultimaxx 50-inch Lightweight Portable Camera Tripod, showcasing its compatibility with both cameras and camcorders.

2. KEY FEATURES

- **3-Way Ultra-Smooth Fluid Pan Head with Tilt Motion:** Allows for precise adjustments in horizontal and vertical planes.
- **Retractable Stabilizing Center:** Enhances stability, especially when extended.
- **Low Angle Fully Adjustable Locking Legs:** Provides flexibility for various shooting angles and terrains.

- **Fully Adjustable Center Pole:** Offers additional height adjustment.
- **Non-Slip Rubber Feet:** Ensures secure placement on diverse surfaces.
- **Built-in Bubble Level Indicator:** Assists in achieving perfectly level shots.
- **4-Section Aluminum Alloy Legs:** Durable and lightweight construction.
- **Extends to 50" / Folds to 15":** Compact design for portability and easy storage.
- **Lightweight & Compact Design:** Weighs approximately 0.45 kg (0.99 lbs) for easy transport.



Non-Slip Rubber Feet



Fully Adjustable
Locking Legs



(4) Section Aluminum
Alloy Legs



Adjustable Center Pole
with Crank Handle





**Built-in Bubble
Level Indicator**



**3-Way Pan Head
with Tilt Motion**

Figure 2.1: Visual representation of the tripod's key features, highlighting its design elements for stability and ease of use.

3. PACKAGE CONTENTS

Upon opening the package, please verify that all the following items are included:

- Ultimaxx Lightweight Portable Camera Tripod (50")
- Carrying Bag





Figure 3.1: The included carrying case for convenient transport and storage of the tripod.

4. SETUP INSTRUCTIONS

Follow these steps to set up your Ultimaxx tripod:

1. **Unpack the Tripod:** Carefully remove the tripod from its carrying bag and unfold the legs.
2. **Extend the Legs:** Loosen the leg locks on each section of the tripod legs. Extend the legs to the desired height, then firmly close the leg locks to secure them. Ensure all leg sections are evenly extended for optimal stability.
3. **Adjust Center Pole:** If additional height is needed, rotate the crank handle on the side of the center column to raise the center pole. Secure it by tightening the locking knob.
4. **Level the Tripod:** Use the built-in bubble level indicator on the tripod head to ensure the tripod is perfectly level. Adjust the leg lengths as necessary.
5. **Attach Your Device:**
 - Locate the quick-release plate on the tripod head.
 - Press the release lever or button to detach the quick-release plate.

- Screw the quick-release plate onto the tripod mount thread at the bottom of your camera or camcorder. Ensure it is securely fastened.
- Slide the quick-release plate with your device back into the tripod head until it clicks securely into place.



Figure 4.1: A DSLR camera securely mounted on the Ultimax tripod, ready for use.



Figure 4.2: Detailed view of the tripod's pan head, showing the quick-release plate and bubble level for precise leveling.

5. OPERATING INSTRUCTIONS

Once your device is securely mounted, you can begin operating the tripod:

1. Adjusting Pan and Tilt:

- Loosen the pan handle lock to allow horizontal (pan) movement.
- Loosen the tilt lock knob to allow vertical (tilt) movement.
- Adjust your camera to the desired angle, then tighten the respective locks to secure its position.

2. **Using the Center Pole:** The adjustable center pole can be raised or lowered using the crank handle for fine-tuning the height without adjusting the legs. Ensure the center pole locking knob is tightened after adjustment.
3. **Low Angle Shooting:** The fully adjustable locking legs allow for spreading the legs wide to achieve very low shooting angles. Ensure the leg locks are securely fastened in these positions.

Designed for DSLR's & Camcorders



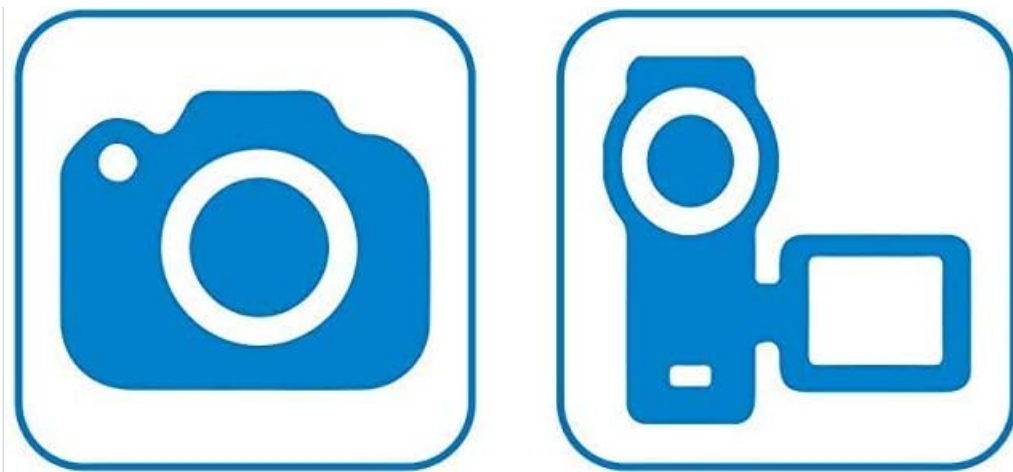


Figure 5.1: The tripod supporting a camcorder, illustrating its versatility for various recording needs.

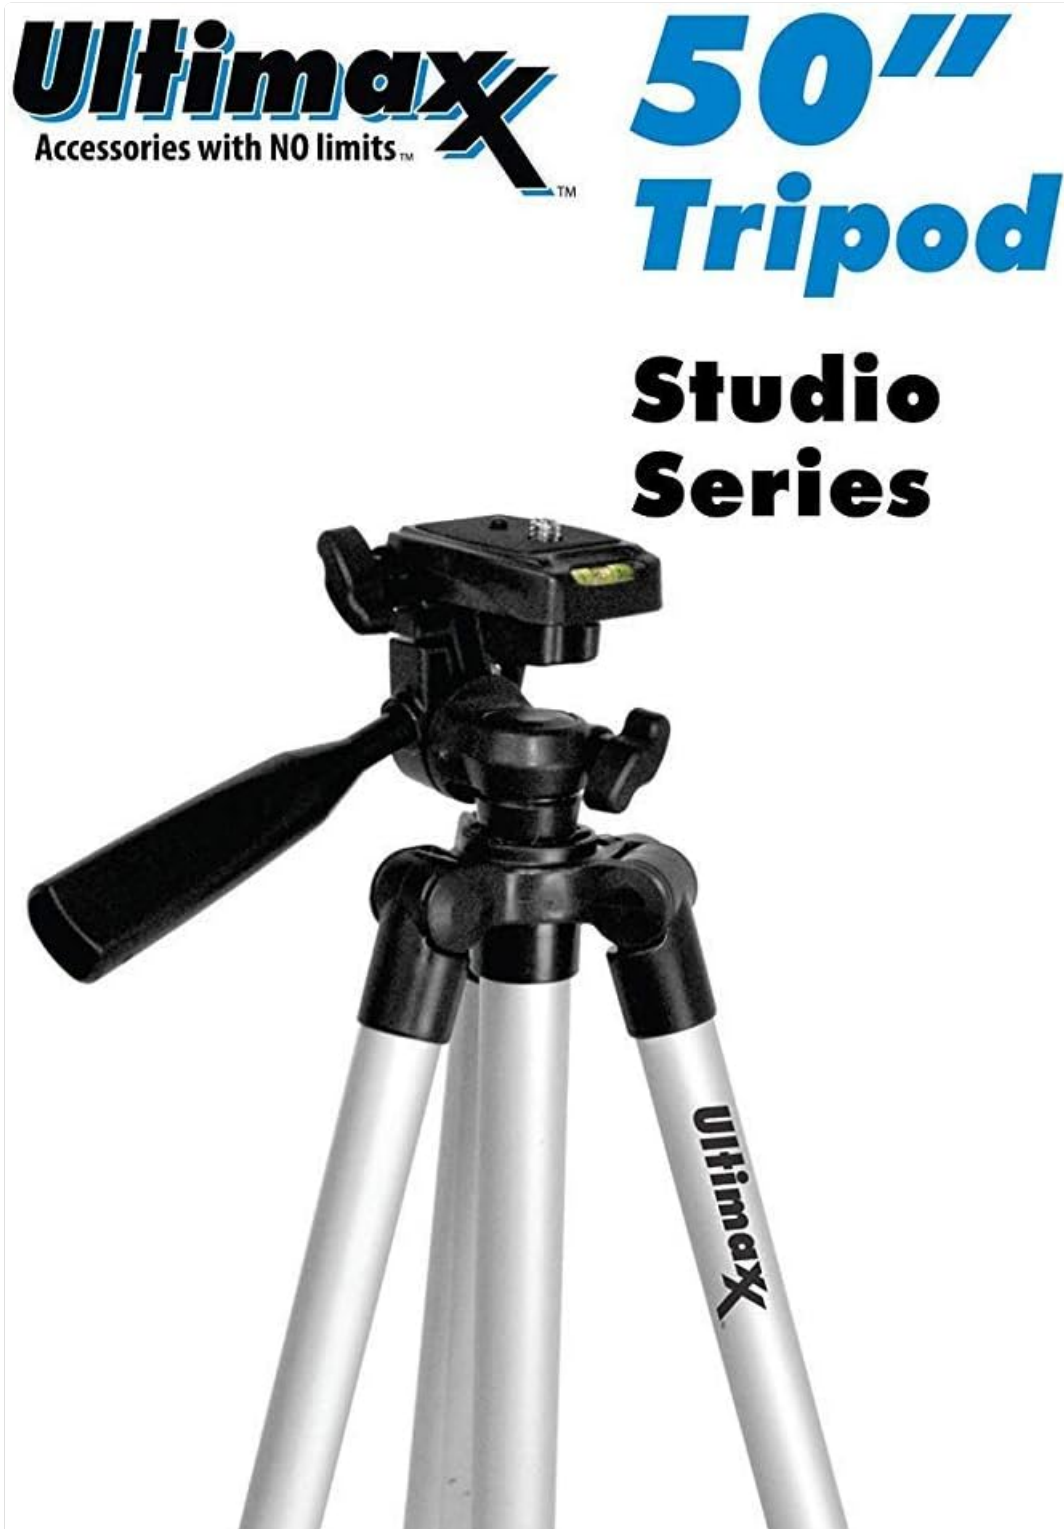




Figure 5.2: The Ultimaxx tripod set up, demonstrating its stable structure for capturing images.

6. MAINTENANCE

Proper maintenance will extend the life of your tripod:

- **Cleaning:** Wipe down the tripod with a soft, damp cloth after each use, especially if used outdoors. Avoid abrasive cleaners or solvents.
- **Lubrication:** Do not apply lubricants to the leg locks or pan head mechanisms unless specifically instructed by the manufacturer. This can attract dust and debris.
- **Storage:** Store the tripod in its carrying bag in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically check all screws, knobs, and leg locks to ensure they are tight and functioning correctly.

7. TROUBLESHOOTING

If you encounter any issues with your tripod, refer to the following table:

Problem	Possible Cause	Solution
Tripod is unstable or wobbly.	Leg locks are not fully tightened; uneven surface; legs not fully extended.	Ensure all leg locks are securely fastened. Adjust leg lengths to compensate for uneven ground. Fully extend all leg sections.

Problem	Possible Cause	Solution
Camera/camcorder is not secure on the head.	Quick-release plate not properly attached to device or tripod head.	Ensure the quick-release plate is tightly screwed onto your device. Verify the quick-release plate is fully seated and locked into the tripod head.
Pan or tilt movement is stiff or jerky.	Locking knobs are too tight; dust/debris in mechanism.	Loosen the pan/tilt locking knobs slightly. Clean the head area with a soft, dry cloth. Do not force movement.
Center pole does not extend/retract smoothly.	Locking knob is too tight; debris.	Ensure the center pole locking knob is loosened. Check for any obstructions or debris.

8. SPECIFICATIONS

Attribute	Detail
Brand	Ultimaxx
Model Name	TR50
Item Model Number	704660949173
Material	Aluminum
Colour	Black
Compatible Devices	Cameras, Camcorders
Special Feature	Portable
Item Weight	0.45 Kilograms (approx. 0.99 lbs)
Weight Limit	6.6 Pounds (approx. 3 kg)
Maximum Height	50 Inches (approx. 127 cm)
Folded Height	15 Inches (approx. 38 cm)
Tripod Head Type	Pan Heads (3-Way)

9. WARRANTY AND SUPPORT

Ultimaxx products are manufactured to high-quality standards. While specific warranty details are not provided in this

manual, please refer to the product packaging or the official Ultimaxx website for the most current warranty information. For technical support, troubleshooting assistance, or inquiries regarding your Ultimaxx Lightweight Portable Camera Tripod, please visit the Ultimaxx store on Amazon or their official website for contact information.

[Visit the Ultimaxx Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question