

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [BurnerAlert](#) /
- › [BurnerAlert Stove Reminder Disc \(5 Pack, White\) User Manual](#)

BurnerAlert Stove Reminder Disc

BurnerAlert Stove Reminder Disc User Manual

Model: Stove Reminder Disc (5 Pack, White)



1. INTRODUCTION

The BurnerAlert Stove Reminder Disc is a safety device designed to provide audio and visual alerts when a stove burner is active. This product helps remind users that a gas or electric stove burner has been turned ON, continuing to alert until the knob is returned to the OFF position. This manual provides instructions for installation, operation, and maintenance of your BurnerAlert discs.



Image 1.1: BurnerAlert Stove Reminder Discs installed on stove knobs, with the product packaging shown on the right. The discs are white and blend with the stove's appearance.

2. PACKAGE CONTENTS

Your BurnerAlert package includes:

- 5 BurnerAlert Discs (White)





Image 2.1: The front of the BurnerAlert Stove Reminder packaging, indicating a 5-pack of white discs and compatibility with gas or electric stoves.

3. COMPATIBILITY REQUIREMENTS

The BurnerAlert Stove Reminder Disc is designed for specific stove knob configurations. Please review the following compatibility guidelines before installation:

- **Knob Orientation:** This model works on stoves with **vertical knob orientation** (knobs that turn on an axis perpendicular to the stove surface) or any angle between 45 and 90 degrees.
- **Knob Design:** It will work on stove knobs **without rims**.
- **Incompatible Configurations:**
 - Will **NOT** work on cooktops where the knob pushes down.
 - Will **NOT** work on cooktops with **horizontal knob orientation**.
 - Will **NOT** work on stove knobs with **rims** or if your knobs are recessed.

THIS BURNER ALERT MODEL WORKS ON THESE STOVE TYPES:

YES

NO

VERTICAL



HORIZONTAL



NO RIM



Image 3.1: A visual guide illustrating stove types compatible ('YES' for vertical knob orientation and no rim) and incompatible ('NO' for horizontal knob orientation or knobs with rims) with the BurnerAlert device.

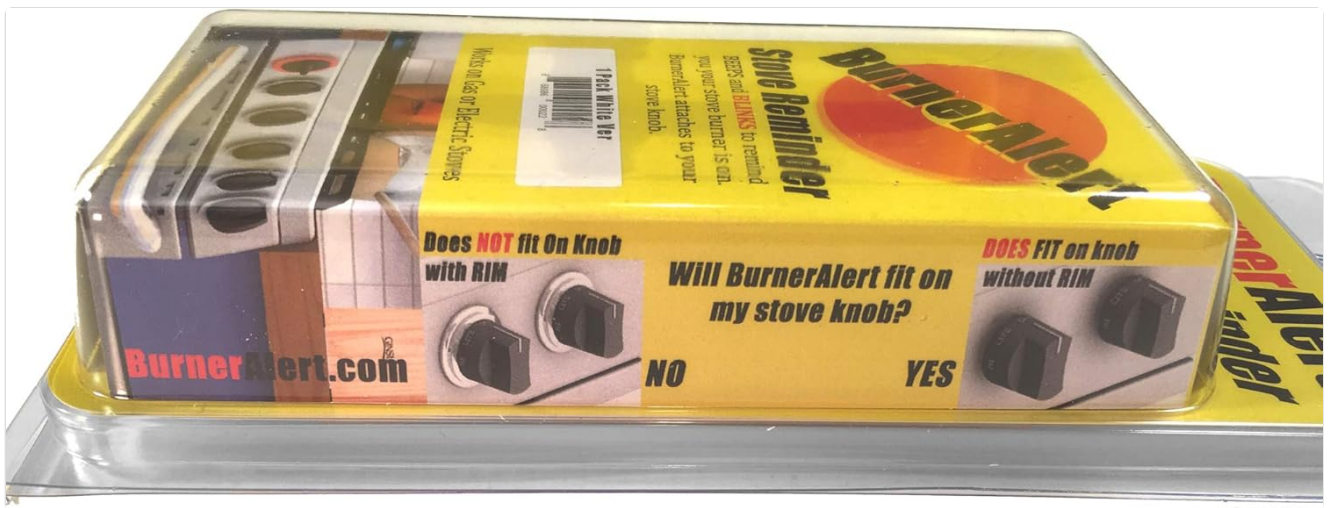


Image 3.2: Side view of the BurnerAlert packaging, providing a visual comparison of stove knobs with and without rims to clarify compatibility.

4. SETUP AND INSTALLATION

Installation of the BurnerAlert Disc requires no tools and is designed to be straightforward.

1. Ensure your stove is turned OFF and cool to the touch.
2. Carefully remove the stove knob from its post.
3. Peel the adhesive backing from the BurnerAlert Disc.
4. Align the center hole of the BurnerAlert Disc with the stove knob post.
5. Press the BurnerAlert Disc firmly onto the stove surface around the knob post. Ensure it is securely attached.
6. Re-attach the stove knob onto its post, ensuring it sits flush against the BurnerAlert Disc.
7. Repeat for all desired stove knobs.

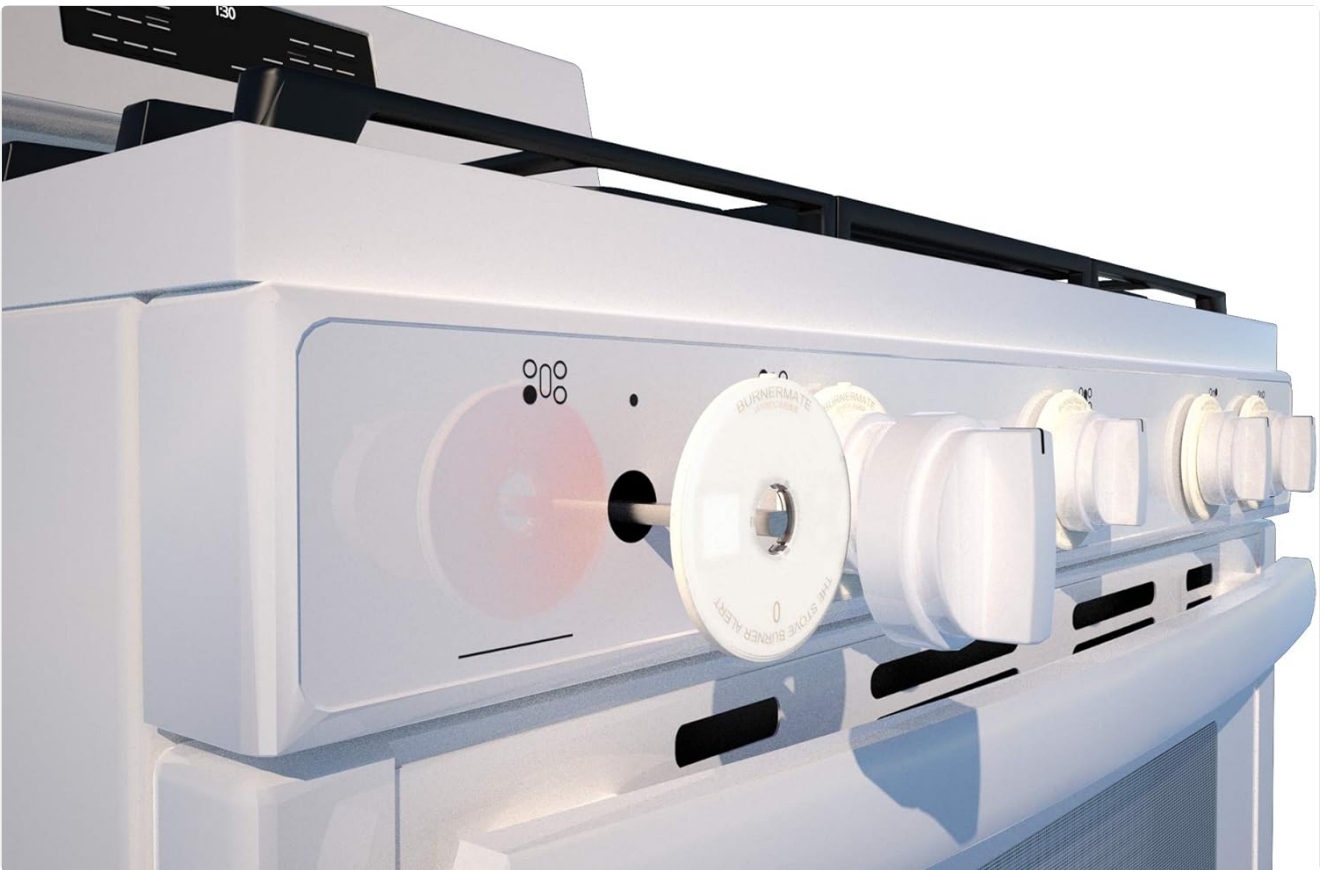


Image 4.1: An exploded view diagram showing how the BurnerAlert disc is placed onto the stove surface around the knob post before the knob is re-attached.

5. OPERATING INSTRUCTIONS

The BurnerAlert Disc provides both audio and visual alerts to indicate an active burner.

- **Activation:** When a stove knob is turned to an 'ON' position, the BurnerAlert Disc will immediately begin emitting a series of beeps and flashing lights.
- **Alert Sequence:** The alerts follow a pre-programmed sequence:
 - Initial beeps and flashes upon activation.
 - Subsequent beeping intervals occur at 3 minutes, 9 minutes, 15 minutes, and then every 15 minutes thereafter.
 - The blinking light alert occurs every 7.5 minutes.
- **Deactivation:** The audio and visual alerts will continue until the stove knob is turned back to the 'OFF' position.

6. FEATURES

In addition to local alerts, the BurnerAlert system offers enhanced monitoring capabilities:

- **Amazon Alexa Integration:** BurnerAlert can be monitored by Amazon Alexa. This feature allows Alexa to send text messages, emails, or make calls to remind you if a burner has been left 'ON'.

7. MAINTENANCE

The BurnerAlert Disc is powered by a Lithium battery, which is included and pre-installed.

- **Battery Life:** The average battery life is approximately 1.5 years.
- **Battery Replacement:** When the battery is depleted, the unit will cease to function. Replace the entire BurnerAlert Disc as the battery is not user-replaceable.

8. TROUBLESHOOTING

If your BurnerAlert Disc is not functioning as expected, consider the following:

- **No Alert When Burner is ON:**
 - Verify correct installation. Ensure the disc is flush against the stove surface and the knob is properly seated.
 - Check compatibility: Confirm your stove knobs meet the vertical orientation and no-rim requirements (refer to Section 3).
 - The battery may be depleted. The average battery life is 1.5 years. If the unit is older than this, replacement may be necessary.
- **Constant Beeping/Flashing When Burner is OFF:**
 - Ensure the stove knob is fully in the 'OFF' position.
 - Re-check installation to ensure the disc is not obstructed or misaligned, which could interfere with its sensor.
 - If the issue persists, the unit may be faulty. Contact customer support for assistance.

9. SPECIFICATIONS

Manufacturer	BurnerAlert LLC
Color	White
Item Package Quantity	5
Thickness	4 Millimeters
Voltage	3 Volts
Sound Level	81 Decibels
Assembled Diameter	66 Millimeters
Battery Type	Lithium
Average Battery Life	1.5 years

10. SUPPORT

For further assistance, technical support, or warranty inquiries, please contact BurnerAlert LLC directly. Refer to the product packaging or the official BurnerAlert website for current contact information.



