

NEC VK26TX-G

NEC VersaPro VK26TX-G Laptop User Manual

Your guide to setting up, operating, and maintaining your NEC VersaPro VK26TX-G laptop.

1. SETUP AND FIRST USE

This section guides you through the initial setup of your NEC VersaPro VK26TX-G laptop.

1.1 Unboxing and Inspection

Carefully remove the laptop and all accessories from the packaging. Verify that all components are present and undamaged. The standard package includes the laptop, AC adapter, and power cord.

1.2 Connecting Power

1. Connect the AC adapter to the power input port on the side of the laptop.
2. Plug the power cord into the AC adapter, then into a wall outlet.
3. Allow the battery to charge for at least 30 minutes before initial use, or until the battery indicator shows a sufficient charge.



Image 1.1: The NEC VersaPro VK26TX-G laptop in an open position, displaying the Windows 10 desktop environment. This view shows the screen, keyboard, and touchpad, ready for initial setup.

1.3 Initial Boot and Windows Setup

Press the power button located above the keyboard to turn on the laptop. Follow the on-screen instructions to complete the Windows 10 Pro setup process. This typically involves selecting your region, language, creating a user account, and connecting to a Wi-Fi network.

1.4 Connecting Peripherals

Your laptop features various ports for connecting external devices:

- **USB Ports:** For mice, keyboards, external storage, and other USB devices.
- **VGA Port:** For connecting to external monitors or projectors.
- **LAN Port:** For wired network connections.
- **Audio Jacks:** For headphones or external speakers.



Image 1.2: A view of the left side of the laptop, highlighting various connectivity ports such as USB, VGA, and the LAN port, essential for connecting external devices and networks.



Image 2.1: A top-down view of the laptop's keyboard and touchpad, illustrating the layout and input areas for user interaction.

2.3 Connecting to Wi-Fi

1. Click the Wi-Fi icon in the system tray (bottom-right corner of the screen).
2. Select your desired network from the list.
3. Enter the network security key (password) if prompted, then click 'Connect'.

2.4 Using the DVD-ROM Drive

The integrated DVD-ROM drive allows you to read optical discs. To open the tray, press the eject button located on the drive itself. Insert a disc, then gently push the tray back in. Windows will typically detect the disc automatically.

2.5 Windows 10 Pro and WPS Office

Your laptop comes pre-installed with **Windows 10 Pro**, offering advanced features for productivity and security. It also includes **WPS Office**, a suite of applications compatible with Microsoft Office formats, for document creation, spreadsheets, and presentations.

3. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and optimal performance of your laptop.

3.1 Cleaning Instructions

- **Screen:** Use a soft, lint-free cloth specifically designed for electronics. Dampen it slightly with water or a screen cleaner. Do not spray liquid directly onto the screen.

- **Keyboard and Chassis:** Use a soft cloth, slightly dampened with water or a mild cleaning solution. For dust in crevices, use compressed air.
- Always power off and unplug the laptop before cleaning.

3.2 Battery Care

- Avoid extreme temperatures.
- For optimal battery life, avoid constantly keeping the laptop plugged in at 100% charge. Occasionally allow the battery to discharge to around 20-30% before recharging.
- If storing the laptop for an extended period, ensure the battery is charged to about 50-60%.

3.3 Software Updates

Regularly update your Windows operating system and device drivers to ensure security, stability, and performance. Windows Update can be accessed via Settings > Update & Security > Windows Update.

3.4 Data Backup

It is highly recommended to regularly back up your important data to an external drive or cloud storage to prevent data loss.

4. TROUBLESHOOTING COMMON ISSUES

This section provides solutions for common problems you might encounter.

4.1 Laptop Does Not Power On

- Ensure the AC adapter is securely connected to both the laptop and a working power outlet.
- Verify the power outlet is functional by plugging in another device.
- If the battery is completely drained, allow it to charge for a few minutes before attempting to power on.

4.2 No Display on Screen

- Check if the laptop is powered on.
- Adjust the screen brightness using the function keys (e.g., Fn + F2/F3).
- If an external monitor is connected, try disconnecting it or switching display modes (e.g., Fn + F7).

4.3 Wi-Fi Connection Problems

- Ensure Wi-Fi is enabled (check the Wi-Fi icon in the system tray).
- Restart your router and modem.
- Forget the network and reconnect, re-entering the password.
- Run the Windows Network Troubleshooter (Settings > Network & Internet > Status > Network troubleshooter).

4.4 Slow Performance

- Close unnecessary applications running in the background.
- Check for and install any pending Windows updates.
- Run a disk cleanup and defragmentation (for HDD models).
- Scan for malware or viruses.

5. SPECIFICATIONS

Detailed technical specifications for the NEC VersaPro VK26TX-G laptop.

Feature	Specification
Brand	NEC
Model Name	VersaPro VK26TX G
Form Factor	Laptop
Screen Size	15.6 inches
Resolution	1366 x 768 pixels (Full WXGA)
CPU Brand	Intel
CPU Type	Core i5
CPU Speed	2.6 GHz
RAM Capacity	4 GB
HDD Capacity	250 GB
Hard Disk Type	HDD
Communication	Wi-Fi
Operating System	Windows 10 Pro
Optical Drive	DVD-ROM

6. WARRANTY AND SUPPORT

Information regarding your product's warranty and available support services.

6.1 Product Warranty


This product typically includes a **90-day warranty** from the date of purchase. This warranty covers manufacturing defects and hardware malfunctions under normal use. Please refer to your purchase documentation for specific terms and conditions. Note that battery remaining capacity is generally not covered under warranty.

当店で買うべき理由


理由その1

基本使用 OS は MAR ライセンスによる
Windows OS です
(※純正リカバリ商品等は除く)

安心の正規 Windows OS 取り扱い店です。
 中古パソコン専用ライセンス MAR プログラム採用 (一部商品を除く)



理由その2

パソコン商品ご購入で
 Microsoft Officeと互換性のある  **WPS Office**
WPS Office プレゼント！

マイクロソフトオフィスとも互換性のある、キングソフトオフィスを、
 パソコン商品ご購入時にセットした上でお送りしております。
 商品に同梱されたシリアルを入力してのご利用となります。
 商品によっては、キングソフトオフィスをインストールした上で、
 お送りいたします。

※WPS Officeの詳しいご使用方法につきましては、お手数ですが
 直接メーカーサイトにお問い合わせくださいませ。

Image 6.1: An informational graphic highlighting the 90-day warranty period and the inclusion of a legitimate Windows OS license.

6.2 Customer Support

A dedicated support system is in place to assist you with any issues or inquiries. If you encounter a problem with the product, professional staff are available to help diagnose the situation, investigate the cause, and propose appropriate solutions, including exchanges or repairs if necessary.

For inquiries regarding the usage of software or applications, or for specific malfunctions, please contact the manufacturer's official support channels directly.

理由その3

中古パソコンの保証期間は安心の
90日保証 ※原則としてPC機器の分解等は保証の対象外となります。

(その他 PC を除く商品は初期不良 7 日間を保証)

中古品に抵抗のあるお客様も安心！
 1年保証 (※別途追加料金あり) もお選びいただけます！
※バッテリー残量は保証対象外となります。



理由その4

丁寧な **クリーニング** と
梱包 には自信があります !!

当店のこだわりは熟練スタッフによる
 【徹底したクリーニング技術】です！
 お客様からも「中古品に見えない！」とお喜びの声をいただいております。
 また、環境を配慮し、過剰梱包にならぬよう細心の注意を払っております。

**※丁寧なクリーニングを行うため、出荷までに最短でも3営業日
 いただいております。予めご了承くださいませ。**



理由その5

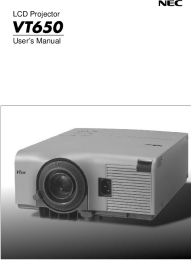





安心の **サポート体制**

万が一お届けした商品に不具合を確認された場合は、専門のスタッフが
 対応いたします。まずは状況をお伺いし、原因を探るお手伝いをさせて
 いただきます。その後、状況や原因に合わせて、交換やメンテナンスを
 ご提案させていただきます。

**※ソフトやアプリの使用方法・不具合に関するお問い合わせの場合は、
 各種メーカーの窓口をご案内させていただくことがございます。**

Image 6.2: An informational graphic outlining the comprehensive customer support system, including professional staff assistance for product issues.

Related Documents - VK26TX-G

	<p>NEC VT650 LCD Projector User's Manual</p> <p>User's manual for the NEC VT650 LCD Projector, covering setup, operation, maintenance, troubleshooting, and specifications. Includes warranty information and product registration details.</p>
	<p>NEC VT45 LCD Projector User's Manual</p> <p>A comprehensive user's manual for the NEC VT45 LCD Projector, detailing setup, operation, maintenance, troubleshooting, and specifications. Includes warranty information and product registration details.</p>
	<p>Express5800/T110k</p> <p>NEC Express5800/T110k CPU / OS OS</p>
	<p>NEC RU-M121 Remote Control Replacement Guide</p> <p>A comprehensive guide detailing the functions and button mappings of the NEC RU-M121 replacement remote control, comparing original and substitute button functionalities for various operations.</p>
	<p>NEC RD-448E Remote Control Functions Guide</p> <p>Detailed comparison of original NEC RD-448E remote control functions versus replacement ('Rechange') model functions, including button mapping and usage.</p>
	<p>NEC PF28WT100 Colour Television Instruction Manual</p> <p>Comprehensive instruction manual for the NEC PF28WT100 Colour Television, covering setup, operation, features, troubleshooting, and specifications. Learn how to connect external equipment, navigate menus, use teletext, and resolve common issues.</p>