

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Candy](#) /

› [Candy CVE660MW_E Freestanding Cooker User Manual](#)

Candy CVE660MW_E

Candy CVE660MW_E Freestanding Cooker User Manual

Model: CVE660MW_E | Brand: Candy

1. SAFETY INFORMATION

Please read this manual carefully before installing or using your appliance. Keep it for future reference. This appliance is intended for domestic use only.

- **Electrical Safety:** Ensure the appliance is correctly earthed and connected to a suitable power supply. Do not use adapters or extension cords.
- **Children and Vulnerable Persons:** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- **Hot Surfaces:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
- **Cleaning and Maintenance:** Cleaning and user maintenance shall not be made by children without supervision.
- **Installation:** Installation must be carried out by a qualified technician in accordance with local regulations.
- **Ventilation:** Ensure adequate ventilation around the appliance.
- **Flammable Materials:** Do not store flammable materials in or near the appliance.

2. PRODUCT OVERVIEW

The Candy CVE660MW_E is a freestanding cooker combining a 4-zone ceramic hob and a 60-liter electric oven. It features intuitive mechanical controls for cooking functions and a digital display for the clock and timer.

2.1 Main Components

- **Ceramic Hob:** Features four cooking zones for various pot and pan sizes.
- **Electric Oven:** 60-liter capacity for baking, roasting, and grilling.
- **Control Panel:** Mechanical knobs for hob and oven functions, plus a digital display for time and timer settings.
- **Oven Door:** Equipped with a modern rectangular metallic handle.
- **Adjustable Feet/Wheels:** For easy positioning and height adjustment.

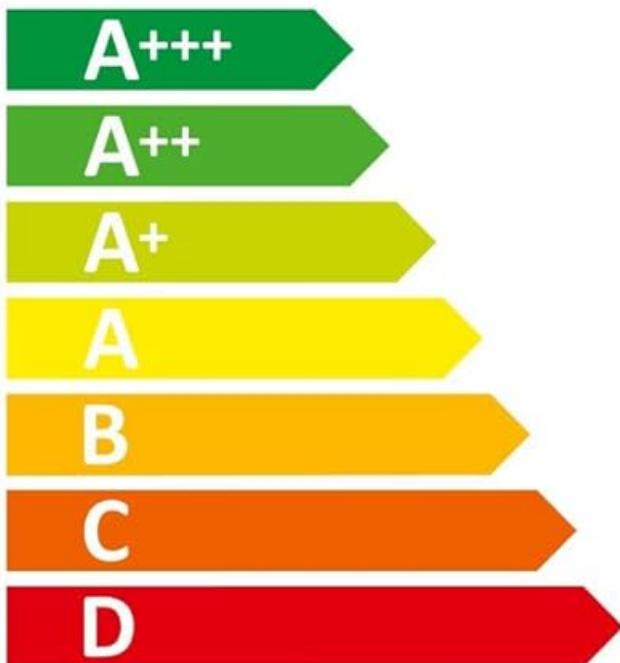


Figure 2.1: Front view of the Candy CVE660MW_E freestanding cooker, showing the ceramic hob, control panel, and oven door.



Candy

CVE660MW/E



* цикъл · cyklus · portion · zyklus · πρόγραμμα · ciclo · tsükkeli · ohjelma · ciklus · ciklas · cikls · ciklu · cyclus · cykl · ciclu · program · cykel

65/2014

Figure 2.2: Angled front view of the Candy CVE660MW_E freestanding cooker, highlighting its compact design.

3. WHAT'S IN THE BOX

Upon unpacking, ensure all items are present and undamaged. If any items are missing or damaged, contact your retailer.

- Candy CVE660MW_E Freestanding Cooker Unit (with integrated 4-zone ceramic hob and 60L electric oven)
- User Manual
- Oven Rack(s)
- Baking Tray
- Adjustable Feet/Wheels (may be pre-installed or require attachment)

4. INSTALLATION (SETUP)

This freestanding cooker is designed for easy installation. However, for electrical connections, it is recommended to consult a qualified electrician to ensure compliance with local safety standards.

4.1 Positioning the Cooker

- The cooker requires a minimum space of 60cm in width.
- Utilize the integrated wheels to easily move the cooker into its desired position.
- Adjust the height of the cooker using the adjustable feet to align it with your kitchen countertop. Ensure the cooker is level to prevent spills and ensure even cooking.
- Ensure there is adequate ventilation around the appliance, as specified in the full installation guide (not included in this summary).

4.2 Electrical Connection

- The cooker requires a dedicated power outlet.
- Verify that the voltage and frequency indicated on the appliance's rating plate match your household's power supply.
- The appliance must be correctly earthed.
- Do not use multi-sockets, adapters, or extension leads.

5. OPERATING THE CERAMIC HOB

The ceramic hob features four cooking zones controlled by mechanical knobs on the control panel.

5.1 Using the Hob Zones

1. Place a suitable pan on the desired cooking zone. Ensure the pan base covers the entire zone for optimal efficiency.
2. Turn the corresponding mechanical knob clockwise to select the desired heat level, from minimum to maximum.
3. The hob surface will heat up, and an indicator light (if present) may illuminate.
4. After cooking, turn the knob counter-clockwise to the '0' position to switch off the zone.
5. **Caution:** The hob surface remains hot after use. Do not touch until it has cooled down.

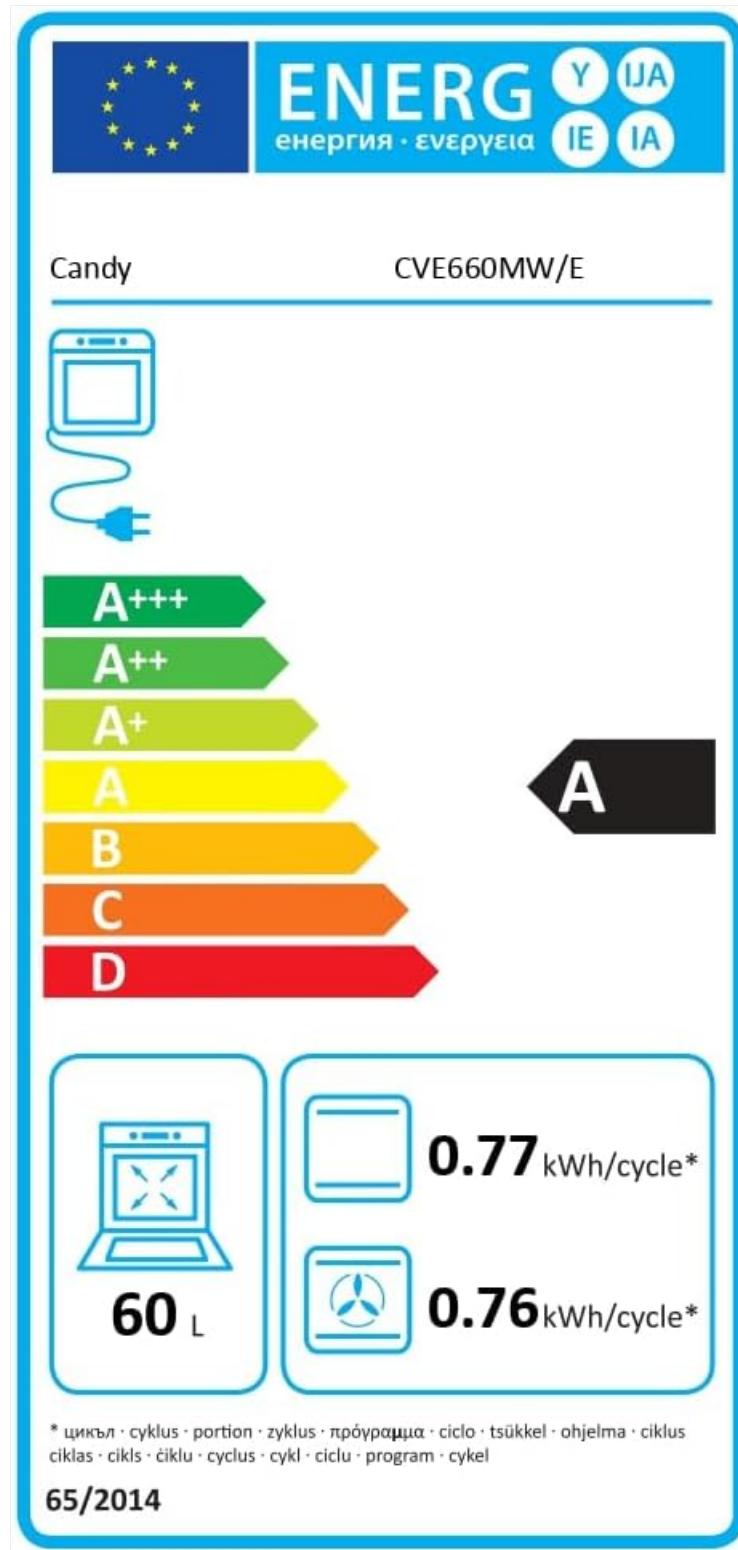


Figure 5.1: Close-up view of the ceramic hob and its mechanical control knobs.

6. OPERATING THE ELECTRIC OVEN

The 60-liter electric oven offers various cooking functions, controlled by mechanical knobs and a digital display for timing.

6.1 Setting Oven Functions and Temperature

1. Turn the function selector knob to choose the desired cooking mode (e.g., conventional, grill, fan-assisted).
2. Turn the temperature selector knob to set the desired oven temperature.
3. The oven will begin to heat up. An indicator light will typically turn off once the set temperature is reached.

6.2 Using the Digital Display (Clock and Timer)

- The digital display allows you to set the current time and use the timer function for cooking.
- Refer to the detailed instructions in the full manual for specific steps on setting the clock and programming the timer, as controls may vary.

Productkaart

Gedelegeerde Verordening (EU) 65/2014

Naam of handelsmerk leverancier	Candy
Typeaanduiding	CVE660MW/E
Aantal ovenruimten	1
Ruimte 1	
Energie-efficiëntie-index	95,0
Energie-efficiëntieklaasse	A
Energieverbruik per cyclus (conventionele modus)	0,77 kWh
Energieverbruik per cyclus (heteluchtmodus)	0,76 kWh
Warmtebron	Elektrisch
Volume	60 liter

Model in de EU in de handel gebracht van 26/06/2019



EPREL-registratienummer: 30073

<https://eprel.ec.europa.eu/qr/30073>

Leverancier: CANDY HOOVER GROUP SRL (Fabrikant)

Website: <https://corporate.haier-europe.com/>

Dienst voor klantenservice:

Naam: Candy Hoover Group contact

Website:

E-mail: eprel_info@haier-europe.com

Telefoon: +3903920861

Adres:

Via Comolli 16
20861 Brugherio
Italië

Figure 6.1: Oven control panel, showing mechanical knobs for function and temperature, and the digital display.

Fiche de produit

Règlement délégué (UE) n° 65/2014

Nom du fournisseur ou marque commerciale	Candy
Référence du modèle	CVE660MW/E
Nombre de cavités	1
Cavité 1	
Indice d'efficacité énergétique	95,0
Classe d'efficacité énergétique	A
Consommation d'énergie par cycle (mode conventionnel)	0,77 kWh
Consommation d'énergie par cycle (mode chaleur tournante)	0,76 kWh
Source de chaleur	Électricité
Volume	60 Litres

Modèle mis sur le marché de l'Union du 26/06/2019



Numéro d'enregistrement EPREL: 30073

<https://eprel.ec.europa.eu/qr/30073>

Fournisseur: CANDY HOOVER GROUP SRL (Fabricant)

Site web: <https://corporate.haier-europe.com/>

Service après-vente:

Nom: Candy Hoover Group contact

Site web:

Courriel: eprel_info@haier-europe.com

Téléphone: +3903920861

Adresse:

Via Comolli 16
20861 Brugherio
Italie

Figure 6.2: View inside the 60-liter electric oven, showing the removable racks.

7. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your cooker. Always ensure the appliance is switched off and cooled down before cleaning.

7.1 Cleaning the Ceramic Hob

- For light spills, wipe with a damp cloth and mild detergent.
- For stubborn stains or burnt-on food, use a specialized ceramic hob cleaner and a scraper designed for ceramic surfaces.
- Avoid abrasive cleaners, scouring pads, or harsh chemicals that can scratch the surface.

7.2 Cleaning the Electric Oven

- Remove oven racks and accessories before cleaning. These can be washed in warm soapy water.
- Wipe the interior of the oven with a damp cloth and a mild oven cleaner (ensure it's safe for your oven type).
- For heavy grease and burnt-on residue, follow the instructions on your chosen oven cleaner product.
- Clean the oven door, including the glass, with a non-abrasive cleaner.

8. TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	No power supply; fuse tripped; door not closed properly (oven).	Check power connection and circuit breaker. Ensure oven door is fully closed.
Hob zone not heating.	Incorrect heat setting; faulty element.	Ensure knob is set to a heat level. If problem persists, contact service.
Oven not heating correctly.	Incorrect temperature/function setting; oven door not sealed; faulty element.	Verify settings. Check door seal. If problem persists, contact service.
Digital display not working.	Power interruption; internal fault.	Check power. If still not working, contact service.

9. SPECIFICATIONS

Feature	Detail
Brand	Candy
Model Name	CVE660MW_E
Product Model Number	33001487

Feature	Detail
Form Factor	Freestanding
Product Dimensions (H x W x D)	86 x 60 x 61 cm
Product Weight	42.6 kg
Hob Type	Ceramic, 4 Zones
Oven Type	Electric
Oven Capacity	60 Liters
Control Type	Mechanical Knobs (Hob & Oven), Digital Display (Clock & Timer)
Material	Stainless Steel
Energy Efficiency Class	A
Energy Consumption (Conventional)	0.77 kWh/cycle
Energy Consumption (Fan-assisted)	0.76 kWh/cycle

Figure 9.1: EU Energy Label for the Candy CVE660MW_E cooker, indicating its energy efficiency class and consumption.

Figure 9.2: Product Fiche providing detailed technical specifications. For more information, visit the [EPR EL database \(QR code 30073\)](#).

10. WARRANTY AND SUPPORT

For warranty information, technical assistance, or to report an issue, please contact Candy customer support.

- **Manufacturer:** Candy Hoover Group SRL
- **EPR EL Registration Number:** 30073
- **EPR EL Database Link:** <https://eprel.ec.europa.eu/qr/30073>
- **Corporate Website:** <https://corporate.haier-europe.com/>
- **Customer Service Email:** eprel_info@haier-europe.com
- **Customer Service Phone:** +3903920861
- **Address:** Via Comolli 16, 20861 Brugherio, Italy

Please retain your proof of purchase for any warranty claims.

