

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KINGMAS](#) /

› [KINGMAS Nail Cuticle Pusher Cutter Set Instruction Manual](#)

KINGMAS B07PPGGPCL

KINGMAS Nail Cuticle Pusher Cutter Set Instruction Manual

Model: B07PPGGPCL

[Introduction](#) [Safety Information](#) [Package Contents](#) [Setup](#) [Operating Instructions](#) [Maintenance](#)
[Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your KINGMAS Nail Cuticle Pusher Cutter Set. This set includes a triangle cuticle peeler scraper and a double-ended cuticle pusher cutter with a spoon nail cleaner, designed for manicure and pedicure tasks. Please read this manual thoroughly before first use and retain it for future reference.

2. SAFETY INFORMATION

- Keep out of reach of children.
- The tools have sharp edges; handle with care to prevent injury.
- Use only for their intended purpose: nail and cuticle care.
- Disinfect tools before and after each use to maintain hygiene and prevent infections.
- Do not use on inflamed, infected, or broken skin. Consult a medical professional if you have any concerns.
- Store tools in the provided metal box to protect them and prevent accidental injury.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1x Triangle Cuticle Peeler Scraper
- 1x Double-Ended Cuticle Pusher Cutter (with spoon nail cleaner)
- 1x Metal Storage Box



Image: The KINGMAS Nail Cuticle Cutter Set, showing the triangle peeler, double-ended pusher, and spoon cleaner.



Image: The KINGMAS tools neatly stored inside their protective metal box.

4. SETUP

Before first use, and before each subsequent use, ensure the tools are clean and disinfected.

1. Remove the tools from the metal storage box.
2. Clean the tools with soap and water, then sterilize them using an appropriate disinfectant or alcohol wipe.
3. Ensure your hands and nails are clean and dry before beginning any nail care procedure.

5. OPERATING INSTRUCTIONS

5.1 Using the Triangle Cuticle Peeler Scraper

This tool is specifically designed for efficient removal of gel nail polish and dead skin around the nail plate.

1. Soak your nails in warm water or a gel polish remover solution as per your gel polish product instructions.
2. Hold the triangle peeler scraper with a firm, non-slip grip.
3. Gently place the flat edge of the triangle head against the nail surface, near the cuticle or the edge of the gel polish.
4. Carefully push and scrape the softened gel polish or dead cuticle skin away from the nail plate. Use light pressure to avoid damaging the natural nail.
5. Repeat as necessary until the desired amount of gel polish or dead skin is removed.



Image: A hand demonstrating the use of the triangle-shaped tool to gently scrape off gel nail polish from the nail surface.

5.2 Using the Double-Ended Cuticle Pusher Cutter and Spoon Nail Cleaner

This versatile tool features two distinct ends for comprehensive nail care.

1. Flat Head (Cuticle Pusher):

- Soften cuticles by soaking hands in warm water or applying a cuticle softener.
- Gently push back the cuticles around the nail plate using the flat, rounded end. Push towards the nail bed.

- This end can also be used to push off residual gel polish after initial removal.

2. Sharp Head / Spoon Nail Cleaner:

- Carefully use the spoon-shaped end to clean dirt and debris from underneath the nail edge.
- For false nail removal, gently lift the edge of the false nail with the sharp head, applying minimal pressure.



Image: Close-up showing the two ends of the double-ended tool in use: the flat head pushing back cuticles and the sharp head cleaning under the nail.

6. MAINTENANCE

Proper maintenance ensures the longevity and hygiene of your tools.

- **Cleaning:** After each use, wash the tools with warm soapy water to remove any nail debris or product residue.
- **Disinfection:** Sterilize the tools with rubbing alcohol (70% isopropyl alcohol) or a suitable disinfectant. Allow them to air dry completely.
- **Storage:** Always store the tools in the provided metal box to protect them from damage and keep them hygienic.

- **Inspection:** Periodically inspect the tools for any signs of damage or dullness. Replace if necessary.

7. TROUBLESHOOTING

Problem	Solution
Tools feel dull or ineffective.	Ensure nails/cuticles are properly softened before use. If tools are genuinely dull, consider replacement.
Difficulty removing gel polish.	Ensure adequate soaking time with gel polish remover. Apply gentle, consistent pressure. Do not force removal.
Accidental nicks or cuts.	Always use tools with light pressure and a steady hand. Ensure proper lighting. Disinfect any cuts immediately.
Tools are rusting.	Ensure tools are thoroughly dried after cleaning and stored in a dry environment. Stainless steel is rust-resistant but not rust-proof if exposed to moisture for prolonged periods.

8. SPECIFICATIONS

- **Product Name:** KINGMAS Nail Cuticle Pusher Cutter Set
- **Model Number:** B07PPGGPCL
- **Material:** Stainless Steel
- **Package Dimensions:** 6.97 x 1.5 x 0.75 inches
- **Item Weight:** 2.47 ounces
- **Manufacturer:** KINGMAS

9. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your KINGMAS Nail Cuticle Pusher Cutter Set, please refer to your purchase documentation or contact the retailer where the product was purchased. Please retain your proof of purchase for any warranty claims.