

[Manuals.plus](#) /

› [LeuchtenDirekt](#) /

› User Manual for Leuchten Ditekt 12042-55 Lola Lotta

LeuchtenDirekt 12042-55 Lola Lotta

User Manual for Leuchten Ditekt 12042-55 Lola Lotta

Model: 12042-55 Lola Lotta | Brand: LeuchtenDirekt

PRODUCT OVERVIEW

This manual provides essential information for the safe and efficient use of your Leuchten Ditekt 12042-55 Lola Lotta lighting fixture. Please read these instructions carefully before installation and operation, and retain them for future reference.



Figure 1: Leuchten Ditekt 12042-55 Lola Lotta lighting fixture. This image shows the two-light bar fixture with frosted spherical shades, mounted on a circular base. The finish appears to be brushed metal.

The Leuchten Ditekt 12042-55 Lola Lotta is an LED lighting fixture featuring color change and color temperature control, operable via an infrared remote control. It includes two non-replaceable 3.50 W LED boards, offering both warm white and cool white light. The product has a protection class of IP20 and a lifespan of 25,000 hours.

SAFETY INSTRUCTIONS

- Always disconnect power before installation, maintenance, or cleaning.
- Installation should be performed by a qualified electrician in accordance with local wiring regulations.
- Do not expose the fixture to moisture or extreme temperatures. This product has an IP20 rating, meaning it is protected against solid objects larger than 12.5mm, but not against water.
- Do not attempt to replace the integrated LED boards. They are not designed to be user-replaceable.
- Ensure the mounting surface can support the weight of the fixture (0.84 kg).
- Keep the infrared remote control away from water and direct sunlight.

SETUP AND INSTALLATION

1. **Unpack:** Carefully remove all components from the packaging. Check for any damage.
2. **Prepare Wiring:** Ensure the main power supply to the installation area is switched off at the circuit breaker.
3. **Mounting Bracket:** Attach the mounting bracket to the ceiling or wall using appropriate screws and anchors (not included, typically). Ensure it is securely fastened.
4. **Electrical Connection:** Connect the fixture's wires to the household wiring according to standard electrical codes (Live to Live, Neutral to Neutral, Earth to Earth if applicable). Ensure all connections are secure.
5. **Attach Fixture:** Secure the main body of the lighting fixture to the mounting bracket.
6. **Restore Power:** Once installation is complete and all connections are secure, restore power at the circuit breaker.

OPERATING INSTRUCTIONS

Using the Infrared Remote Control

The Leuchten Ditekt 12042-55 Lola Lotta is controlled via the included infrared remote. Point the remote directly at the fixture for optimal response.

- **Power On/Off:** Press the **ON/OFF** button to switch the light on or off.
- **Brightness Adjustment:** Use the **+** and **-** buttons to increase or decrease the light intensity.
- **Color Temperature Control:** Buttons labeled **Warm White** and **Cool White** allow you to adjust the color temperature.
- **Color Change (RGB):** Specific buttons on the remote will cycle through various RGB colors or activate color-changing modes. Refer to the remote's button layout for exact functions.
- **Memory Function:** The fixture may retain the last setting when switched off and on again.

MAINTENANCE AND CARE

- **Cleaning:** Disconnect power before cleaning. Wipe the fixture with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Bulb Replacement:** The LED boards in this fixture are *not replaceable*. If the LEDs fail, the entire fixture may need to be replaced.
- **Inspection:** Periodically check for loose connections or signs of wear.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power supply; loose wiring; remote control battery dead.	Check circuit breaker; verify wiring connections (consult electrician); replace remote control battery.
Remote control not responding.	Remote battery low/dead; obstruction between remote and fixture; remote out of range.	Replace remote battery; ensure clear line of sight; move closer to the fixture.
Light flickers or dims unexpectedly.	Unstable power supply; faulty internal component.	Consult an electrician to check power supply; if problem persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Model	12042-55 Lola Lotta
Brand	LeuchtenDirekt
Effective Lumen	450.00 lm
Total Wattage	8 W
Bulb Wattage	3.5 W (per LED board)
Light Type	LED
Light Color	Warm White, Cool White (Tunable White)
Features	Color change, color temperature control, infrared remote control
Product Weight	0.84 kg
Protection Class	IP20
Lifespan	25,000 hours
Beam Angle	120°
Bulbs Replaceable	No (integrated LED boards)
Product Dimensions (H x W x D)	200 x 225 x 525 mm

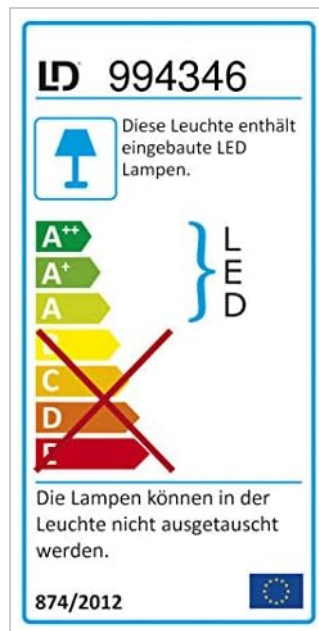


Figure 2: Energy efficiency label. This label indicates that the luminaire contains built-in LED lamps that are not replaceable. It shows the energy class as LED.

DISPOSAL AND RECYCLING

This product contains electronic components and should not be disposed of with household waste. Please follow local regulations for the disposal of electronic waste and lamps.

- **Lamp Recycling:** Information regarding the recycling of lamps can be found through your local waste management services or designated collection points.
- **Disposal of Broken or Damaged Lamps:** In case of breakage, avoid direct contact with broken parts. Dispose of damaged lamps safely according to local hazardous waste guidelines.

WARRANTY AND SUPPORT

For warranty information or technical support, please contact your retailer or the manufacturer, LeuchtenDirekt. Keep your proof of purchase for any warranty claims.

You can visit the official LeuchtenDirekt store on Amazon for more information:[LeuchtenDirekt Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question