

manuals.plus /

- › [Einhell](#) /
- › [Einhell GC-GP 6538 Set/I Garden Pump User Manual](#)

Einhell GC-GP 6538 Set/I

Einhell GC-GP 6538 Set/I Garden Pump User Manual

Model: GC-GP 6538 Set/I | Part No.: 4180286

1. INTRODUCTION

This user manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Einhell GC-GP 6538 Set/I Garden Pump. Please read this manual thoroughly before first use and keep it for future reference.



Figure 1: The Einhell GC-GP 6538 Set/I Garden Pump, including the main pump unit, green garden hose, black suction hose, and spray nozzle.

2. SAFETY INSTRUCTIONS

Always observe the following safety precautions to prevent injury and damage to the product:

- Ensure the power supply matches the specifications on the product label (230 Volts).
- Do not operate the pump with damaged cables or plugs.
- Keep children and unauthorized persons away from the operating area.
- Do not pump flammable, explosive, or corrosive liquids.
- Always disconnect the power plug before performing any maintenance or cleaning.
- Protect the pump from frost.

3. PRODUCT DESCRIPTION AND COMPONENTS

The Einhell GC-GP 6538 Set/I is a robust garden pump designed for various watering tasks. It features a powerful 650W

motor and can deliver up to 3800 liters per hour with a maximum pressure of 3.6 bar.



Figure 2: Side view of the garden pump, highlighting its compact design and integrated carrying handle.

Key Components:

- **Pump Unit:** The main body housing the motor and pump mechanism.
- **Inlet/Outlet Connections:** Threaded ports for connecting hoses.



Figure 3: Detail of the threaded inlet and outlet connections on the pump unit.

- **On/Off Switch:** For controlling pump operation.



Figure 4: The red illuminated power switch for easy visibility.

- **Carrying Handle:** Integrated for easy transport.



Figure 5: The pump is equipped with a sturdy carrying handle for portability.

- **Garden Hose:** Green, for water output.



Figure 6: The included green garden hose, suitable for various watering applications.

- **Suction Hose:** Black, for water intake.



Figure 7: The black suction hose, designed for drawing water into the pump.

- **Spray Nozzle:** Adjustable nozzle for various spray patterns.



Figure 8: The multi-pattern spray nozzle for versatile watering.

4. SETUP

1. **Placement:** Position the pump on a stable, level surface, close to the water source and the area to be watered. Ensure it is protected from direct sunlight and rain.
2. **Connect Suction Hose:** Securely attach the black suction hose to the pump's inlet connection. Ensure all connections are airtight to prevent air intake, which can affect pump performance.
3. **Connect Garden Hose:** Attach the green garden hose to the pump's outlet connection. Connect the spray nozzle or other watering accessories to the other end of the garden hose.
4. **Prime the Pump:** Before first use, or if the pump has run dry, fill the pump housing completely with water through the designated filling opening until water overflows. This is crucial for proper operation.
5. **Power Connection:** Plug the pump into a suitable 230 Volt power outlet.

5. OPERATING INSTRUCTIONS

Once set up, operating the pump is straightforward:

1. Ensure the suction hose is fully submerged in the water source.
2. Turn on the pump using the On/Off switch. The pump will begin to draw water and build pressure.
3. Direct the spray nozzle or watering accessory towards the area to be watered.
4. After use, turn off the pump using the On/Off switch and disconnect it from the power supply.



Figure 9: The garden pump in use, demonstrating its application for watering plants.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your garden pump.

- **Cleaning:** After each use, especially if pumping dirty water, flush the pump with clean water to remove any debris.
- **Filter Check:** Periodically check the suction filter (if equipped) for blockages and clean as necessary.
- **Frost Protection:** During winter months or when temperatures drop below freezing, completely drain the pump and hoses to prevent damage from freezing water. Store the pump in a frost-free environment.
- **Storage:** Store the pump in a dry, well-ventilated area when not in use for extended periods.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Pump does not start	No power supply; Faulty switch; Motor overheating.	Check power connection; Check switch position; Allow pump to cool down.
Pump runs but no water is delivered	Pump not primed; Air in suction line; Suction hose blocked/kinked; Water source empty.	Prime the pump; Check all connections for airtightness; Clear blockages/kinks; Ensure sufficient water in source.
Low pressure	Partial air intake; Blocked filter/nozzle; Excessive head/distance.	Check connections; Clean filter/nozzle; Reduce head/distance if possible.

8. SPECIFICATIONS

Feature	Specification
Model	GC-GP 6538 Set/I
Part Number	4180286
Power Input	650 Watts
Voltage	230 Volts
Max. Flow Rate	3800 l/h 3.800 l/h
Max. Pressure	3.6 bar 3.6 bar

Feature	Specification
Max. Delivery Head	36 m 
Item Weight	9.7 kg (21.3 lbs)
Product Dimensions (L x W x H)	13.15 x 6.61 x 10.08 inches
Material	Metal
Color	Black (Schwarz)

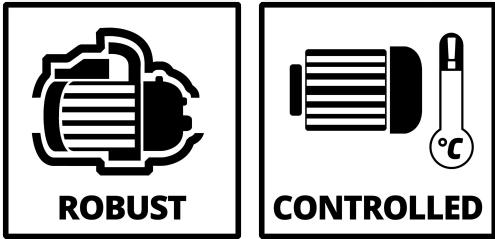


Figure 10: Icons representing the robust construction and temperature-controlled motor of the pump.

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Einhell website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

Manufacturer: Einhell

Date First Available: May 19, 2024



© 2024 Einhell. All rights reserved.

Related Documents - GC-GP 6538 Set/I

	Einhell GC-MM 52 I AS Petrol Multifunctional Tool Operating Manual Official operating manual for the Einhell GC-MM 52 I AS Petrol Multifunctional Tool, covering safety instructions, assembly, operation, maintenance, and troubleshooting for garden use.
---	---

	Einhell GP-CT 36/35 Li BL Akku-Rasentrimmer: Bedienungsanleitung & Sicherheitshinweise Umfassende Bedienungsanleitung für den Einhell GP-CT 36/35 Li BL Akku-Rasentrimmer. Erfahren Sie mehr über sichere Handhabung, Montage, Betrieb und Wartung dieses leistungsstarken Gartengeräts aus der Power X-Change Serie.
	Einhell GC-KS 2540 Gartenhäcksler: Bedienungsanleitung, Sicherheit & Wartung Umfassende Bedienungsanleitung für den Einhell GC-KS 2540 Gartenhäcksler. Enthält wichtige Sicherheitshinweise, Montageanleitungen, Betriebsanweisungen, Wartungstipps und Fehlerbehebung für optimale Leistung und Sicherheit.
	Einhell GP-LC 36/35 Li Akku-Kettensäge: Bedienungsanleitung Die Einhell GP-LC 36/35 Li ist eine leistungsstarke Akku-Kettensäge, entwickelt für effizientes Arbeiten im Garten und bei der Holzbearbeitung. Dieses Dokument enthält umfassende Betriebsanleitungen und Sicherheitshinweise für die korrekte Montage, den sicheren Betrieb und die ordnungsgemäße Wartung des Geräts.
	Einhell GC-SC 18/28 Li Akku-Vertikutierer und Rasenlüfter Bedienungsanleitung Die offizielle Bedienungsanleitung für den Einhell GC-SC 18/28 Li Akku-Vertikutierer und Rasenlüfter. Enthält Sicherheitshinweise, Bedienung, Wartung und Fehlerbehebung für Ihr Gartengerät.
	Einhell GC-ET 4530 Elektro-Rasentrimmer - Bedienungsanleitung Umfassende Bedienungsanleitung für den Einhell GC-ET 4530 Elektro-Rasentrimmer. Enthält Sicherheitshinweise, Montage-, Betriebs-, Wartungs- und Fehlerbehebungsinformationen.