

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [WINFLIKE](#) /

› WINFLIKE BN59-01260A Replacement Remote Control for Samsung Smart UHD 4K TVs User Manual

WINFLIKE WL-BN59-01260A

WINFLIKE BN59-01260A Replacement Remote Control for Samsung Smart UHD 4K TVs

MODEL: WL-BN59-01260A

Introduction

This document provides comprehensive instructions for the WINFLIKE BN59-01260A replacement remote control. This remote is designed to function as a direct replacement for various Samsung Smart LED 4K UHD TV models, offering essential control without complex setup procedures.

Key Features:

- No programming or pairing required.
- Operates via Infrared (IR) technology.
- Does not support Bluetooth or voice command functions.

Compatible Samsung TV Models include:

- UN40MU6300FXZA, UN40MU7000FXZA, UN43MU6300FXZA, UN43MU630D
- UN49MU6500FXZA, UN49MU7000FXZA, UN49MU7500FXZA, UN49MU8000FXZA
- UN50MU6300FXZA, UN50MU630D
- UN55MU6300FXZA, UN55MU630D, UN55MU6500FXZA, UN55MU650D, UN55MU7000FXZA, UN55MU700D, UN55MU7500FXZA, UN55MU8000FXZA, UN55MU800D, UN55MU9000FXZA
- UN65MU6300FXZA, UN65MU630D, UN65MU6500FXZA, UN65MU650D, UN65MU7000FXZA, UN65MU700D, UN65MU7500FXZA, UN65MU8000FXZA, UN65MU800D, UN65MU850D, UN65MU9000FXZA
- UN75MU6300FXZA, UN75MU630D, UN75MU8000FXZA, UN75MU9000FXZA
- QN55Q7CAMF, QN55Q7CAMFXZA, QN55Q7FAMF, QN55Q7FAMFXZA, QN55Q8CAMF, QN55Q8CAMFXZA
- QN65Q7CAMF, QN65Q7CAMFXZA, QN65Q7FAMF, QN65Q7FAMFXZA, QN65Q8CAMF, QN65Q8CAMFXZA, QN65Q9FAMF, QN65Q9FAMFXZA
- QN75Q7FAMF, QN75Q7FAMFXZA, QN75Q8CAMF, QN75Q8CAMFXZA, QN75Q9FAMF, QN75Q9FAMFXZA

Setup

The WINFLIKE BN59-01260A remote control is designed for immediate use with compatible Samsung TVs. No complex programming or pairing steps are required.

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by an arrow to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.

Once batteries are installed, the remote control is ready for operation.





Image: Front view of the WINFLIKE BN59-01260A remote control, showing the power button, number pad access, extra functions, navigation pad, back, home, play/pause, volume, and channel buttons.

Operating Instructions

Point the remote control directly towards your Samsung TV's infrared receiver. Ensure there are no obstructions between the remote and the TV.

Button Functions:

- **Power Button (⏻):** Turns the TV on or off.
- **123 Button:** Accesses the on-screen number pad for channel input or other numerical selections.
- **EXTRA Button:** Provides access to additional TV functions or information, depending on the TV model.
- **Navigation Pad (Circular):** Used to move the cursor or selection up, down, left, and right within menus. The center button confirms selections.
- **Back Button (⏪):** Returns to the previous screen or menu.
- **Home Button (🏠):** Opens the TV's Smart Hub or main home screen.
- **Play/Pause Button (⏮||):** Controls media playback (play, pause).
- **Volume Rocker (VOL):** Increases or decreases the TV volume. Pressing the center mutes the sound.
- **Channel Rocker (CH):** Changes the TV channel up or down.



Image: Angled view of the remote control, highlighting its ergonomic design and button layout.

Maintenance

Battery Replacement:

If the remote control becomes unresponsive or its range decreases, the batteries may need replacement. Follow the battery installation steps in the Setup section to replace the two (2) AAA batteries.

Cleaning:

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners, as these can damage the remote's surface or internal components.

Storage:

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage.

Troubleshooting

- **Remote Not Responding:**

Ensure the batteries are correctly installed and not depleted. Replace batteries if necessary. Check for any obstructions between the remote and the TV's IR receiver.

- **Weak Signal/Limited Range:**

This remote operates via infrared. Ensure you are pointing the remote directly at the TV and are within a reasonable distance (typically up to 15-20 feet). Replace batteries if the issue persists.

- **Specific Buttons Not Working:**

If only certain buttons are unresponsive, try replacing the batteries. If the problem continues, the remote may be faulty.

- **TV Model Not Listed as Compatible:**

This remote is specifically designed for the listed Samsung TV models. If your TV model is not listed, full functionality may not be guaranteed.

Specifications

Feature	Detail
Model Number	WL-BN59-01260A
Product Dimensions	3 x 2 x 0.5 inches
Item Weight	0.634 ounces
Batteries Required	2 x AAA batteries
Connectivity Technology	Infrared (IR)
Special Features	Ergonomic, Lightweight, No Programming Required
Compatible Devices	Samsung Televisions

Warranty and Support

For any issues or inquiries regarding your WINFLIKE BN59-01260A remote control, please contact WINFLIKE customer support. While specific warranty details are not provided in this manual, the manufacturer is committed to assisting with product-related concerns.

Please refer to the retailer or manufacturer's website for the most current support contact information.
