

Beyution RM-YD103

Beyution RM-YD103 Replacement Remote Control User Manual

For Sony LED Smart HDTVs

1. INTRODUCTION

This manual provides instructions for the Beyution RM-YD103 replacement infrared remote control. This remote is designed to function as a direct replacement for the original Sony RM-YD103 remote, offering full functionality for compatible Sony LED Smart HDTV models. No programming is required; simply insert batteries to begin use.

2. SETUP

2.1 Battery Installation

The RM-YD103 remote control requires two (2) AAA batteries for operation. For optimal performance and to avoid potential issues, it is recommended to use new alkaline batteries.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.

Note: If the remote does not function after battery installation, ensure the batteries are inserted correctly and are new alkaline batteries. Rechargeable batteries may not provide sufficient power for consistent operation.

3. OPERATING INSTRUCTIONS

The Beyution RM-YD103 remote control provides access to all standard functions of your compatible Sony LED Smart HDTV. Below is an overview of the remote's layout and key button functions.





Image: Front view of the Beyution RM-YD103 replacement remote control. It features a standard layout with power, input, navigation, playback, numeric, volume, and channel buttons, including dedicated Netflix and Home buttons.

3.1 Button Functions

Button	Function
POWER	Turns the TV on or off.
INPUT	Selects the input source (e.g., HDMI 1, HDMI 2, AV).
SYNC MENU	Accesses the BRAVIA Sync menu for connected devices.
PIC OFF	Turns off the TV screen while audio continues.
RELATED SEARCH	Initiates a related content search.
PREV / NEXT (Rewind/Fast Forward)	Navigates to previous/next content or rewinds/fast forwards during playback.
PAUSE / PLAY / STOP	Controls media playback (pause, play, stop).
SOCIAL VIEW	Activates the Social View feature (if supported by TV).
FOOTBALL	Activates Football Mode (if supported by TV).
APPS	Opens the applications menu.
SEN (Sony Entertainment Network)	Accesses the Sony Entertainment Network.
DISCOVER	Launches the Discover content feature.
NETFLIX	Direct access to the Netflix application.
OPTIONS	Displays context-sensitive options.
RETURN	Goes back to the previous screen or menu.
HOME	Opens the TV's Home menu.
Directional Pad (Up, Down, Left, Right, Enter)	Navigates through menus and confirms selections.
KEY PAD / DISPLAY GUIDE / i-MANUAL	Accesses the on-screen keypad, display guide, or i-Manual.
Numeric Buttons (0-9)	Direct channel selection or data entry.
SUBTITLE / CC	Toggles subtitles or closed captions on/off.
VOL + / -	Adjusts the volume level up or down.
CH + / -	Changes the channel up or down.
MUTING	Mutes or unmutes the TV audio.
JUMP	Switches between the current and previously viewed channel.

4. TROUBLESHOOTING

- **Remote is not responding:**
 - Ensure new alkaline batteries are correctly installed with the proper polarity (+/-).
 - Check for any obstructions between the remote control and the TV's infrared sensor.

- Point the remote directly at the TV's sensor.
- **Limited range or intermittent response:**
 - Replace old batteries with fresh alkaline batteries.
 - Ensure there are no strong light sources (e.g., direct sunlight, fluorescent lights) interfering with the infrared signal.
- **Specific buttons not working:**
 - Verify that your TV model supports the specific function (e.g., Social View, Football Mode).
 - Clean the remote's surface and buttons to ensure no debris is preventing proper contact.

5. SPECIFICATIONS

- **Model:** RM-YD103 (BE-RM-YD103-TV-1)
- **Brand:** Beyution
- **Connectivity Technology:** Infrared
- **Compatible Devices:** Television
- **Power Source:** 2 x AAA batteries (not included)
- **Product Dimensions:** 7 x 2 x 0.7 inches
- **Item Weight:** 2 ounces
- **Special Feature:** Ergonomic design

6. COMPATIBLE SONY TV MODELS

This remote control is compatible with the following Sony LED Smart HDTV models:

- KDL32W700B
- KDL40W580B
- KDL40W590B
- KDL40W600B
- KDL42W700B
- KDL48W580B
- KDL48W590B
- KDL48W600B
- KDL50W700B
- KDL55W700B
- KDL60W590B
- KDL60W600B
- KDL60W610B
- KDL60W630B
- KDL60W630B/2
- KDL60W630B/Z
- KDL60W630B2
- KDL60W630BZ
- XBR55X800B

- XBR65X800B
- KDL-32W700B
- KDL-40W580B
- KDL-40W590B
- KDL-40W600B
- KDL-42W700B
- KDL-48W580B
- KDL-48W590B
- KDL-48W600B
- KDL-50W700B
- KDL-55W700B
- KDL-60W590B
- KDL-60W600B
- KDL-60W610B
- KDL-60W630B
- KDL-60W630B/2
- KDL-60W630B/Z
- KDL-60W630B2
- KDL-60W630BZ
- XBR-55X800B
- XBR-65X800B

If your TV model is not listed, please contact the seller for compatibility verification before purchase.

7. SUPPORT AND WARRANTY

For any questions, issues, or support regarding your Beyution RM-YD103 remote control, please contact the seller directly through the platform where the purchase was made. Information regarding specific warranty terms can also be obtained from the seller.