

[Manuals.plus](#) /

› [UBay](#) /

› Instruction Manual for UBay AKB73756567 Remote Control

UBay UBay AKB73756567

Instruction Manual for UBay AKB73756567 Remote Control

Model: AKB73756567

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your new UBay AKB73756567 Remote Control. This remote is designed as a direct replacement for various LG TV models, offering the same functionality as the original without requiring any programming or pairing.



Figure 1: Front view of the UBay AKB73756567 Remote Control.

SETUP

1. Battery Installation

The UBay AKB73756567 remote control requires two (2) 1.5V AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.

2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 2: Back view with battery compartment.

2. Initial Use

Once batteries are installed, the remote control is ready for immediate use. No programming or pairing is required. Simply point the remote at your LG TV and begin operating it.

OPERATING INSTRUCTIONS

The UBay AKB73756567 remote control replicates the functionality of your original LG TV remote. Below are common button functions:

- **Power Button** (●): Turns the TV on or off.
- **Number Pad (0-9)**: Directly input channel numbers.
- **VOL +/-**: Adjusts the volume level.
- **CH +/-**: Changes the TV channel.
- **MUTE**: Mutes or unmutes the TV sound.
- **INPUT**: Selects input sources (HDMI, AV, etc.).
- **SMART / MY APPS**: Accesses smart TV features and applications.
- **Navigation Pad (Up, Down, Left, Right, OK)**: Navigates menus and confirms selections.
- **BACK / EXIT**: Returns to the previous screen or exits a menu.
- **Q.MENU**: Quick menu access.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward)**: Controls media playback.

This remote is compatible with a wide range of LG TV models, including but not limited to: 32LB5800, 32LB580B, 39LB5800, 40UB8000, 42LB5800, 47LB5800, 47LB6100, 49UB8200, 50LB6100, 55LB5800, 55LB6100, 55UB8200, 55UB9200, 60LB6100, 60UB8200, 65LB6190, 65UB9200, and their specific regional variants (e.g., UG, UC, UH, UD).

MAINTENANCE

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new 1.5V AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the remote's surface or internal components.

Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries.	Replace batteries with new 1.5V AAA batteries, ensuring correct polarity.

Problem	Possible Cause	Solution
Remote works intermittently.	Low battery power; obstruction between remote and TV; remote sensor on TV is blocked.	Replace batteries. Ensure a clear line of sight to the TV's IR sensor. Remove any obstructions.
Specific buttons not working.	Button stuck or damaged; internal circuit issue.	Gently press the button multiple times. If issue persists, contact customer support.

SPECIFICATIONS

- **Model Number:** AKB73756567
- **Brand:** UBay
- **Compatible Devices:** LG Televisions (various models)
- **Power Supply:** 2 x 1.5V AAA Batteries (not included)
- **Product Dimensions:** 9 x 1.8 x 0.7 inches (approximately)
- **Item Weight:** 2.89 ounces (approximately)
- **Color:** Black

CUSTOMER SUPPORT

For further assistance or inquiries, please refer to the seller's contact information on the product's purchase page or visit the UBay official website for support resources. Please have your product model number (AKB73756567) ready when contacting support.

© 2025 UBay. All rights reserved.
This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07PQ29BKF>

More documents and user manuals: <https://manuals.plus/>