

[Manuals.plus](#) /

› [Seiko](#) /

› Seiko QHL078K Digital Alarm Clock User Manual

Seiko QHL078K

Seiko QHL078K Digital Alarm Clock User Manual

1. INTRODUCTION

Thank you for purchasing the Seiko QHL078K Digital Alarm Clock. This manual provides detailed instructions for setting up, operating, and maintaining your new alarm clock. Please read this manual thoroughly before use and keep it for future reference.

2. SAFETY INFORMATION

- Do not expose the unit to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping the unit or subjecting it to strong impacts.
- Do not attempt to disassemble or modify the unit. This will void the warranty.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Dispose of used batteries according to local regulations.
- Clean the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.

3. PACKAGE CONTENTS

Please check that all items are present in the package:

- Seiko QHL078K Digital Alarm Clock (1 unit)
- Batteries (included, typically 2xAA or AAA)
- User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your Seiko QHL078K Digital Alarm Clock.



Image 1: Front view of the Seiko QHL078K Digital Alarm Clock, showing the digital display and overall design.

4.1. Front Panel

- **Digital Display:** Shows time, alarm status, and other indicators.

4.2. Rear/Side Panel

- **Time Set Button(s):** Used to adjust the current time.
- **Alarm Set Button(s):** Used to set and activate the alarm.
- **Mode Button:** Cycles through different display modes or settings.
- **Battery Compartment:** Holds the required batteries.
- **Snooze/Light Button:** Activates snooze function and/or backlight. (Often located on top)

5. SETUP

5.1. Battery Installation

1. Locate the battery compartment cover on the back or bottom of the clock.
2. Slide or unclip the cover to open it.
3. Insert the included batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover securely.
5. The display should now light up, indicating the clock is powered on.

5.2. Initial Time Setting

1. Press and hold the **TIME SET** button (or similar, e.g., "SET", "MODE") until the time display starts flashing.
2. Use the **HOURL** and **MINUTE** buttons (or "+" / "-" buttons) to adjust the hour and minute. Pay attention to AM/PM indicators if your clock uses a 12-hour format.
3. Press the **TIME SET** button again to confirm the setting and exit time setting mode.

6. OPERATING INSTRUCTIONS

6.1. Setting the Current Time

If you need to adjust the time after initial setup:

1. Press and hold the **TIME SET** button until the time flashes.
2. Adjust the hours using the appropriate button (e.g., **HOURL** or +).
3. Adjust the minutes using the appropriate button (e.g., **MINUTE** or -).
4. Press **TIME SET** again to save the changes.

6.2. Setting the Alarm

1. Press and hold the **ALARM SET** button (or similar, e.g., "ALARM") until the alarm time display starts flashing.
2. Use the **HOURL** and **MINUTE** buttons (or "+" / "-" buttons) to set your desired alarm time.
3. Press the **ALARM SET** button again to confirm the alarm time.
4. To activate/deactivate the alarm, press the **ALARM ON/OFF** switch or button. An alarm icon should appear/disappear on the display.

6.3. Snooze Function

When the alarm sounds:

- Press the **SNOOZE/LIGHT** button (usually a large button on top of the clock). The alarm will pause for a few minutes (typically 5-10 minutes) and then sound again.
- To turn off the alarm completely, press any other button (e.g., **ALARM OFF** or **TIME SET**). The alarm will reset for the next day.

7. MAINTENANCE

7.1. Cleaning

To keep your alarm clock in good condition:

- Wipe the exterior of the clock with a soft, dry cloth.
- Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the finish or internal components.

7.2. Battery Replacement

When the display dims or the clock stops functioning correctly, it's time to replace the batteries.

1. Follow the steps for battery installation (Section 5.1).
2. Ensure you replace all old batteries with new ones of the same type.
3. Dispose of old batteries responsibly according to local environmental guidelines.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock display is blank or dim.	Batteries are dead or incorrectly inserted.	Replace batteries with new ones, ensuring correct polarity.
Alarm does not sound.	Alarm is not activated or set incorrectly.	Ensure the alarm is set and the alarm ON/OFF switch is in the ON position. Check alarm time.
Time is incorrect.	Time was not set correctly or batteries were removed.	Reset the current time following Section 6.1.
Buttons are unresponsive.	Low battery power or temporary malfunction.	Replace batteries. If problem persists, remove batteries for a few minutes and reinsert them.

9. SPECIFICATIONS

Brand	Seiko
Model Number	QHL078K
Display Type	Digital
Special Feature	Alarm
Power Source	Battery (AC power also mentioned in product data, but batteries are included and disposable, suggesting primary battery operation)
Shape	Rectangular
Product Dimensions (L x W x H)	4.8 x 12.3 x 4.8 cm
Item Weight	500 grams
Batteries Included	Yes

10. WARRANTY AND SUPPORT

Seiko products are manufactured to high-quality standards. For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official Seiko website for your region.

Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07PQ7H9FW>

More documents and user manuals: <https://manuals.plus/>