

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Fosmon](#) /

› [Fosmon 113dB Bike Alarm with Remote Instruction Manual](#)

Fosmon 51087HOM

Fosmon 113dB Bike Alarm with Remote Instruction Manual

Model: 51087HOM | Brand: Fosmon

INTRODUCTION

The Fosmon 113dB Bike Alarm with Remote is designed to provide enhanced security for your bicycle, e-bike, motorcycle, scooter, cart, trailer, and other valuable possessions. This anti-theft system features a loud siren, adjustable sensitivity, and an SOS function to alert you to potential tampering or accidents.

PRODUCT OVERVIEW

The package includes the main alarm unit, a remote control, and installation accessories.



Image: The main alarm unit and its accompanying remote control.



Image: Contents of the package, including the alarm unit, remote, AAA batteries, a 27A 12V battery, a screwdriver, adhesive pads, and zip ties.

SETUP AND INSTALLATION

The anti-theft vibration alarm is designed for easy setup with two primary installation methods:

- 1. Prepare the Surface:** Clean the desired mounting surface thoroughly to ensure proper adhesion.
- 2. Attach the Alarm:**
Adhesive Method: Apply the provided adhesive pads to the back of the alarm unit and firmly press it onto the cleaned surface.
Cable Tie Method: Thread cable ties through the brackets on the back of the alarm and secure it to your desired location, such as a bike frame.
- 3. Battery Installation:** The alarm unit requires 3 AAA batteries. The remote control uses a 27A 12V battery. Use the provided screwdriver to open the battery compartment and insert the batteries, ensuring correct polarity.



1 2

How To Use



3 4



Mount alarm using adhesive or cable ties

Arm alarm by pressing arm button on remote
(alarm will take 5 seconds to arm after pressed)

Image: Step-by-step installation guide showing surface cleaning, adhesive/cable tie application, mounting, and arming the alarm.

Our SOS Function Has You Covered

Alarm springs into action when your device tilts greater than 45° from its initial position.

 SOS Function



To Turn On SOS



1

SOS function is off in default mode. Press and hold () for about 6 seconds, and the LED will turn off and then back on.



2

Press () and the alarm will beep 1 time, followed by 5 beeps to indicate SOS is on.

To Turn Off SOS



1

Press and hold () for 6 seconds, and the LED will turn off and then back on.



2

Press () and the alarm will beep 2 times to indicate SOS is off.

Image: Visual representation of the two installation methods: using zip ties or double-sided tape.

OPERATING INSTRUCTIONS

The alarm is operated using the included remote control. An alarm unit can be paired with up to 8 remotes.

Arming the Alarm

Press the **Arm** button (closed padlock icon) on the remote. The alarm will beep once, and after approximately 5 seconds, it will be fully armed. A second beep confirms it is armed and ready.

Disarming the Alarm

Press the **Disarm** button (open padlock icon) on the remote. The alarm will beep once, indicating it is disarmed.

Adjusting Sensitivity and Volume

The alarm features 7 different sensitivity levels and 3 volume levels. Refer to the detailed manual for specific button combinations to adjust these settings.

SOS Function

The SOS function detects if the device tilts more than 45° from its original position, signaling an accident. When triggered, it will emit a beeping sound to signal for help.

- **To Turn On SOS:** The SOS function is off by default. Press and hold the **Disarm** button for approximately 6 seconds. The LED will turn off and then back on, followed by 5 beeps to indicate SOS is on.
- **To Turn Off SOS:** Press and hold the **Disarm** button for 6 seconds. The LED will turn off and then back on, and the alarm will beep 2 times to indicate SOS is off.

Wide Applications




Image: Instructions for activating and deactivating the SOS function.

Finding Your Vehicle (Wireless Bike Tracker)

If you need to locate your vehicle, press the bell icon button on the remote. The alarm will emit a loud tone, helping you find it from a distance. The remote control has a range of up to 230 feet (70m).

2 Installation Methods

Zip Ties Installation

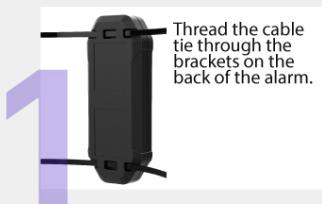

Thread the cable tie through the brackets on the back of the alarm.



Run them through one or both of the provided channels.



Wrap the zip ties around the desired installation area and pull them tight to ensure a secure fit.

Double-Sided Tape Installation




Thoroughly clean and dry desired surface area.



Apply adhesive to the back of the alarm and place it on the desired surface.

KEY FEATURES

- Loud 113dB Alarm:** The alarm produces a powerful 113dB sound to deter thieves. When triggered, the alarm will continue for 30 seconds or until disarmed.
- Vibration Sensor:** The alarm responds to vibration or movement when armed.
- IP65 Waterproof Rating:** Designed to withstand dust and water splashes, making it suitable for outdoor use.
- Multi-Purpose Use:** Can be used for various applications beyond bikes, such as luggage, fences, trailers, and more. It works effectively as an added security layer when used in conjunction with traditional locks.

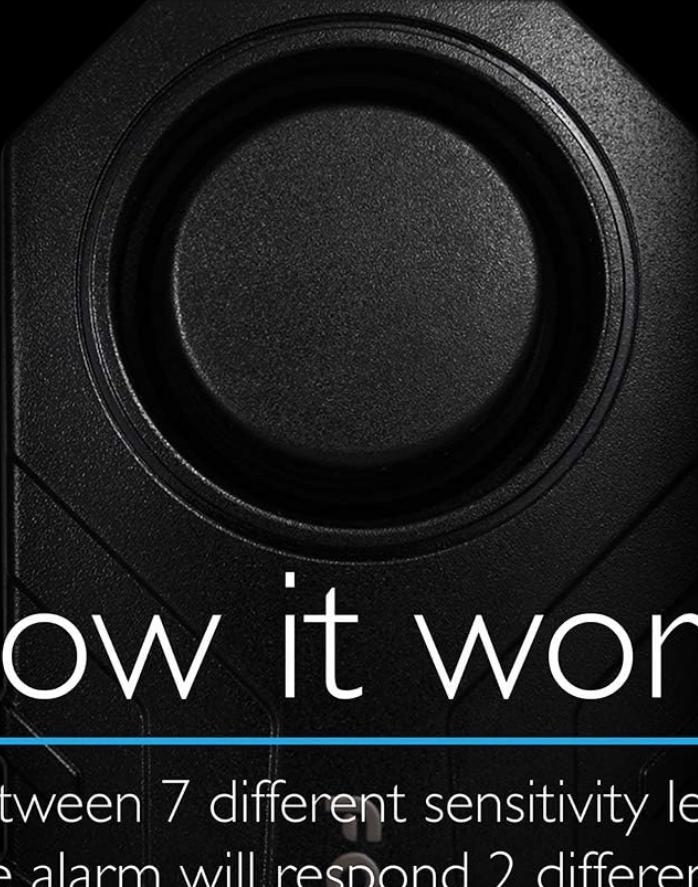

How it works

Adjust between 7 different sensitivity levels. Once set, the alarm will respond 2 different ways.



A nudge will cause alarm to beep



Movement will trigger alarm

Image: Explanation of how the alarm detects a nudge (beep) versus continuous movement (full alarm).



Loud 113dB Continuous Alarm

When triggered, alarm will continue
for 30 seconds or until disarmed

Image: Visual representation of the loud 113dB alarm in action, deterring a potential thief.



Multi-Purpose



Image: Examples of the alarm's multi-purpose applications, including motorcycles, luggage, camping gear, and trailers.



Provide Additional Peace of Mind

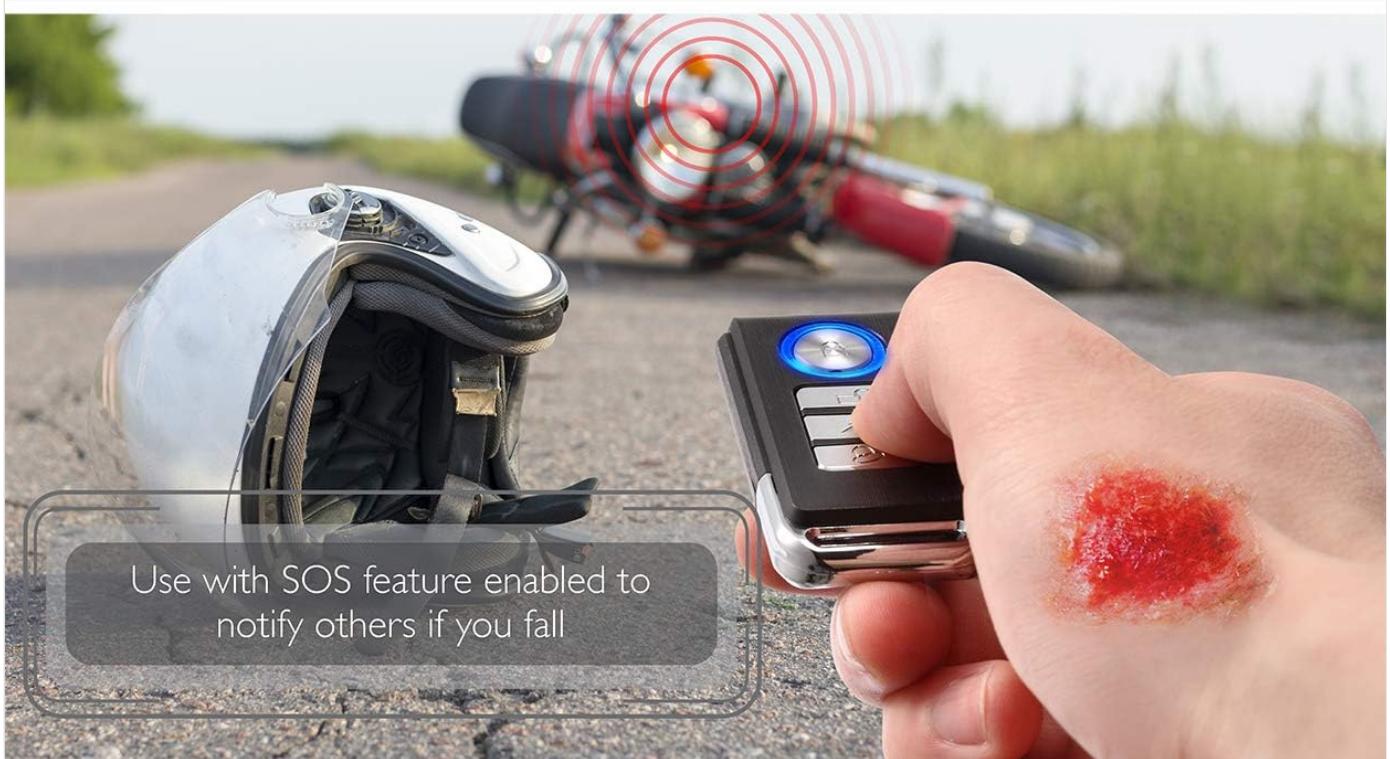


Image: Demonstrates using the alarm with existing locks for increased security and the SOS feature for accident alerts.

IP65 Dust and Water Resistant

 IP65 Rated



Image: The alarm's IP65 rating ensures durability against dust and water.

Wireless Bike Tracker

Easily Locate Your Bike From a Distance with Three Loud Tones

 Bike Tracker
 113dB Loud



Image: Wide range of applications for the alarm, including bicycles, motorcycles, scooters, and trailers.

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official product video demonstrating the Fosmon Anti Theft Bike Alarm with Remote in various scenarios, including its sensitivity and loud alarm sound. This video is provided by the seller, SF Planet.

MAINTENANCE

Battery Replacement

The alarm unit requires 3 AAA batteries and the remote control requires a 27A 12V battery. When the alarm or remote's performance diminishes, replace the batteries. Use the provided screwdriver to open the battery compartments carefully. For detailed instructions on battery replacement, refer to the video provided below, which offers a practical demonstration of the product's physical aspects and battery access.

Your browser does not support the video tag.

Video: A user-generated video demonstrating the physical components of the alarm, including the battery compartment and the tools

provided for battery replacement. This video is from a customer review and provides practical insight into the product's physical aspects.

TROUBLESHOOTING

- Alarm Not Responding:** Check battery levels in both the alarm unit and the remote control. Ensure they are correctly inserted.
- Alarm Too Sensitive/Not Sensitive Enough:** Adjust the sensitivity level using the remote control as described in the operating instructions.
- Alarm Not Loud Enough:** Adjust the volume level using the remote control. Ensure the alarm's speaker is not obstructed.
- False Alarms:** Reduce the sensitivity setting. Ensure the alarm is mounted securely and not subject to excessive vibrations from external sources (e.g., strong winds, passing heavy vehicles).

SPECIFICATIONS

Feature	Detail
Item Weight	4 ounces
Product Dimensions	3.74 x 1.65 x 0.9 inches
Item Model Number	51087HOM
Batteries (Alarm Unit)	3 AAA batteries required
Batteries (Remote)	1 27A 12V battery required
Wireless Remote	Yes
Maximum Range (Remote)	90 Feet
Noise Level	113 dB
Waterproof Rating	IP65

WARRANTY AND SUPPORT

This product comes with a limited lifetime warranty. For more information regarding warranty claims or technical support, please refer to Fosmon's official website or contact their customer service.

Fosmon provides 24/7 free customer support.