

[Manuals.plus](#) /

› [Frigidaire](#) /

› Frigidaire EFR107 Mini Fridge with Dry Erase Board & Small Ice Freezer - 1.6 Cu Ft Compact Refrigerator User Manual

Frigidaire EFR107-BLACK

Frigidaire EFR107 Mini Fridge User Manual

Model: EFR107-BLACK | Brand: Frigidaire

1. Introduction

The Frigidaire 1.6 cu ft. eraser board mini fridge is roomy enough for your groceries but small and sleek enough to fit almost anywhere. A slide-out shelf provides efficient storage options and adds to its unique style. Designed for energy efficiency, this mini fridge includes an ice cube chamber and features a reversible door that can be set up to open from either the left or right side. The flush-back design and invisible door handle offer a clean and elegant appearance that looks great in your home, in a dorm or at the office.

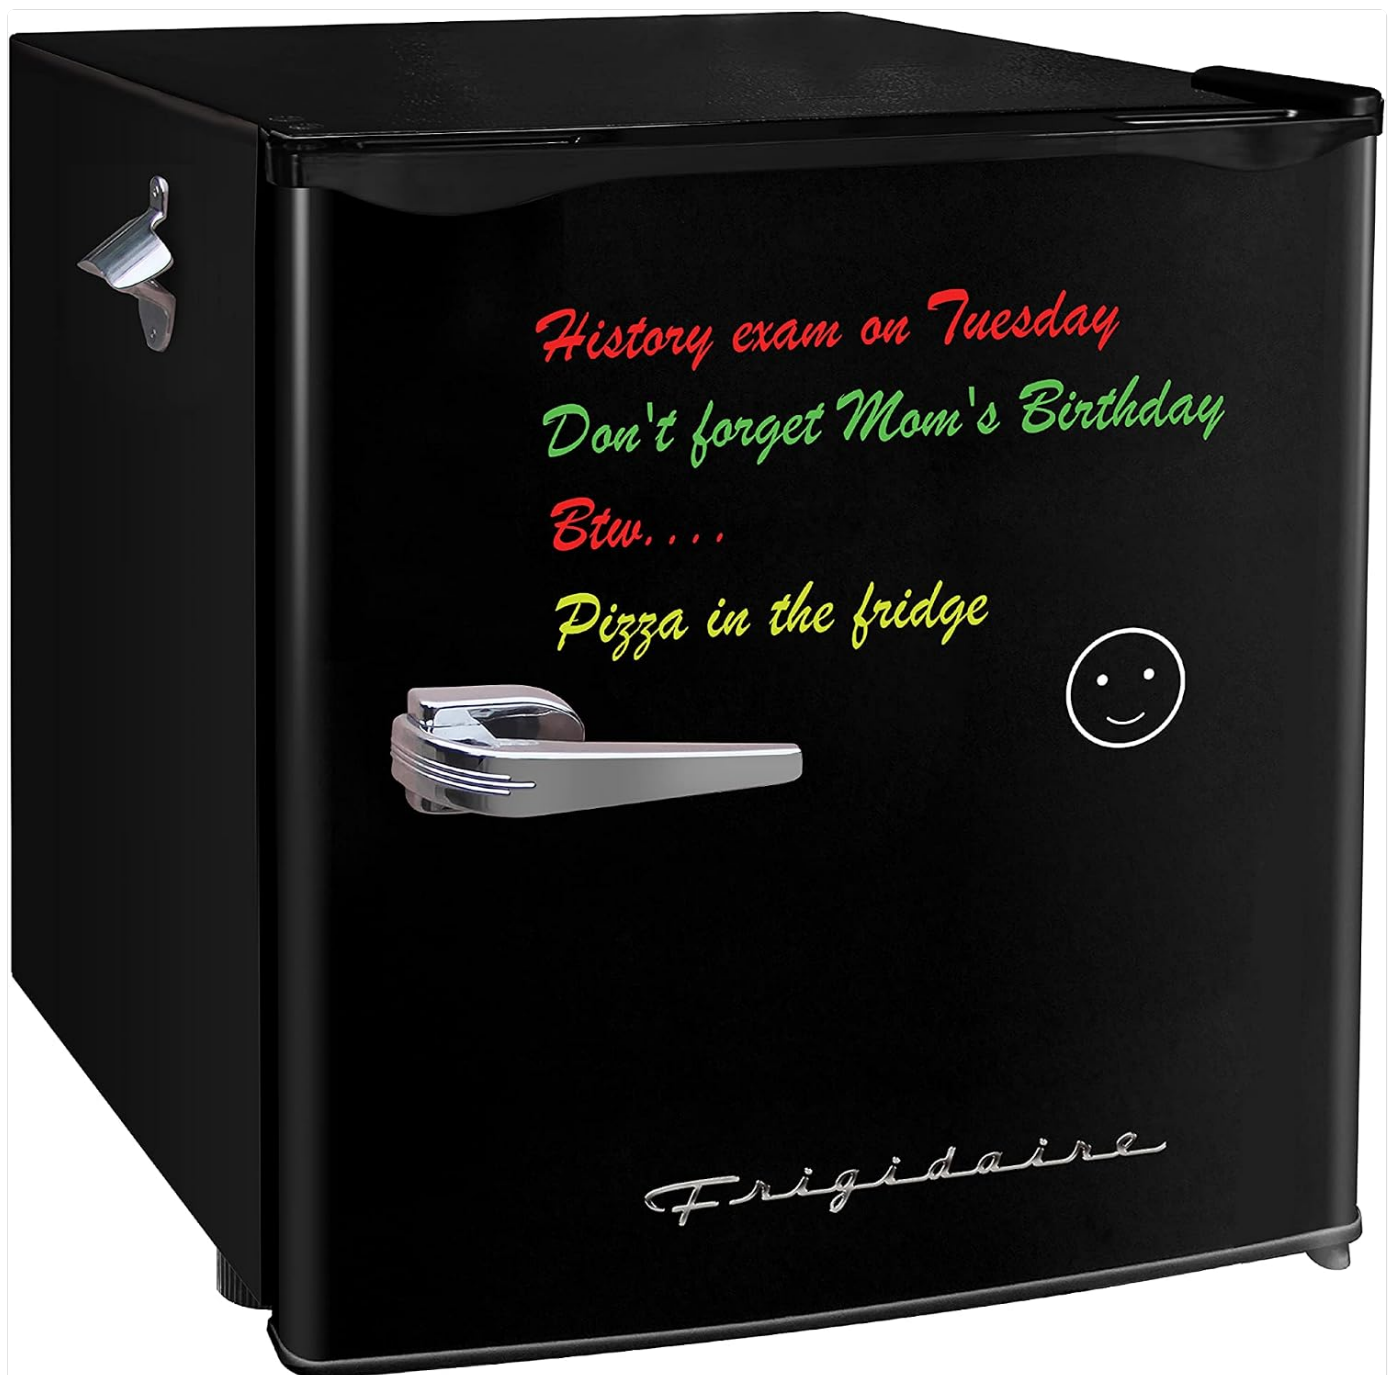


Figure 1.1: Frigidaire EFR107 Mini Fridge, showcasing its compact design and dry erase board feature.

2. Important Safety Instructions

To reduce the risk of fire, electrical shock, or injury when using your refrigerator, follow these basic precautions:

- **DANGER:** Risk of child entrapment. Before you throw away your old refrigerator or freezer, take off the doors. Leave the shelves in place so that children may not easily climb inside.
- Read all instructions before using the appliance.
- Never clean refrigerator parts with flammable fluids. The fumes can create a fire hazard or explosion.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other refrigerator. The fumes can create a fire hazard or explosion.
- Do not place fingers or hands into the cold air discharge opening or on the cold surfaces in the refrigerator compartment

when the appliance is plugged in.

- Ensure the refrigerator is properly grounded.
- Unplug the refrigerator before cleaning or making any repairs.
- Do not operate the refrigerator with a damaged cord or plug.
- Keep ventilation openings in the appliance enclosure or in the built-in structure clear of obstruction.

3. Parts and Features

The Frigidaire EFR107 Mini Fridge is designed with convenience and efficiency in mind. Key features include:

- **Compact & Convenient:** Features a dry erase board on the door for notes, lists, and reminders. Its compact size allows for easy placement in small spaces.
- **Storage Space:** Includes one interior slide-out shelf for fresh foods, 2-liter bottle storage in the door, and a half-width ice cube freezer compartment.
- **Adjustable Features:** Equipped with adjustable leveling legs to ensure stability on uneven floors. The door is reversible, allowing it to open from either the left or right side to suit your space.
- **Temperature Controls:** An adjustable thermostat enables precise temperature selection for optimal food preservation.
- **Flush-Back Design:** Offers multiple placement options and a clean, elegant appearance.



Figure 3.1: Integrated Dry Erase Board for convenient messaging.



Figure 3.2: Interior layout with shelf and door storage.

4. Setup and Installation

4.1 Unpacking

Carefully remove all packaging materials, including the foam base and adhesive tape holding accessories in place. Dispose of packaging materials responsibly. Clean the interior and exterior of the refrigerator with a soft cloth and lukewarm water before use.

4.2 Placement

Place the refrigerator on a flat, solid surface strong enough to support the unit when fully loaded. Allow at least 5 inches (12.7 cm) of space between the back and sides of the refrigerator and any adjacent walls or furniture to ensure proper air circulation. Avoid placing the unit in direct sunlight or near heat sources like stoves or heaters.



Figure 4.1: Example of suitable placement in a kitchen environment.

4.3 Dimensions

The dimensions of the Frigidaire EFR107 Mini Fridge are approximately 18.25 inches (Depth) x 20.25 inches (Width) x 20.5 inches (Height). Ensure you have adequate space for installation and door swing.

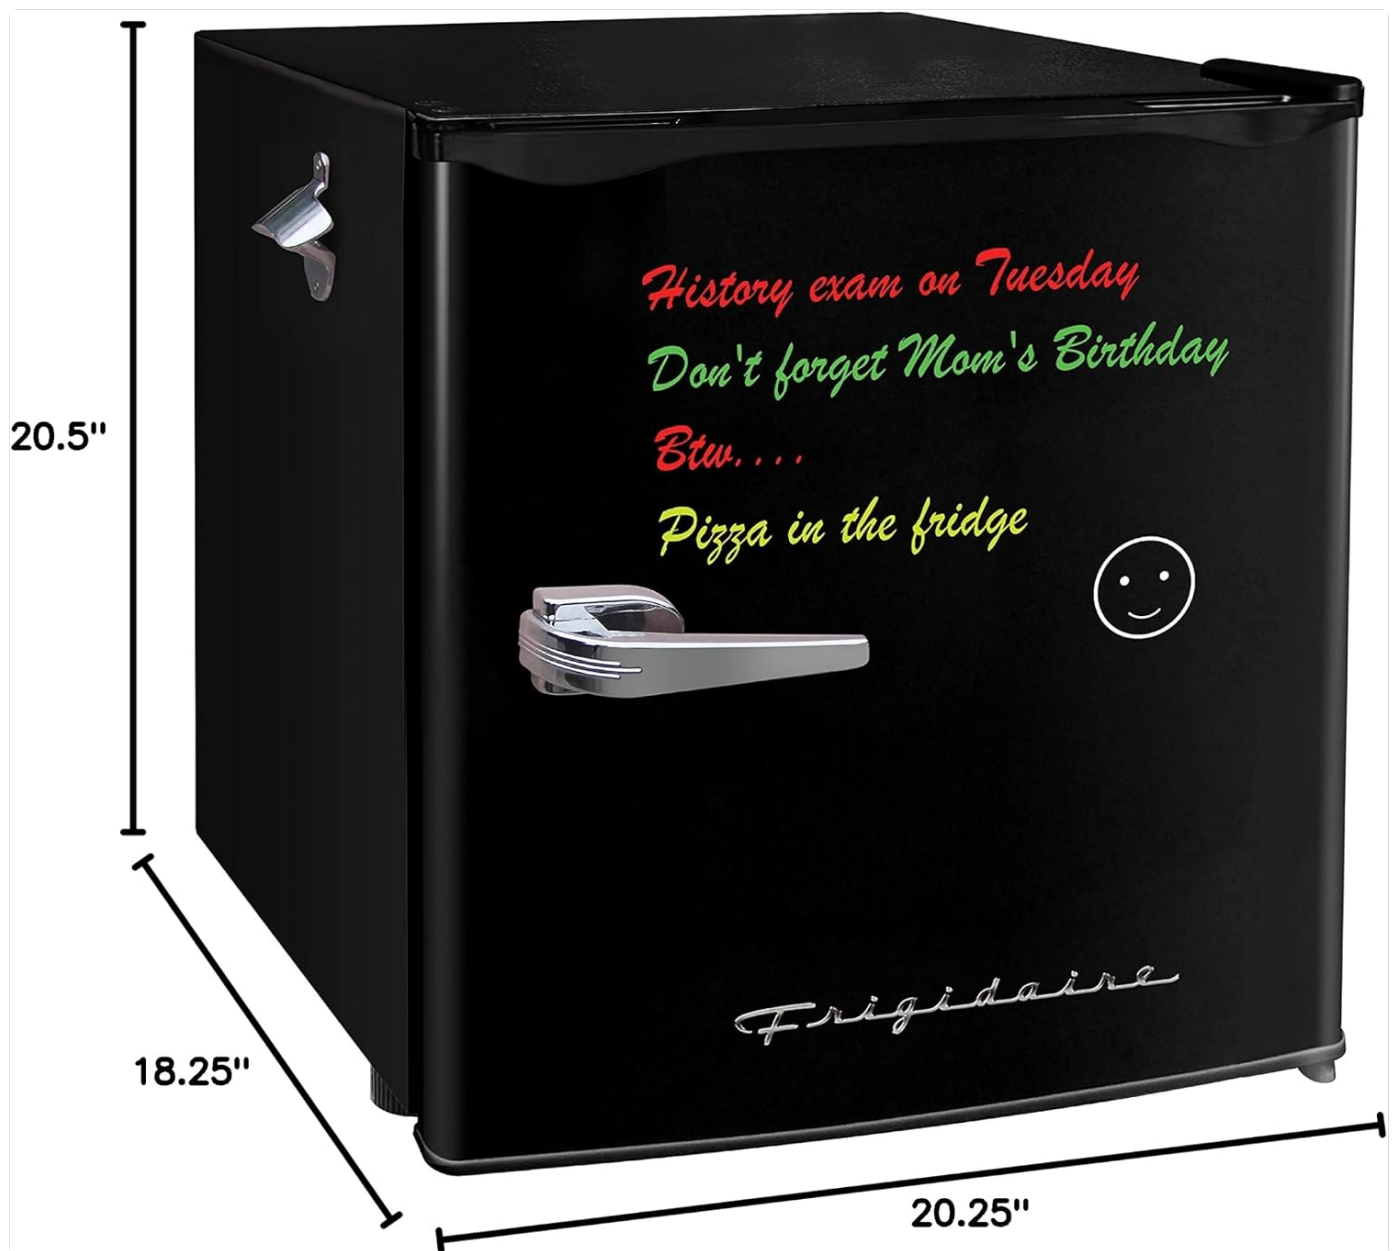


Figure 4.2: Product Dimensions for planning placement.

4.4 Reversible Door

The door of your refrigerator can be reversed to open from either the left or right side. Refer to the detailed instructions in the separate installation guide for reversing the door swing, if desired.

4.5 Leveling

Adjust the leveling legs at the bottom of the refrigerator to ensure the unit is stable and level. A level refrigerator operates more efficiently and prevents the door from swinging open or closed unexpectedly.

5. Operating Instructions

5.1 Initial Startup

After placing the refrigerator, wait at least 2-4 hours before plugging it into a power outlet. This allows the refrigerant to settle. Once plugged in, let the unit run for approximately 2-3 hours before placing food inside.

5.2 Temperature Control

The refrigerator is equipped with an adjustable thermostat. The temperature control dial is typically located inside the refrigerator compartment. Turn the dial to adjust the cooling intensity. Higher numbers usually indicate colder temperatures. Start with a medium setting and adjust as needed based on ambient temperature and food load.

- **"Cool" to "Colder":** The dial allows for a range of cooling, from moderately cool to very cold.
- **Optimal Setting:** For general use, a mid-range setting is often sufficient. Adjust to a colder setting if the ambient temperature is high or if you need to chill items quickly.

5.3 Food Storage

Organize food items to allow for proper air circulation. Do not overload the refrigerator. Use the interior shelf for fresh foods and the door compartments for beverages and smaller items. The small ice freezer compartment is suitable for making a small amount of ice or storing a few frozen items.

6. Care and Maintenance

6.1 Cleaning

Always unplug the refrigerator before cleaning. Clean the interior and exterior surfaces regularly with a mild detergent and warm water. Rinse thoroughly and dry with a soft cloth. For the dry erase board, use only dry erase markers and a soft cloth or eraser designed for dry erase surfaces. Do not use abrasive cleaners or solvents.

6.2 Defrosting

This refrigerator features manual defrost. Frost will accumulate on the inner walls of the freezer compartment. When the frost layer becomes about 1/4 inch (6 mm) thick, it should be defrosted. To defrost:

1. Unplug the refrigerator from the power outlet.
2. Remove all food items from the freezer and refrigerator compartments. Place them in a cooler or another refrigerated space.
3. Leave the door open to allow the frost to melt naturally. You can place towels at the bottom to absorb water. Do not use sharp objects or heating devices to speed up defrosting, as this can damage the unit.
4. Once all frost has melted, clean and dry the interior thoroughly.
5. Plug the refrigerator back in and allow it to cool down before returning food items.

6.3 Power Outage

In case of a power outage, keep the refrigerator door closed to maintain the internal temperature for as long as possible. Avoid opening the door unnecessarily. If the outage is prolonged, consider transferring perishable items to a cooler with ice.

7. Troubleshooting Guide

Before contacting customer service, please refer to the following table for common issues and their solutions:

Problem	Possible Cause & Solution
Refrigerator does not operate.	Not plugged in; circuit breaker tripped; temperature control set to "OFF". <i>Solution:</i> Ensure plug is secure; reset circuit breaker; adjust temperature control.

Problem	Possible Cause & Solution
Temperature is too warm.	Door opened too frequently; warm food placed inside; poor air circulation; thermostat setting too high. <i>Solution:</i> Minimize door openings; allow hot food to cool before storing; ensure proper spacing; adjust thermostat to a colder setting.
Temperature is too cold.	Thermostat setting too low. <i>Solution:</i> Adjust thermostat to a warmer setting.
Excessive frost buildup.	Door not sealed properly; high humidity; frequent door openings. <i>Solution:</i> Check door gasket for leaks; avoid opening door unnecessarily; perform manual defrost.
Unusual noises.	Refrigerator not level; objects vibrating against the unit; normal operating sounds. <i>Solution:</i> Level the refrigerator; ensure nothing is touching the unit; gurgling/hissing sounds are normal refrigerant flow.

8. Product Specifications

Feature	Detail
Brand	Frigidaire
Model Info	EFR107-BLACK
Item Weight	29.3 pounds
Product Dimensions (D x W x H)	18.25 x 20.25 x 20.5 inches
Capacity	1.6 Cubic Feet
Annual Energy Consumption	25 Kilowatt Hours
Refrigerator Fresh Food Capacity	1.5 Cubic Feet
Freezer Capacity	0.1 Cubic Feet
Installation Type	Freestanding
Form Factor	Compact
Color	BLACK
Voltage	110 Volts
Crispers/Drawers	2
Defrost System	Manual
Door Hinges	Reversible

Feature	Detail
Shelves	2
Material Type	Metal, Plastic
Included Components	Refrigerator, Compact Fridge
Number Of Doors	1
Date First Available	March 14, 2019

9. Warranty and Support

9.1 Limited Warranty

Frigidaire products are manufactured with high-quality materials and are warranted against defects in material or workmanship for a period from the date of original purchase. Specific warranty terms and duration may vary. Please refer to the warranty card included with your product or visit the official Frigidaire website for detailed warranty information.

9.2 Customer Support

For technical assistance, troubleshooting beyond this guide, or to inquire about parts and service, please contact Frigidaire Customer Support. Have your model number (EFR107-BLACK) and serial number ready when you call. You can find more information and support resources on the official Frigidaire website: www.frigidaire.com

© 2024 Frigidaire. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07PQP1CQ1>

More documents and user manuals: <https://manuals.plus/>