

- Manuals.plus /
- › UBay /
 - › UBay AH59-02405A Remote Control User Manual for Samsung Home Theater Systems

UBay AH59-02405A

UBay AH59-02405A Remote Control User Manual

For Samsung Home Theater Systems

1. INTRODUCTION

This manual provides instructions for the UBay AH59-02405A remote control, designed as a replacement for various Samsung Home Theater System models. This remote control requires no programming and is ready for use once batteries are installed.

2. PRODUCT OVERVIEW

The UBay AH59-02405A remote control provides comprehensive functionality for compatible Samsung Home Theater Systems. It features dedicated buttons for power, volume, channel selection, playback controls, and specific functions like SMART HUB, TOOLS, and INFO.



Figure 2.1: Front view of the UBay AH59-02405A remote control, showing all buttons and their labels.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two AAA batteries (not included), ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

The remote control does not require any programming. It is ready for immediate use after battery installation.

4. OPERATING INSTRUCTIONS

4.1 Basic Functions

- **Power ():** Turns the Home Theater System on or off.
- **TV/Source:** Switches input sources on the connected TV.
- **Number Buttons (0-9):** Direct input for channel selection or menu options.
- **VOL (+/-):** Adjusts the volume level.
- **MUTE:** Mutes or unmutes the audio.
- **CH (▲/▼):** Changes channels.
- **Playback Controls (◀◀, ▶, ▶▶, ■):** Control media playback (Rewind, Play/Pause, Fast Forward, Stop).

4.2 Advanced Functions

- **SMART HUB:** Accesses the Smart Hub features of your Samsung device.
- **TOOLS:** Opens a menu with various tools and settings.
- **INFO:** Displays information about the current program or media.
- **RETURN:** Navigates back to the previous screen or menu.
- **EXIT:** Exits the current menu or application.
- **Color Buttons (A, B, C, D):** Perform specific functions depending on the context of the on-screen menu.
- **Directional Pad (▲ ▼ ◀ ▶) and Enter:** Navigate through menus and confirm selections.

4.3 Compatible Models

This remote control is compatible with the following Samsung Home Theater System models:

- HTE4500
- HTE4530
- HTE5530
- HTE5550W
- HTE6750W
- HTE4500XY
- HTE4530XY
- HTE5530XY
- HTE5550XY
- HTE6750WXY

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the proper polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote control and the Home Theater System's infrared receiver.
 - Ensure the remote control is pointed directly at the Home Theater System.
- **Specific functions not working:**
 - Verify that your Home Theater System model is listed in the compatible models section (Section 4.3).
 - Some advanced functions may require specific settings or modes on your Home Theater System. Refer to your Home Theater System's manual for details.

6. SPECIFICATIONS

Feature	Detail
Model Number	AH59-02405A
Brand	UBay
Connectivity Technology	Infrared
Compatible Devices	Samsung Home Theater Systems
Max Number of Supported Devices	1
Special Feature	Ergonomic design
Product Dimensions	9 x 1.8 x 0.75 inches
Item Weight	3.31 ounces

7. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the documentation provided with your purchase or contact the retailer. As a replacement remote, specific warranty terms may vary.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07PQWQLP6>

More documents and user manuals: <https://manuals.plus/>