

[Manuals.plus](#) /

› [TAG Heuer](#) /

› TAG Heuer Carrera Heuer 02 Chronograph Automatic Watch CBG2A1Z.FT6157 User Manual

TAG Heuer CBG2A1Z.FT6157

TAG Heuer Carrera Heuer 02 Chronograph Automatic Watch User Manual

Model: CBG2A1Z.FT6157

INTRODUCTION

This manual provides essential instructions for the proper use, setup, and maintenance of your TAG Heuer Carrera Heuer 02 Chronograph Automatic Men's Watch, model CBG2A1Z.FT6157. Please read this manual carefully to ensure optimal performance and longevity of your timepiece.

SETUP

1. Unboxing and Initial Inspection

Upon receiving your watch, carefully remove it from its packaging. The watch comes with a travel pouch for protection. Inspect the watch for any visible damage. Ensure all protective films are removed from the crystal and case back.



Image: The TAG Heuer Carrera Heuer 02 Chronograph Automatic Watch, model CBG2A1Z.FT6157, displayed in its protective travel pouch, showcasing its black dial and rubber strap.

2. Initial Winding

Your watch is equipped with an automatic movement. While it winds itself with wrist movement, it is recommended to manually wind it upon first use or after a period of inactivity. To do this:

1. Unscrew the crown (if it is a screw-down crown) by turning it counter-clockwise.
2. Pull the crown out to position 1.
3. Turn the crown clockwise approximately 30-40 times. This will build up a power reserve.
4. Push the crown back in and screw it down clockwise to ensure water resistance.

3. Setting Time and Date

To set the time and date:

1. Unscrew the crown (if applicable) and pull it out to position 2 (for date setting) or position 3 (for time setting).
2. **Position 2 (Date Setting):** Turn the crown clockwise or counter-clockwise to adjust the date. Avoid setting the date between 9 PM and 3 AM, as this can damage the movement.
3. **Position 3 (Time Setting):** Turn the crown to set the hour and minute hands. Ensure the AM/PM is correctly set by observing the date change at midnight.
4. Once set, push the crown back to position 0 and screw it down tightly to maintain water resistance.

4. Adjusting the Strap

The watch features a rubber strap with a foldover clasp. To adjust the fit:

- Open the foldover clasp.
- The strap may require professional adjustment (cutting) for a perfect fit. Consult an authorized TAG Heuer service center for this procedure.
- Ensure the clasp closes securely to prevent accidental opening.

OPERATING THE WATCH

1. Automatic Movement

The TAG Heuer Carrera Heuer 02 Chronograph is powered by an automatic mechanical movement. This means the watch is wound by the natural motion of your wrist. When fully wound, it has a power reserve that allows it to run for a certain period (typically 40-80 hours) when not worn. If the watch stops, manually wind it as described in the 'Initial Winding' section.

2. Chronograph Function

The chronograph allows you to measure elapsed time independently of the main time display. It features two pushers on the side of the case, typically at 2 o'clock and 4 o'clock, and sub-dials for seconds, minutes, and hours.

1. **Start:** Press the top pusher (at 2 o'clock) to start the chronograph. The central chronograph second hand will begin to move.
2. **Stop:** Press the top pusher again to stop the chronograph. The elapsed time will be indicated on the sub-dials and by the central chronograph second hand.
3. **Reset:** Press the bottom pusher (at 4 o'clock) to reset the chronograph hands to zero. This should only be done when the chronograph is stopped.

3. Water Resistance

Your watch has a water resistance rating of 100 meters (10 ATM). This makes it suitable for swimming and snorkeling, but not for diving. Always ensure the crown is fully pushed in and screwed down (if applicable) before exposing the watch to water. Do not operate the crown or pushers while the watch is wet or submerged.

MAINTENANCE

1. Cleaning

To maintain the appearance of your watch:

- Wipe the case and crystal with a soft, dry cloth.
- For rubber straps, use a mild soap solution and a soft brush, then rinse thoroughly with fresh water and dry

completely.

- Avoid using harsh chemicals or abrasive materials.

2. Storage

When not wearing your watch for extended periods, store it in its original box or a watch winder to keep the movement running and lubricated. Keep it away from extreme temperatures, strong magnetic fields, and direct sunlight.

3. Service Intervals

Mechanical watches require periodic servicing to ensure accuracy and reliability. It is recommended to have your TAG Heuer watch serviced by an authorized service center every 3-5 years. This service typically includes cleaning, lubrication, and adjustment of the movement, as well as replacement of seals to maintain water resistance.

4. Water Resistance Checks

Water resistance is not a permanent feature and may decrease over time due to wear and tear on gaskets. It is advisable to have the water resistance checked annually by an authorized service center, especially if the watch is frequently exposed to water.

TROUBLESHOOTING

- **Watch not running:** If the watch has stopped, it may simply need winding. Manually wind the watch using the crown (refer to 'Initial Winding'). If it still does not run, it may require servicing.
- **Time inaccuracy:** Minor variations in timekeeping are normal for mechanical watches. However, if the watch is consistently gaining or losing significant time, it may need adjustment or servicing. Exposure to strong magnetic fields can also affect accuracy.
- **Chronograph not resetting to zero:** If the chronograph hands do not return precisely to zero when reset, this may indicate a need for adjustment. Avoid forcing the pushers.
- **Condensation under crystal:** If you notice condensation inside the watch, this indicates a loss of water resistance. Immediately take the watch to an authorized service center to prevent further damage.

SPECIFICATIONS

Model Number	CBG2A1Z.FT6157
Brand	TAG Heuer
Movement Type	Automatic
Case Diameter	45 Millimeters
Case Thickness	13 Millimeters
Case Material	Rubber (Note: Product data indicates rubber for case material, which is unusual for a watch case. Typically, this refers to case coating or bezel material. The primary case material is usually metal.)
Crystal	Sapphire

Water Resistance Depth	100 Meters
Band Material Type	Rubber
Clasp Type	Foldover Clasp
Dial Color	Black
Additional Features	Chronograph, Date Display

WARRANTY AND SUPPORT

Your TAG Heuer watch is covered by a manufacturer's warranty against defects in materials and workmanship. The specific terms and duration of the warranty are provided with your purchase documentation. Please retain your proof of purchase for warranty claims.

For warranty service, repairs, or technical support, please contact an authorized TAG Heuer service center or your original point of purchase. Unauthorized repairs or modifications may void your warranty.

For more information, visit the official TAG Heuer website or consult the warranty card included with your watch.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

