

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Innsky](#) /
- › [Innsky 5.5L Air Fryer Instruction Manual IS-EE003](#)

Innsky IS-EE003

Innsky 5.5L Air Fryer Instruction Manual

Model: IS-EE003

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Innsky 5.5L Air Fryer, Model IS-EE003. Please read these instructions thoroughly before first use and retain for future reference.



Image: The Innsky 5.5L Air Fryer, showcasing its sleek black design and the cooking basket filled with golden-brown fries.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.

- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The appliance contains an overheating protection system. If the internal temperature control system fails, the overheating protection activates automatically.

3. PRODUCT OVERVIEW

Components

- Main Unit with Control Panel
- Removable Frying Basket
- Removable Basket Holder
- Power Cord

Control Panel

The digital control panel features intuitive icons for various functions and preset programs.

8 ajustes preestablecidos de cocción



Image: Close-up of the Innsky Air Fryer's digital control panel, highlighting the 8 preset cooking icons for various food types.

Preset Programs:

- Fries
- Cake
- Pizza
- Shrimp
- Chicken
- Steak
- Fish
- Bacon

Each program has a default time and temperature, which can be adjusted manually.

4. SETUP AND FIRST USE

Unpacking

1. Remove all packaging materials and stickers.
2. Ensure all components are present and undamaged.

Cleaning Before First Use

1. Wipe the main unit with a damp cloth.
2. Wash the frying basket and basket holder with hot water, dish soap, and a non-abrasive sponge.
3. Rinse and dry thoroughly.

Placement

- Place the air fryer on a stable, heat-resistant surface.
- Ensure adequate air circulation around the appliance (at least 10 cm clearance on all sides).
- Do not place near flammable materials.

5. OPERATING INSTRUCTIONS

Basic Operation

1. Plug the appliance into a grounded wall outlet.
2. Carefully pull the basket holder out of the air fryer.
3. Place ingredients into the frying basket. Do not exceed the MAX fill line.
4. Slide the basket holder back into the air fryer. Ensure it clicks into place.
5. Press the Power button to turn on the display.
6. Select a preset program or manually set the desired temperature and time using the control buttons.
7. Press the Start/Pause button to begin cooking.
8. During cooking, you can pause the process to shake or turn food by pulling out the basket. The appliance will resume when the basket is reinserted.
9. Once cooking is complete, the timer will beep. Carefully pull out the basket and remove food.

Detachable Basket Design

The air fryer features a detachable basket for easy food handling and cleaning.



Image: A visual guide demonstrating the three simple steps to detach the frying basket from its holder for serving or cleaning.

Cooking Tips

- For crispier results, lightly spray or brush food with oil.
- Shake smaller ingredients halfway through cooking for even results.
- The air fryer uses 360° hot air circulation for efficient cooking.

Circulación completa de 360 °



80-200 °C



Cocción
rápida



0-60
minutos



Sin humo
y sin aceite

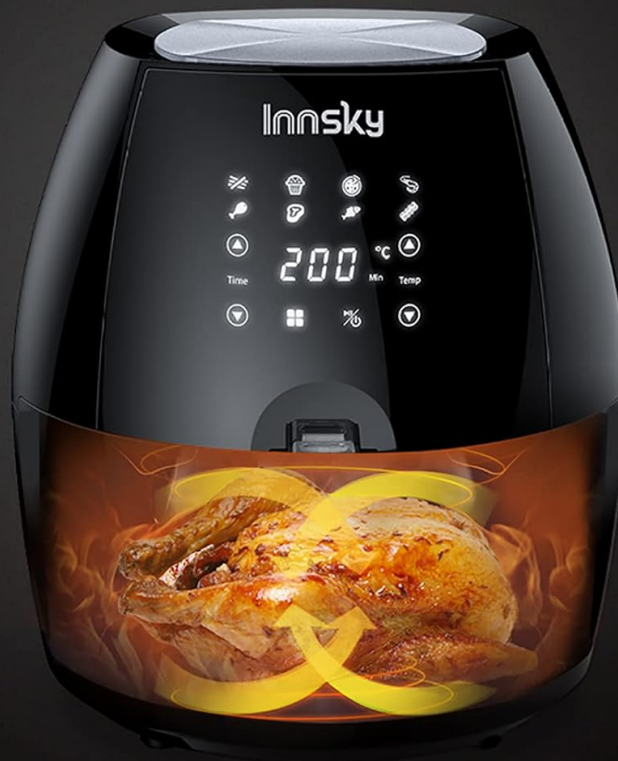


Image: An animated diagram showing the 360-degree hot air circulation technology within the Innsky Air Fryer, ensuring even cooking.

6. MAINTENANCE AND CLEANING

Clean the appliance after every use.

Cleaning Procedure

1. Unplug the appliance and allow it to cool completely.
2. Wipe the exterior with a damp cloth.
3. The frying basket and basket holder are dishwasher safe. Alternatively, wash with hot water, dish soap, and a non-abrasive sponge.
4. Clean the interior of the appliance with a non-abrasive sponge and warm water.
5. Ensure all parts are completely dry before storage.

Fácil limpieza



Aptas para el lavavajillas



Image: A hand cleaning the non-stick frying basket of the Innsky Air Fryer under running water, demonstrating its easy-to-clean design.

Storage

Store the appliance in a cool, dry place, away from direct sunlight and moisture.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; Basket not inserted correctly.	Ensure power cord is securely plugged into a grounded outlet; Push the basket firmly until it clicks into place.
Food is not cooked evenly.	Too much food in the basket; Food not shaken or turned.	Cook in smaller batches; Shake or turn food halfway through cooking.

Problem	Possible Cause	Solution
White smoke coming from the appliance.	Grease residue from previous use; Fatty ingredients.	Clean the basket and interior thoroughly; Remove excess oil from food before cooking.
Overheating protection activated.	Internal temperature exceeded safe limits.	Unplug the appliance and let it cool down for at least 30 minutes before restarting.

8. SPECIFICATIONS

Feature	Detail
Brand	Innsky
Model Number	IS-EE003
Capacity	5.5 Liters
Power	1700 Watts
Voltage	240 Volts
Dimensions (L x W x H)	38.96 x 32.5 x 35.95 cm
Weight	5 kg
Material	Stainless Steel
Noise Level	65 dB
Special Features	Automatic Shut-off, Dishwasher Safe Parts, Detachable Basket, Rapid Cooking, 8 Preset Programs, Overheating Protection

9. WARRANTY AND SUPPORT

Innsky products are designed and manufactured to the highest quality standards. For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official Innsky website.

Please retain your proof of purchase for warranty claims.