

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Fossil](#) /

› [Fossil Men's Chase Watch FS5484 Instruction Manual](#)

## Fossil FS5484

# Fossil Men's Chase Watch FS5484 Instruction Manual

Your guide to setting up, operating, and maintaining your Fossil Chase timepiece.

## 1. INTRODUCTION

Thank you for choosing the Fossil Men's Chase FS5484 watch. This manual provides essential information to help you understand and utilize all the features of your new timepiece. Please read these instructions carefully to ensure proper use and care.

## 2. PRODUCT OVERVIEW

The Fossil Chase FS5484 is a sophisticated chronograph watch featuring a durable stainless steel case, a comfortable leather strap, and a precise quartz movement. It includes a three-hand analog display, two functional subdials, and a date display window.



This image displays the Fossil Men's Chase FS5484 watch, featuring a round stainless steel case, a black dial with silver-tone hands and hour markers, two subdials, and a date display window. The watch is fitted with a brown leather strap.

### Key Components:

- **Crown:** Used for setting time and date.
- **Pushers:** Used to operate the chronograph function.
- **Main Dial:** Displays hours, minutes, and seconds.
- **Subdials:** Chronograph minute and second counters.
- **Date Display:** Window showing the current date.
- **Leather Strap:** Adjustable for a secure fit.

## 3. SETUP

### 3.1. Initial Unboxing

Carefully remove the watch from its packaging. Inspect the watch for any visible damage. The watch may

have a plastic stopper under the crown to preserve battery life; remove this stopper before use.

### 3.2. Setting the Time

1. Pull the crown out to the furthest position (position 2). The second hand will stop.
2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the desired time.
3. Push the crown back into its normal operating position (position 0). The second hand will resume movement.

### 3.3. Setting the Date

1. Pull the crown out to the first click position (position 1).
2. Turn the crown clockwise to advance the date until the correct date is displayed. Avoid setting the date between 9 PM and 3 AM, as this may interfere with the automatic date change mechanism.
3. Push the crown back into its normal operating position (position 0).

### 3.4. Adjusting the Strap

The leather strap features an adjustable buckle closure. To adjust, simply slide the buckle tongue through the desired hole on the strap for a comfortable and secure fit on your wrist.

## 4. OPERATING INSTRUCTIONS

---

### 4.1. Basic Timekeeping

Once the time is set, the watch will continuously display the current time using its three-hand analog movement.

### 4.2. Chronograph Function

The chronograph function allows you to measure elapsed time independently of the main time display.

1. **Start:** Press the top pusher (A) to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press the top pusher (A) again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
3. **Reset:** After stopping the chronograph, press the bottom pusher (B) to reset all chronograph hands to their zero positions.

### 4.3. Water Resistance

Your Fossil Chase FS5484 watch is water resistant up to 100 feet (3 ATM/30 meters). This means it is suitable for splashes, rain, or brief immersion in water. It is **not** suitable for swimming, showering, or diving. Always ensure the crown is fully pushed in before any contact with water.

## 5. MAINTENANCE

---

### 5.1. Cleaning Your Watch

Wipe the watch case and crystal with a soft, dry cloth. For the leather strap, avoid excessive moisture and harsh chemicals. If the strap gets wet, allow it to air dry naturally.

### 5.2. Strap Care

Leather straps can wear over time. To prolong their life, avoid prolonged exposure to direct sunlight, extreme temperatures, and moisture. If the strap becomes stiff or cracked, consider replacing it.

### 5.3. Battery Replacement

The watch is powered by a quartz battery. When the watch stops or the second hand begins to jump erratically (indicating a low battery), it is time for a replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

### 5.4. Water Resistance Precautions

- Do not operate the crown or pushers when the watch is wet or submerged.
- Avoid exposing the watch to sudden temperature changes, which can compromise seals.
- Have the water resistance seals checked periodically, especially after battery replacement.

## 6. TROUBLESHOOTING

---

### 6.1. Watch Not Running

- Check if the crown is fully pushed in (position 0).
- The battery may be depleted. Refer to section 5.3 for battery replacement.

### 6.2. Incorrect Time/Date

- Refer to sections 3.2 and 3.3 for setting the time and date.
- Ensure the crown is fully pushed in after setting.

### 6.3. Chronograph Not Functioning/Resetting to Zero

- Ensure the chronograph is stopped before attempting to reset.
- If hands do not reset to zero, a calibration may be needed. Consult a professional watch repair service.

### 6.4. Water Ingress

If moisture appears inside the watch crystal, immediately take the watch to a qualified service center. Do not attempt to open the watch yourself, as this will void the warranty and may cause further damage.

## 7. SPECIFICATIONS

---

- **Model:** FS5484
- **Movement:** Quartz
- **Case Material:** Stainless Steel
- **Strap Material:** Leather
- **Case Diameter:** 42 mm
- **Case Thickness:** 10 mm
- **Band Width:** Approximately 21.8 mm
- **Band Circumference:** Approximately 9 inches
- **Weight:** 2.4 ounces
- **Water Resistance:** 100 feet (3 ATM/30 meters)

## 8. WARRANTY AND SUPPORT

---

Your Fossil watch is covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included with your purchase for specific terms and conditions, including coverage duration and exclusions.

For service, repairs, or further assistance, please visit the official Fossil website or contact their customer support. You can find more information and support resources by visiting the [Fossil Store](#).