

[Manuals.plus](#) /

› [AULCMEET](#) /

› AULCMEET NS-RC4NA-18 Universal Replacement Remote Control for Insignia TVs

AULCMEET NS-RC4NA-18

AULCMEET NS-RC4NA-18 Universal Replacement Remote Control for Insignia TVs

Model: NS-RC4NA-18 | **Brand:** AULCMEET

INTRODUCTION

This manual provides instructions for the AULCMEET NS-RC4NA-18 universal replacement remote control. This remote is designed to be compatible with a wide range of Insignia TV models, offering a direct replacement without the need for complex programming. Simply insert batteries and begin controlling your television.

Key Features:

- No programming required.
- Direct replacement for original Insignia TV remotes.
- Easy to operate with standard TV functions.
- Infrared connectivity with a maximum range of 33 feet.



New NS-RC4NA-18 Replace Remote Control fit for Insignia TV

NS-22D420NA18	NS-32D220NA18	NS-32D311MX17	NS-32D311NA17	NS-40D420MX18
NS-40D420NA18	NS43D420NA18	NS-43D420NA18	NS-55D420MX18	NS-55D420NA18

Image: The NS-RC4NA-18 remote control displayed alongside an Insignia television, highlighting its compatibility with multiple Insignia TV models.

SETUP

Follow these simple steps to set up your new remote control:

1. **Open the Battery Cover:** Locate the battery compartment on the back of the remote control and slide open the cover.
2. **Install New Batteries:** Insert two (2) AAA alkaline batteries into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside.
3. **Close the Battery Cover:** Slide the battery cover back into place until it clicks securely.
4. **Point and Use:** Point the remote control directly towards your TV's infrared (IR) sensor. Ensure there are no obstructions between the remote and the TV. The remote is now ready for use without any further programming.



Image: Illustration demonstrating the direct usability of the NS-RC4NA-18 remote control, emphasizing that no programming is required and it is easy to use after battery installation.

OPERATING INSTRUCTIONS

The NS-RC4NA-18 remote control provides intuitive access to all standard television functions. Familiarize yourself with the button layout for optimal use.



Image: The NS-RC4NA-18 remote control in use, demonstrating its advanced infrared technology for easy, long-distance, and wide-angle control of a television.

Button Functions:

- **Power Button ():** Turns the TV on or off.
- **Input:** Selects video input sources (HDMI, AV, etc.).
- **Number Buttons (0-9):** Directly select channels.
- **MENU:** Accesses the TV's main menu.
- **Navigation Pad (Up, Down, Left, Right, ENTER):** Navigates through menus and confirms selections.
- **EXIT:** Functions as the HOME key for many Insignia TV models, returning to the main screen.
- **VOL (+/-):** Adjusts the volume level.
- **MUTE:** Mutes or unmutes the TV audio.
- **CH (Up/Down):** Changes TV channels.
- **ACC / CC:** Accesses accessibility features or closed captions.
- **SLEEP:** Sets a sleep timer for the TV.
- **ASPECT:** Adjusts the screen aspect ratio.
- **GAME / PICTURE:** Accesses picture modes or game settings.
- **Media Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback

on compatible devices or TV functions.

Ensure a clear line of sight between the remote's infrared emitter and the TV's IR receiver for reliable operation. The remote has an effective range of up to 33 feet (approximately 10 meters).

MAINTENANCE

Proper care and maintenance will extend the life of your remote control.

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.
- **Cleaning:** Use a soft, dry cloth to clean the remote control. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Do not use abrasive cleaners, alcohol, or solvents.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

If you experience issues with your remote control, try the following troubleshooting steps:

- **Remote Not Responding:**
 - Ensure batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA alkaline batteries.
 - Check for any obstructions between the remote and the TV's IR sensor.
 - Ensure you are within the effective operating range (up to 33 feet) and pointing the remote directly at the TV.
- **Specific Buttons Not Working:**
 - Clean the remote's surface, especially around the unresponsive buttons, to remove any dirt or debris that might be interfering.
 - If only one or two buttons are affected, it might indicate a physical defect.
- **Remote Requires Programming:**
 - This remote is designed for direct use and does not require programming for compatible Insignia TVs. If your TV requires programming, verify its model number against the compatible list.

SPECIFICATIONS

Brand	AULCMEET
Model Name	NSRC4NA18
Model Number	NS-RC4NA-18
Compatible Devices	Television

Compatible Television Models	Insignia NS-55D510NA19, NS-24S310NA19, NS-22D510NA19, NS-40D510NA19, NS-43D420NA18, NS-32D220NA18, NS-39D310NA19, NS-19D310NA19, NS-43D420NA20, NS-40D420NA20, NS-55D420NA20, NS-24D310NA19
Connectivity Technology	Infrared
Maximum Number of Supported Devices	1
Button Quantity	30
Maximum Range	33 feet (10 meters)
Number of Batteries Required	2 AAA batteries
Battery Type	Alkaline
Item Dimensions (L x W x H)	5"L x 1"W x 0.5"H (approximately 12.7cm x 2.54cm x 1.27cm)



Image: Dimensions of the NS-RC4NA-18 remote control, indicating a length of 6.69 inches and a width of 1.97 inches.

WARRANTY INFORMATION

Specific warranty details for this product are not provided in this manual. For information regarding warranty coverage, terms, and conditions, please refer to the product packaging or contact the seller directly at the point of purchase. Keep your purchase receipt as proof of purchase for any warranty claims.

SUPPORT

If you require further assistance or have questions not covered in this manual, please contact the seller or manufacturer through the platform where the product was purchased. Provide your product model number (NS-RC4NA-18) and a detailed description of your issue for efficient support.

