

[manuals.plus](#) /

› [VINABTY](#) /

› [VINABTY AKB75095315 Replacement Remote Control User Manual for LG Smart TVs](#)

## VINABTY AKB75095315 sub for AN-MR18BA

# VINABTY AKB75095315 Replacement Remote Control User Manual

Model: AKB75095315 (replaces AN-MR18BA)

Brand: VINABTY

## INTRODUCTION

This manual provides instructions for the VINABTY AKB75095315 replacement remote control, designed for various LG LED, OLED, and 4K Smart TV models from the 2018 series. This remote offers a straightforward, pre-programmed solution for controlling your compatible LG television.

## SETUP

### 1. Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



*Image: Rear view of the remote control with the battery cover removed, illustrating the correct placement of two AAA batteries.*

## 2. Initial Use (No Programming Required)

This VINABTY remote control is pre-programmed for immediate use with compatible LG Smart TVs. Once the batteries are correctly installed, the remote is ready to operate your television without any additional setup or programming steps.

## OPERATING INSTRUCTIONS

The remote control features a standard layout with dedicated buttons for common functions and popular streaming services. Point the remote directly at your LG TV for optimal performance.



Image: Front view of the remote control highlighting the layout of buttons, including dedicated access for Netflix and Amazon Prime Video.

## Key Functions:

- **Power Button (●):** Turns the TV on or off.
- **Number Pad (0-9):** Direct channel selection.
- **VOL +/-:** Adjusts the volume level.
- **CH PAGE +/-:** Changes TV channels.
- **Navigation Arrows (Up, Down, Left, Right) & OK Button:** Navigates menus and confirms selections.
- **BACK:** Returns to the previous screen or menu.

- **EXIT:** Exits the current menu or application.
- **Home Button (△):** Accesses the TV's smart home dashboard.
- **Netflix & Amazon Buttons:** Direct access to Netflix and Amazon Prime Video streaming services.
- **Mute Button (🔇):** Mutes or unmutes the TV audio.

## COMPATIBILITY

This remote control is compatible with a wide range of LG LED, OLED, and 4K Smart TV models from the 2018 series, including but not limited to:

- **OLED Series:** OLED65B8SUB, OLED65B8PUA, OLED65C8PUA, OLED65C8AUA, OLED65E8PUA, OLED55B8SUB, OLED55B8PUA, OLED55C8AUA, OLED55C8PUA, OLED55E8PUA
- **SK Series:** 65SK9500PUA, 55SK9500PUA, 65SK9550PUA, 65SK9000PUA, 55SK9000PUA, 65SK8550PUA, 55SK8550PUA, 75SK8070PUA, 75SK8050PUA, 75SK8070AUB, 65SK8000AUB, 55SK8000AUB, 65SK8000PUA, 55SK8000PUA, 49SK8000PUA, 65SK8050PUA, 55SK8050PUA, 49SK8050PUA
- **UK Series:** 65UK7700AUB, 65UK7700PUD, 55UK7700AUB, 55UK7700PUD, 49UK7700AUB, 49UK7700PUD, 65UK7500PUA, 55UK7500PUA, 49UK7500PUA, 86UK6570PUB, 75UK6570PUB, 75UK6570PUA, 86UK6570AUA, 75UK6570AUA, 70UK6570PUB, 70UK6550PUA, 70UK6570AUB, 65UK6500AUA, 55UK6500AUA, 50UK6500AUA, 43UK6500AUA, 65UK6550PUB, 55UK6550PUB, 50UK6550PUB, 43UK6550PUB, 65UK6300PUE, 50UK6300PUE, 49UK6300PUE, 55UK6300PUE, 43UK6300PUE, 65UK6300BUB, 65UK6350PUC, 55UK6350PUC, 55UK6300BUB, 50UK6300BUB, 49UK6300BUB, 43UK6300BUB, 49UK6350PUC, 75UK6270PUA, 65UK6200PUA, 43UK6350PUC, 60UK6250PUB, 60UK6200PUA, 55UK6200PUA, 55UK6250PUB, 49UK6200PUA, 49UK6250PUB, 43UK6200PUA, 43UK6250PUB
- **LK Series:** 32IK610BPUA, 49IK5750PUA, 32IK610BBUA, 86UK6570PUA, 43LK5750PUA

## SPECIFICATIONS

Feature	Detail
<b>Brand</b>	VINABTY
<b>Model Number</b>	AKB75095315 (replaces AN-MR18BA)
<b>Product Dimensions</b>	8 x 2 x 0.5 inches
<b>Item Weight</b>	3 ounces
<b>Connectivity Technology</b>	Infrared
<b>Compatible Devices</b>	Television (LG Smart TVs, 2018 Series)
<b>Special Feature</b>	Ergonomic design

## TROUBLESHOOTING

- **Remote not responding:** Ensure batteries are correctly installed with proper polarity. Replace batteries if they are old or depleted.
- **Intermittent response:** Check for any obstructions between the remote control and the TV's infrared

receiver. Ensure you are within the effective range of the TV.

- **Specific buttons not working:** Verify that the button is clean and not stuck. If the issue persists, it may indicate a fault with the remote.

## MAINTENANCE

---

To ensure the longevity and optimal performance of your remote control:

- Keep the remote clean by wiping it with a soft, dry cloth.
- Avoid exposing the remote to extreme temperatures, moisture, or direct sunlight.
- Do not drop the remote or subject it to strong impacts.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.

## WARRANTY AND SUPPORT

---

For information regarding warranty coverage, technical support, or replacement parts, please refer to the manufacturer's documentation included with your purchase or visit the VINABTY official website. Keep your purchase receipt as proof of purchase.