

Nature Clean 10-23250

Nature Clean Dishwasher Rinse Aid Instruction Manual

Brand: Nature Clean | Model: 10-23250

1. PRODUCT OVERVIEW

The Nature Clean Dishwasher Rinse Aid is designed to provide spot-free, streak-free, and sparkling clean dishes, glassware, and cutlery. This liquid rinse agent is formulated to work effectively, especially in hard water conditions, by eliminating water deposits during the final rinse cycle. It is made with 99.7% naturally derived ingredients from plants and minerals, offering a healthier alternative to conventional rinse aids.

Key benefits include:

- Eliminates hard water spots and streaks.
- Leaves dishes sparkling and film-free.
- Formulated with plant and mineral-based ingredients.
- Free from phosphates, dyes, fragrances, alcohol ethoxylates, and petroleum ingredients.
- Biodegradable, hypoallergenic, gluten-free, cruelty-free, and safe for grey water and septic tanks.



NON-TOXIC
SAFE
FOR YOUR
FAMILY
AND THE
ENVIRONMENT

Image: Nature Clean Dishwasher Rinse Aid bottle, highlighting its natural and non-toxic composition.

2. SETUP AND USAGE

To achieve optimal results, follow these simple steps for using your Nature Clean Dishwasher Rinse Aid:

1. **Locate the Rinse Aid Dispenser:** Most dishwashers have a dedicated rinse aid dispenser, typically located near the detergent dispenser on the inside of the dishwasher door. Consult your dishwasher's manual if you are unsure of its location.

2. **Fill the Dispenser:** Open the rinse aid dispenser cap. Carefully pour the Nature Clean Dishwasher Rinse Aid into the dispenser until it reaches the indicated "full" line. Avoid overfilling.
3. **Close the Dispenser:** Securely close the dispenser cap. Ensure it clicks into place to prevent leakage during the wash cycle.
4. **Run Dishwasher:** Load your dishwasher as usual with dishes, glassware, and cutlery. Select your desired wash cycle and start the dishwasher. The rinse aid will be automatically dispensed during the rinse cycle.

Dynamic Duo

FOR ULTIMATE RESULTS



Image: Illustrates the process of pouring the rinse aid into the dishwasher's dispenser for sparkling results.

3. OPERATING PRINCIPLES

The Nature Clean Dishwasher Rinse Aid works by reducing the surface tension of water during the final rinse cycle. This allows water to sheet off dishes more effectively, preventing water droplets from drying and leaving behind mineral deposits, which cause spots and streaks. The citric acid in the formulation further aids in achieving a sparkling finish, particularly beneficial in areas with hard water.

The product ensures that dishes dry faster and more completely, contributing to a flawless finish without the need for towel drying. Its powerful formulation removes stains, spots, and film, leaving items spotless and streak-free.



nature clean.
rinse aid.
99.7% NATURAL

MADE WITHOUT
phosphates
dyes & fragrances
ethoxylated alcohols
petroleum ingredients

Hard Water Specialist

8 U.S. fl. Oz / 250 ml

JUST POUR FOR
Sparkling Results!

1 Fill


2 Run


3 Shine!


Image: A clean wine glass demonstrating the spotless drying effect achieved with the rinse aid.

4. MAINTENANCE AND STORAGE

For optimal performance and longevity of the product, store Nature Clean Dishwasher Rinse Aid in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure the cap is tightly closed after each use to prevent evaporation or contamination.

The product is biodegradable and safe for use with grey water and septic tank systems, minimizing environmental impact. No special maintenance is required for the rinse aid itself, beyond proper storage.

5. TROUBLESHOOTING

If you encounter issues while using the Nature Clean Dishwasher Rinse Aid, consider the following:

- **Dishes still have spots or film:**
 - Ensure the rinse aid dispenser is full.
 - Check your dishwasher's rinse aid setting; some models allow you to adjust the dispense amount. Increase the setting if dishes are still spotty.

- Verify that your dishwasher is functioning correctly and that water pressure is adequate.
 - In extremely hard water areas, additional measures such as a water softener might be necessary, though this rinse aid is designed to be a "Hard Water Specialist."
- **Excessive sudsing:**
 - You may have overfilled the dispenser or the dispenser is leaking. Reduce the amount of rinse aid or check the dispenser cap for a secure seal.
 - Ensure you are using a dishwasher detergent, not hand dish soap.
 - **Product not dispensing:**
 - Check if the dispenser is clogged. Clean it if necessary.
 - Ensure the dispenser cap is properly closed and not preventing release.

If problems persist, consult your dishwasher's user manual or contact the dishwasher manufacturer for specific guidance.

6. SPECIFICATIONS

Attribute	Detail
Product Name	Nature Clean All Natural Dishwasher Rinse Aid Cleaner
Brand	Nature Clean
Model Number	10-23250
Item Form	Liquid
Scent	Unscented
Product Dimensions	1.33 x 2.25 x 7.5 inches (3.38 x 5.72 x 19.05 cm)
Weight	10.08 ounces (285.8 grams)
Volume	8 fl oz (250 ml)
Manufacturer	NATURE CLEAN
Ingredients	Aqua/Water/Eau, Decyl Glucoside, Citric Acid, Tetrasodium Iminodisuccinate
Material Features	Biodegradable, Cruelty-Free, Mineral Based, Natural, Non-Toxic, Organic, Rinse Free, Scent Free, Streak Free

7. SAFETY INFORMATION AND WARNINGS

While Nature Clean Dishwasher Rinse Aid is formulated with natural ingredients, it is important to follow general safety precautions for household cleaning products:

- **Keep Out of Reach of Children and Pets:** Store the product in a secure location inaccessible to children and animals.
- **Avoid Eye Contact:** In case of contact with eyes, rinse thoroughly with water for several minutes. If irritation persists, seek medical attention.

- **Do Not Ingest:** This product is for external use in dishwashers only. If swallowed, drink a glass of water and consult a physician.
- **Skin Contact:** Prolonged skin contact is generally not harmful, but rinse hands after use.
- **Ventilation:** Use in a well-ventilated area.

Legal Disclaimer: Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. (Note: This disclaimer was provided in the product data and is included for completeness, though its direct relevance to a rinse aid may vary.)



Image: Emphasizes the product's composition from plant and mineral-based ingredients, free from dyes, perfumes, phosphates, ethoxylated alcohols, and petroleum ingredients.

8. WARRANTY AND SUPPORT

Specific warranty information for the Nature Clean Dishwasher Rinse Aid is not provided in the product details. For any product-related inquiries, support, or to learn more about Nature Clean products, please visit the official Nature Clean store on Amazon:

[Visit the Nature Clean Store](#)

9. OFFICIAL PRODUCT VIDEOS

No official product videos from the seller are available for embedding at this time.