

USARMT USARMT-oCosmo-V2

USARMT Replacement Remote Control User Manual

For oCosmo V2 TV DVD Combo Sound Bar Remote Compatible with oCosmo TVs E32 CE3200V-WX2201P71, E32 CE3200V-XVN020

INTRODUCTION

This user manual provides instructions for the USARMT replacement remote control, designed for seamless compatibility with various oCosmo TV models, including E32 CE3200V-WX2201P71 and E32 CE3200V-XVN020. This remote is pre-programmed and requires no additional setup or programming for basic functionality. It is intended to replace your original oCosmo TV, DVD Combo, and Sound Bar remote.

SETUP

The USARMT replacement remote control is pre-programmed for immediate use with compatible oCosmo TV models. No complex setup or programming is required. Simply install the batteries, and the remote will be ready to operate your device.

Battery Installation


- 1. Locate the battery compartment on the back of the remote control.
- 2. Slide open the battery compartment cover.
- 3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
- 4. Close the battery compartment cover securely.

Once batteries are installed, the remote is ready for operation.

OPERATING INSTRUCTIONS

Familiarize yourself with the layout and functions of the remote control buttons. Below is an image of the remote, followed by a description of each button's primary function.



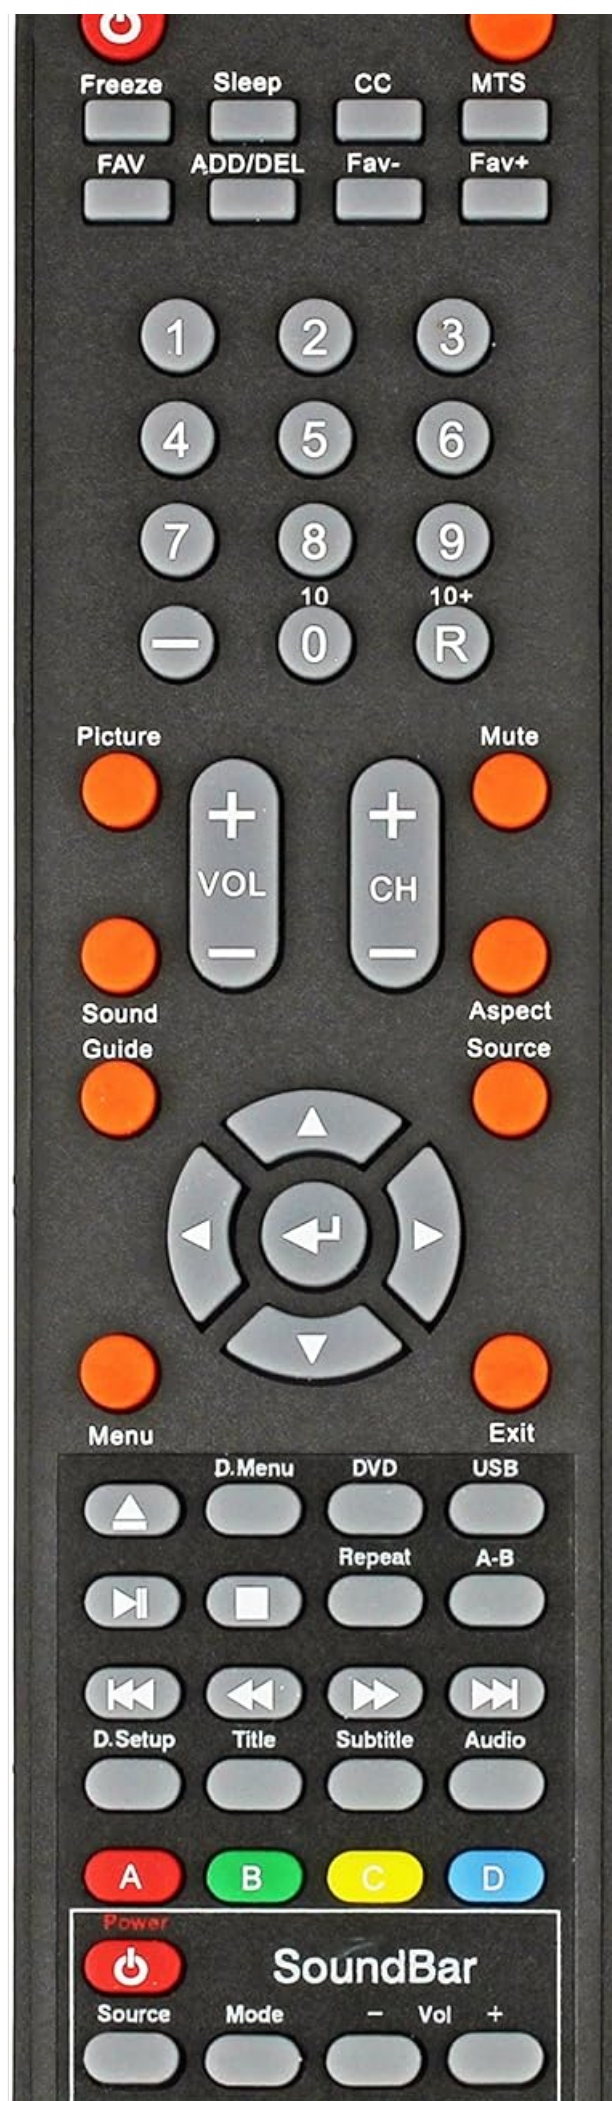

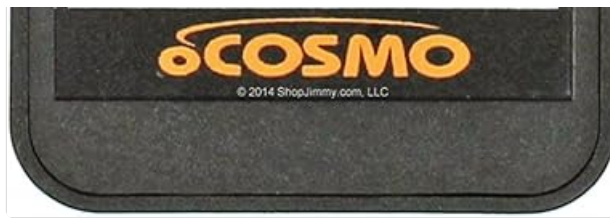


Figure 1: USARMT Replacement Remote Control Layout

This image displays the full layout of the USARMT replacement remote control. At the top, there's a red Power button and an orange Info button. Below these are function buttons like Freeze, Sleep, CC (Closed Caption), MTS (Multi-channel Television Sound), FAV (Favorites), ADD/DEL (Add/Delete), Fav- (Favorite Minus), and Fav+ (Favorite Plus). The central section features a numeric keypad (0-9, 10, 10+, R).

Further down, there are dedicated buttons for Picture, Mute, Sound Guide, and Aspect Source, alongside large grey Volume (VOL) and Channel (CH) rocker buttons. The navigation cluster includes Menu, directional arrows (up, down, left, right), and an Enter/OK button in the center, with an Exit button to the right. The lower part of the remote contains media playback controls such as D.Menu (Disc Menu), DVD,

USB, Repeat, A-B (A-B Repeat), Stop, Play/Pause, Rewind, Fast Forward, Previous Track, Next Track, D.Setup (Disc Setup), Title, Subtitle, and Audio. Four colored buttons (A-Red, B-Green, C-Yellow, D-Blue) are also present. At the very bottom, there's a dedicated SoundBar section with its own Power, Source, Mode, and Volume controls.

Button Functions

- **Power (Red Button):** Turns the TV or connected device on or off.
- **Info (Orange Button):** Displays on-screen information about the current program or input.
- **Freeze:** Pauses the current video frame.
- **Sleep:** Sets a timer for the TV to automatically turn off.
- **CC (Closed Caption):** Toggles closed captions on or off.
- **MTS (Multi-channel Television Sound):** Selects audio modes (e.g., Stereo, SAP).
- **FAV (Favorites):** Accesses favorite channels.
- **ADD/DEL:** Adds or deletes channels from the favorite list.
- **Fav- / Fav+:** Navigates through favorite channels.
- **Numeric Keypad (0-9, 10, 10+, R):** Directly enters channel numbers or menu selections. '10' and '10+' are for two-digit channel entry or specific functions. 'R' may be for Recall or Return.
- **Picture:** Adjusts picture modes or settings.
- **VOL +/-:** Increases or decreases the volume level.
- **CH +/-:** Changes the channel up or down.
- **Mute (Orange Button):** Mutes or unmutes the audio.
- **Sound Guide:** Accesses audio settings or sound modes.
- **Aspect Source:** Changes the screen aspect ratio or video input source.
- **Menu (Orange Button):** Opens the main menu of the TV or device.
- **Directional Arrows (Up, Down, Left, Right):** Navigates through menus and options.
- **Enter/OK (Center Button):** Confirms selections in menus.
- **Exit (Orange Button):** Exits the current menu or function.
- **D.Menu (Disc Menu):** Accesses the DVD disc menu.
- **DVD:** Switches to DVD input or controls DVD functions.
- **USB:** Switches to USB input or controls USB media playback.
- **Repeat:** Repeats playback of a track or chapter.
- **A-B:** Sets A-B repeat playback.
- **Media Playback Controls (Play/Pause, Stop, Rewind, Fast Forward, Previous Track, Next Track):** Standard

controls for media playback on DVD or USB.

- **D.Setup (Disc Setup):** Accesses setup options for DVD playback.
- **Title:** Returns to the DVD title menu.
- **Subtitle:** Toggles or selects subtitle tracks.
- **Audio:** Selects audio tracks or languages.
- **Color Buttons (A-Red, B-Green, C-Yellow, D-Blue):** Functions vary depending on the on-screen prompts or specific applications.
- **SoundBar Power:** Turns the connected SoundBar on or off.
- **SoundBar Source:** Changes the input source for the SoundBar.
- **SoundBar Mode:** Changes the sound mode for the SoundBar.
- **SoundBar Vol +/-:** Adjusts the volume of the SoundBar.

MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your remote control.

- **Cleaning:** Use a soft, dry cloth to wipe the remote control. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials.
- **Battery Care:** If the remote will not be used for an extended period, remove the batteries to prevent leakage, which can damage the remote. Replace batteries when the remote's responsiveness decreases.
- **Storage:** Store the remote in a cool, dry place, away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

If you encounter issues with your remote control, try the following troubleshooting steps:

- **Remote Not Responding:**
 - Check the batteries. Ensure they are inserted correctly with the correct polarity (+/-).
 - Replace old or depleted batteries with new ones.
 - Ensure there is a clear line of sight between the remote control and the TV's infrared (IR) receiver. Obstructions can block the signal.
 - Make sure you are within the effective operating range of the remote (typically up to 20 feet).
- **Specific Buttons Not Working:**
 - Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris that might be preventing proper contact.
 - If only certain functions are not working, ensure the TV or device is powered on and in the correct mode (e.g., DVD functions won't work if the TV is not on the DVD input).
- **Interference:**
 - Bright lights, especially fluorescent or LED lighting, can sometimes interfere with IR signals. Try operating the remote in different lighting conditions.

SPECIFICATIONS

Brand	USARMT
Compatible Models	oCosmo E32 CE3200V-WX2201P71, oCosmo E32 CE3200V-XVN020 (and other compatible oCosmo TV, DVD Combo, Sound Bar models)
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Power Source	2 x AAA Batteries (not included)
Product Dimensions	7 x 1.5 x 0.5 inches
Item Weight	4 ounces
Special Feature	Ergonomic Design

WARRANTY AND SUPPORT

This USARMT replacement remote control comes with a 30-day hassle-free return policy. For any issues or support inquiries, please refer to the retailer or platform where the product was purchased for assistance regarding returns or exchanges within the specified period.

For further assistance, please contact USARMT customer support through the contact information provided on your purchase receipt or the seller's page.

© 2024 USARMT. All rights reserved.
Product Model: USARMT-oCosmo-V2

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07PRM9YRK>

More documents and user manuals: <https://manuals.plus/>