

Karlssoon KA5753

Karlssoon KA5753GR Digital Alarm Clock User Manual

Model: KA5753 | Brand: Karlssoon

1. INTRODUCTION

Thank you for purchasing the Karlssoon KA5753GR Digital Alarm Clock. This compact and stylish alarm clock features a clear LCD display with backlight, a gummy rubberized finish, and essential functions for timekeeping and alarming. This manual provides detailed instructions to help you set up and operate your new alarm clock effectively.

2. PACKAGE CONTENTS

- Karlssoon KA5753GR Digital Alarm Clock
- User Manual

3. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your alarm clock.



Figure 3.1: Front View. This image displays the front of the Karlssoon KA5753GR Digital Alarm Clock. The large, clear LCD screen shows the time in a digital format. On the top surface, a transparent 'SNOOZE-LIGHT' bar is visible, flanked

by 'H' (Hour) and 'M' (Minute) buttons. The clock's body is a soft green, rubberized material.



Figure 3.2: Back View. This image shows the rear of the Karlsson KA5753GR Digital Alarm Clock. A 'TIME SET' button is located on the left. Below it, the brand 'KARLSSON' and 'MADE IN CHINA' are printed. To the right, a battery compartment cover is visible, along with a small 'ON/OFF' switch, likely for the alarm function.

Control Buttons:

- **SNOOZE-LIGHT Bar:** Press to activate backlight or snooze the alarm.
- **H Button:** Used to adjust the hour.
- **M Button:** Used to adjust the minute.
- **TIME SET Button:** Used to enter time setting mode.
- **ON/OFF Switch:** Located at the back, used to enable or disable the alarm.

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment on the back of the alarm clock (refer to Figure 3.2).
2. Slide open the battery compartment cover.
3. Insert the required batteries (not included) according to the polarity indicators (+ and -) inside the compartment.
4. Close the battery compartment cover securely.

4.2 Initial Time Setting

1. After installing batteries, the display will light up.
2. Press and hold the **TIME SET** button on the back until the hour digits start flashing.
3. Use the **H** button on the top to adjust the hour.
4. Press the **TIME SET** button again to confirm the hour and move to minute setting. The minute digits will flash.
5. Use the **M** button on the top to adjust the minutes.
6. Press the **TIME SET** button one last time to confirm the minutes and exit time setting mode.

5. OPERATING INSTRUCTIONS

5.1 Setting the Alarm

1. Ensure the alarm ON/OFF switch on the back is in the 'OFF' position during setting to avoid accidental activation.
2. Press the **TIME SET** button once briefly (do not hold). The display will show the current alarm time, and the hour digits will flash.
3. Use the **H** button to set the desired alarm hour.
4. Press the **TIME SET** button again. The minute digits will flash.
5. Use the **M** button to set the desired alarm minutes.
6. Press the **TIME SET** button one last time to confirm the alarm time and exit alarm setting mode.
7. To activate the alarm, slide the **ON/OFF** switch on the back to the 'ON' position. A small alarm icon may appear on the display to indicate it is active.

5.2 Snooze Function

- When the alarm sounds, press the **SNOOZE-LIGHT** bar on the top of the clock.
- The alarm will temporarily stop and sound again after a few minutes (typically 5-9 minutes, depending on the model's default setting).

5.3 Backlight Activation

- To illuminate the display in low light conditions, briefly press the **SNOOZE-LIGHT** bar.
- The backlight will activate for a few seconds and then turn off automatically.

5.4 Disabling the Alarm

- To turn off the alarm completely, slide the **ON/OFF** switch on the back to the 'OFF' position. The alarm icon on the display should disappear.
- To stop a sounding alarm without snoozing, press any button other than the **SNOOZE-LIGHT** bar (e.g., H or M). The alarm will stop and reset for the next day.

6. MAINTENANCE

- Clean the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the clock to extreme temperatures, direct sunlight, or high humidity.
- If the clock will not be used for an extended period, remove the batteries to prevent leakage.

7. TROUBLESHOOTING

- **Display is blank or dim:**
 - Check if batteries are inserted correctly with correct polarity.
 - Replace old batteries with new ones.
- **Alarm does not sound:**
 - Ensure the alarm ON/OFF switch on the back is in the 'ON' position.
 - Verify that the alarm time is set correctly.
 - Check battery level.
- **Time is incorrect:**

- Re-set the time following the instructions in Section 4.2.


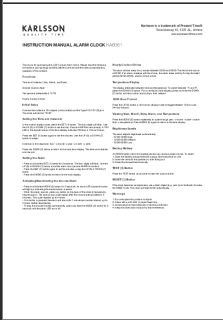
8. SPECIFICATIONS

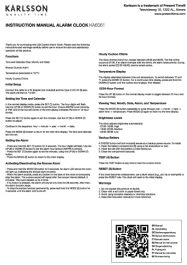
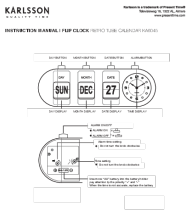
Brand	Karlsson
Model Number	KA5753
Color	Green
Display Type	Digital
Special Feature	Alarm, Backlight
Product Dimensions (W x H)	5.51" x 2.76" (14 x 7 cm)
Power Source	Battery Powered
Material	Rubberized ABS (Acrylonitrile Butadiene Styrene)
Item Weight	7.1 ounces (200 Grams)

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the point of purchase or contact Karlsson customer service through their official website. Keep your purchase receipt as proof of purchase.

Related Documents

	<p>Karlsson KA6039 Alarm Clock: User Manual and Features</p> <p>Comprehensive guide to the Karlsson KA6039 alarm clock, covering product specifications, features like display modes, alarms, brightness settings, sound control, and usage instructions. Includes setup, maintenance, and troubleshooting tips.</p>
	<p>Karlsson KA6061 LED Cuckoo Alarm Clock Instruction Manual</p> <p>Comprehensive guide for the Karlsson KA6061 LED Cuckoo Alarm Clock, covering setup, functions, alarm settings, and troubleshooting.</p>

 The image shows the first page of the instruction manual for the Karlsson KA6061 LED Cuckoo Alarm Clock. It features the Karlsson logo at the top left, followed by the product name and a QR code at the bottom right. The text is in English and provides an overview of the clock's features and basic instructions.	<p>Karlsson KA6061 LED Cuckoo Alarm Clock Instruction Manual</p> <p>Comprehensive instructions for setting up and operating the Karlsson KA6061 LED Cuckoo Alarm Clock, including functions, time and calendar settings, alarm, snooze, temperature display, and warnings.</p>
 The image shows the first page of the instruction manual for the Karlsson KA6045 Retro Tube Calendar Flip Clock. It features the Karlsson logo at the top left, followed by the product name and a diagram of the clock's internal components at the bottom. The text is in English and provides an overview of the clock's features and basic instructions.	<p>Karlsson KA6045 Retro Tube Calendar Flip Clock: Instruction Manual</p> <p>Comprehensive instruction manual for the Karlsson KA6045 Retro Tube Calendar Flip Clock. Covers setup, time and alarm setting, battery installation, maintenance, warranty, and symbol explanations in English.</p>