

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Cadac](#) /

› [Cadac CITI Chef 40 2700 W Gas Barbecue User Manual](#)

## Cadac 5610-20-12-EF

# Cadac CITI Chef 40 Gas Barbecue User Manual

Model: 5610-20-12-EF

## 1. INTRODUCTION

Thank you for choosing the Cadac CITI Chef 40 Gas Barbecue. This manual provides essential information for the safe and efficient use of your appliance. Please read these instructions carefully before assembly, installation, or operation, and retain them for future reference.

## Important Safety Information

- Always use the appliance in a well-ventilated area.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Keep children and pets away from the barbecue during use.
- Ensure all gas connections are secure and leak-free before operation.
- Never leave the appliance unattended while in use.

## 2. PRODUCT COMPONENTS

The Cadac CITI Chef 40 is designed for ease of use and portability. Familiarize yourself with the main components:

- Lid with integrated thermometer
- GreenGrill ceramic coated grill plate
- Pot stand
- Removable fat pan
- Burner unit with Piezo ignition
- Appliance body with gas control knob
- Carry bag (for storage and transport)
- Brush and Spatula
- Recipe Booklet



Figure 2.1: Exploded view showing the lid, grill plate, pot stand, and main burner unit of the Cadac CITI Chef 40.

This image illustrates the primary components of the CITI Chef 40, including the domed lid, the grill plate for cooking, the pot stand for various cookware, and the main body housing the burner and control knob. Understanding these parts is crucial for proper assembly and operation.

### 3. SETUP AND INITIAL CONNECTION

The Cadac CITI Chef 40 requires minimal assembly. Follow these steps for safe initial setup:

- 1. Unpacking:** Carefully remove all components from the packaging. Retain packaging for storage if desired.
- 2. Placement:** Place the barbecue on a stable, level, non-combustible surface outdoors. Ensure adequate clearance from combustible materials (walls, fences, etc.).
- 3. Gas Supply Connection:**
  - Ensure the gas control knob on the appliance is in the 'OFF' position.
  - Connect the appropriate gas hose and regulator (not included, sold separately) to your gas cylinder and then to the gas inlet on the side of the CITI Chef 40.
  - Tighten all connections securely by hand, then use a wrench if necessary, but do not overtighten.
  - Leak Test:** Before first use and after every gas cylinder change, perform a leak test. Apply a soapy water solution to all gas connections. If bubbles appear, there is a leak. Tighten connections and re-test. If leaks persist, do not use the appliance and contact customer support.
- 4. Insert Fat Pan:** Place the removable fat pan into the main body of the barbecue.
- 5. Select Cooking Surface:** Choose either the GreenGrill ceramic coated grill plate or the pot stand and place it securely on the fat pan.



Figure 3.1: The Cadac CITI Chef 40 Gas Barbecue in its assembled state with the lid closed, ready for gas connection.

This image displays the complete Cadac CITI Chef 40 unit with its lid closed, showcasing its compact design. The gas inlet is visible on the side, where the gas hose and regulator will be connected to the gas supply.

## 4. OPERATING INSTRUCTIONS

### Ignition Procedure (Piezo Ignition)

1. Ensure the gas cylinder valve is fully open.
2. Push in the control knob and turn it counter-clockwise to the 'HIGH' position.
3. Simultaneously, press and hold the Piezo igniter button (usually integrated into the control knob or a separate button nearby) for a few seconds until the burner ignites. You should hear a click and see a flame.
4. If the burner does not ignite within 5 seconds, turn the control knob to 'OFF', wait 5 minutes for gas to disperse, and repeat the ignition procedure.
5. Once ignited, release the control knob.

## Temperature Control and Cooking

- The flame intensity can be adjusted by turning the control knob between 'LOW' and 'HIGH' settings.
- The integrated thermometer in the lid provides an indication of the internal cooking temperature.
- The GreenGrill ceramic coated grill plate offers excellent heat distribution and non-stick properties for grilling.
- The pot stand allows for boiling water, simmering, or using other cookware.
- Always preheat the cooking surface for 5-10 minutes before placing food on it for optimal results.



Figure 4.1: The Cadac CITI Chef 40 with its lid open, revealing the GreenGrill ceramic coated grill plate.

This image shows the CITI Chef 40 with its lid raised, exposing the primary cooking surface, the GreenGrill ceramic coated grill plate. This surface is ideal for grilling various foods, and its non-stick properties aid in cooking and cleaning.



Figure 4.2: The Cadac CITI Chef 40 with its lid open, showing the pot stand in place over the burner.

This image illustrates the CITI Chef 40 configured with the pot stand. This accessory allows users to place pots, pans, or kettles directly over the burner, expanding the cooking versatility beyond just grilling.

## 5. CARE AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Cadac CITI Chef 40.

### Cleaning

- **After Each Use:** Allow the appliance to cool completely. Remove the cooking surface and fat pan. Wash these parts with warm, soapy water. The GreenGrill surface can be cleaned with a soft brush or sponge. Avoid abrasive cleaners or metal scourers.
- **Appliance Body:** Wipe the exterior with a damp cloth. Do not immerse the main body in water.

- **Burner:** Periodically check the burner for blockages (e.g., insect nests). Clean with a soft brush if necessary.
- **Fat Pan:** Empty and clean the fat pan regularly to prevent grease build-up and potential flare-ups.

## Storage

- Ensure the appliance is clean and dry before storing.
- Disconnect the gas cylinder and store it in a well-ventilated area, away from direct sunlight and heat sources.
- The CITI Chef 40 comes with a convenient carry bag for easy storage and transport.
- Store the barbecue in a dry, protected area when not in use for extended periods.



Figure 5.1: The Cadac CITI Chef 40 neatly packed into its dedicated carry bag for convenient storage and transport.

This image demonstrates the portability and ease of storage for the CITI Chef 40, showing the unit securely placed within its custom-fitted carry bag. This feature protects the barbecue and makes it easy to move.

## 6. TROUBLESHOOTING

If you encounter issues with your Cadac CITI Chef 40, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Burner does not ignite.	Gas cylinder empty or valve closed. Gas connections loose. Igniter not sparking. Burner ports blocked.	Check gas level and open valve. Tighten all gas connections and perform leak test. Check igniter electrode for damage or dirt. Use a long match or lighter to ignite manually. Clean burner ports with a soft brush.
Low flame or uneven heat.	Low gas pressure. Burner ports partially blocked. Regulator malfunction.	Check gas cylinder level. Ensure regulator is correctly fitted. Clean burner ports. Replace regulator if suspected faulty.
Gas smell detected.	Gas leak.	Immediately turn off gas supply. Perform a leak test with soapy water. Do not use the appliance until the leak is resolved. If unable to resolve, contact a qualified technician.
Flare-ups during cooking.	Excessive fat build-up in fat pan. High heat setting.	Clean fat pan regularly. Ensure it is free of excessive grease. Reduce heat setting. Trim excess fat from food.

If the problem persists after attempting these solutions, please contact Cadac customer support or a qualified service technician.

## 7. TECHNICAL SPECIFICATIONS

Below are the key technical specifications for the Cadac CITI Chef 40 Gas Barbecue:

Feature	Detail
Model Number	5610-20-12-EF
Brand	Cadac
Fuel Type	Gas
Heating Power	2700 Watts
Voltage	230 Volts
Special Feature	Non-Stick Coating (GreenGrill)

Feature	Detail
Material	Stainless Steel (Frame), Plastic (Body), Ceramic (Grill Coating)
Item Dimensions (L x W x H)	16.61 x 16.61 x 13.15 inches (42.19 x 42.19 x 33.40 cm)
Item Weight	12.76 pounds (5.8 Kilograms)
Installation Type	Free Standing
Assembly Required	No (minimal setup)
Included Components	Brush, Lid, Recipe Booklet, Spatula

## 8. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the documentation provided with your purchase or visit the official Cadac website. Warranty terms and conditions may vary by region.

### Customer Support

If you have any questions, require technical assistance, or need to report a problem with your Cadac CITI Chef 40, please contact Cadac customer support through their official website or the contact details provided in your product packaging.

© 2023 Cadac. All rights reserved. Information subject to change without notice.

### Related Documents - 5610-20-12-EF

	<p><a href="#">CADAC Citi Chef 40 User Instructions</a>  Comprehensive user instructions for the CADAC Citi Chef 40 gas barbecue, model number 5610. This guide covers general information, safety precautions, operating instructions, fitting and changing gas cylinders, cleaning, maintenance, storage, and warranty details.</p>
	<p><a href="#">CADAC Citi Chef 40 User Instructions and Manual</a>  Comprehensive user instructions and manual for the CADAC Citi Chef 40 gas grill (Model No. 5610), covering setup, operation, safety, maintenance, and warranty. Available in multiple languages.</p>

	<p><a href="#"><u>CADAC Citi Chef 40 Gas Grill User Instructions and Safety Guide</u></a></p> <p>Comprehensive user instructions, safety information, maintenance, and warranty details for the CADAC Citi Chef 40 gas grill (Model No: 5610).</p>
	<p><a href="#"><u>CADAC Citi Chef 50 User Instructions and Safety Guide</u></a></p> <p>Detailed user manual for the CADAC Citi Chef 50 BBQ, covering setup, operation, safety precautions, maintenance, cleaning, and troubleshooting. Includes information on various cooking surfaces and international contact details.</p>
	<p><a href="#"><u>CADAC Carri Chef 50 User Instructions</u></a></p> <p>Comprehensive user instructions for the CADAC Carri Chef 50 gas barbecue, model number 8910. This guide covers assembly, safe operation, maintenance, troubleshooting, and warranty information.</p>
	<p><a href="#"><u>CADAC Safari Chef 30 LP Portable Gas Barbecue - Operating Manual</u></a></p> <p>Comprehensive operating manual for the CADAC Safari Chef 30 LP portable gas barbecue, covering safety instructions, assembly, usage, maintenance, and technical specifications.</p>