

[Manuals.plus](#) /

› [Litton](#) /

› Litton Micro-Browner Microwave Oven Browning Dish Instruction Manual

## Litton Micro-Browner

# Litton Micro-Browner Microwave Oven Browning Dish Instruction Manual

Model: Micro-Browner

## INTRODUCTION

This manual provides comprehensive instructions for the proper use, care, and maintenance of your Litton Micro-Browner Microwave Oven Browning Dish. Designed to enhance your microwave cooking experience, this dish allows you to brown and crisp foods that typically remain soft or pale in a microwave oven. Please read this manual thoroughly before first use to ensure optimal performance and longevity of your browning dish.

## PRODUCT OVERVIEW

The Litton Micro-Browner is a specialized cooking dish designed to absorb microwave energy and convert it into intense heat, creating a browning effect on food. Its unique design includes a primary cooking surface and a surrounding channel for collecting drippings.



**Figure 1:** The Litton Micro-Browner Microwave Oven Browning Dish. This white, rectangular dish features a main cooking area and integrated handles. It is designed to brown and crisp foods in a microwave oven.

#### Key Features:

- **Browning Surface:** Specially coated surface that heats rapidly to brown food.
- **Drip Channel:** A perimeter channel designed to collect juices and fats, keeping food crisp.
- **Integrated Handles:** For safe and easy handling.
- **Stable Base:** Four built-in feet ensure stability within the microwave.

## SETUP

Before first use, wash the Litton Micro-Browner dish thoroughly with warm, soapy water. Rinse completely and dry with a soft cloth. Ensure the dish is completely dry before placing it in the microwave oven.

**Important Safety Note:** Always handle the browning dish with oven mitts or heat-resistant gloves, as it will become extremely hot during use.

## OPERATING INSTRUCTIONS

Follow these steps for effective browning with your Litton Micro-Browner dish:

1. **Preheating the Dish:** Place the empty Litton Micro-Browner dish in your microwave oven. Heat on HIGH power for 3 to 5 minutes, or until the browning surface is very hot. The exact time may vary depending on your microwave's wattage.

2. **Adding Food:** Carefully remove the hot dish from the microwave using oven mitts. Quickly place the food you wish to brown (e.g., bacon, sausages, chicken pieces, sandwiches) directly onto the hot browning surface.
3. **Microwave Cooking:** Return the dish with food to the microwave. Cook on HIGH power according to your recipe or until desired browning is achieved. Cooking times will vary based on the type and quantity of food.
4. **Turning Food:** For even browning, it may be necessary to turn the food halfway through the cooking process.
5. **Removal:** Once cooking is complete, carefully remove the dish from the microwave using oven mitts. Transfer food to a serving plate.

*Tip: For best results, avoid overcrowding the browning surface. Cook in batches if necessary.*

## CARE AND MAINTENANCE

Proper care will extend the life of your Litton Micro-Browner dish:

- **Cleaning:** Allow the dish to cool completely before cleaning. Wash by hand with warm, soapy water and a non-abrasive sponge or cloth.
- **Do NOT use abrasive cleaners, scouring pads, or metal utensils** as these can damage the non-stick browning surface.
- **Dishwasher Safety:** This dish is **NOT dishwasher safe**. Hand washing is required.
- **Storage:** Store the dish in a dry place.

## TROUBLESHOOTING

| Problem                  | Possible Cause                                                                        | Solution                                                                                                                        |
|--------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| Food is not browning.    | Dish not preheated sufficiently.<br>Microwave power too low. Food quantity too large. | Ensure dish is very hot before adding food (preheat 3-5 minutes). Use HIGH power setting. Cook smaller batches.                 |
| Food sticks to the dish. | Dish not hot enough. Insufficient fat on food. Damaged browning surface.              | Preheat dish thoroughly. Lightly grease the dish or food if necessary. Avoid using metal utensils that can scratch the surface. |
| Dish smokes during use.  | Food residue on the dish. Overheating.                                                | Ensure dish is clean before use. Do not exceed recommended preheating times significantly.                                      |

## SPECIFICATIONS

| Attribute   | Detail                                  |
|-------------|-----------------------------------------|
| Brand       | Litton (originally)                     |
| Model       | Micro-Browner                           |
| Material    | Metal (with non-stick browning surface) |
| Color       | White                                   |
| Finish Type | Non-Stick                               |

| Attribute                       | Detail                              |
|---------------------------------|-------------------------------------|
| Shape                           | Rectangular                         |
| Overall Dimensions (L x W)      | 14.25" x 10.75" (including handles) |
| Cooking Area Dimensions (L x W) | Approximately 10.75" x 8.5"         |
| Dishwasher Safe                 | No (Hand wash only)                 |
| Microwave Oven Safe             | Yes (for browning in microwave)     |

## WARRANTY AND SUPPORT

As this is a vintage product, direct manufacturer warranty and support may no longer be available. For any issues or questions regarding the use of this Litton Micro-Browner dish, please refer to the troubleshooting section of this manual or consult with experienced users of similar vintage microwave browning dishes.

For general microwave cooking safety and best practices, please refer to your microwave oven's instruction manual.

© 2023 Litton Micro-Browner Instruction Manual. All rights reserved. Information subject to change without notice.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

