

[Manuals.plus](#) /

› [Brandson](#) /

› Brandson Retro Design Floor Fan 301492 Instruction Manual

Brandson 301492

Brandson Retro Design Floor Fan Instruction Manual

Model: 301492

INTRODUCTION

Thank you for choosing the Brandson Retro Design Floor Fan. This manual provides important information for the safe and efficient use of your new fan. Please read these instructions carefully before operating the appliance and keep them for future reference.

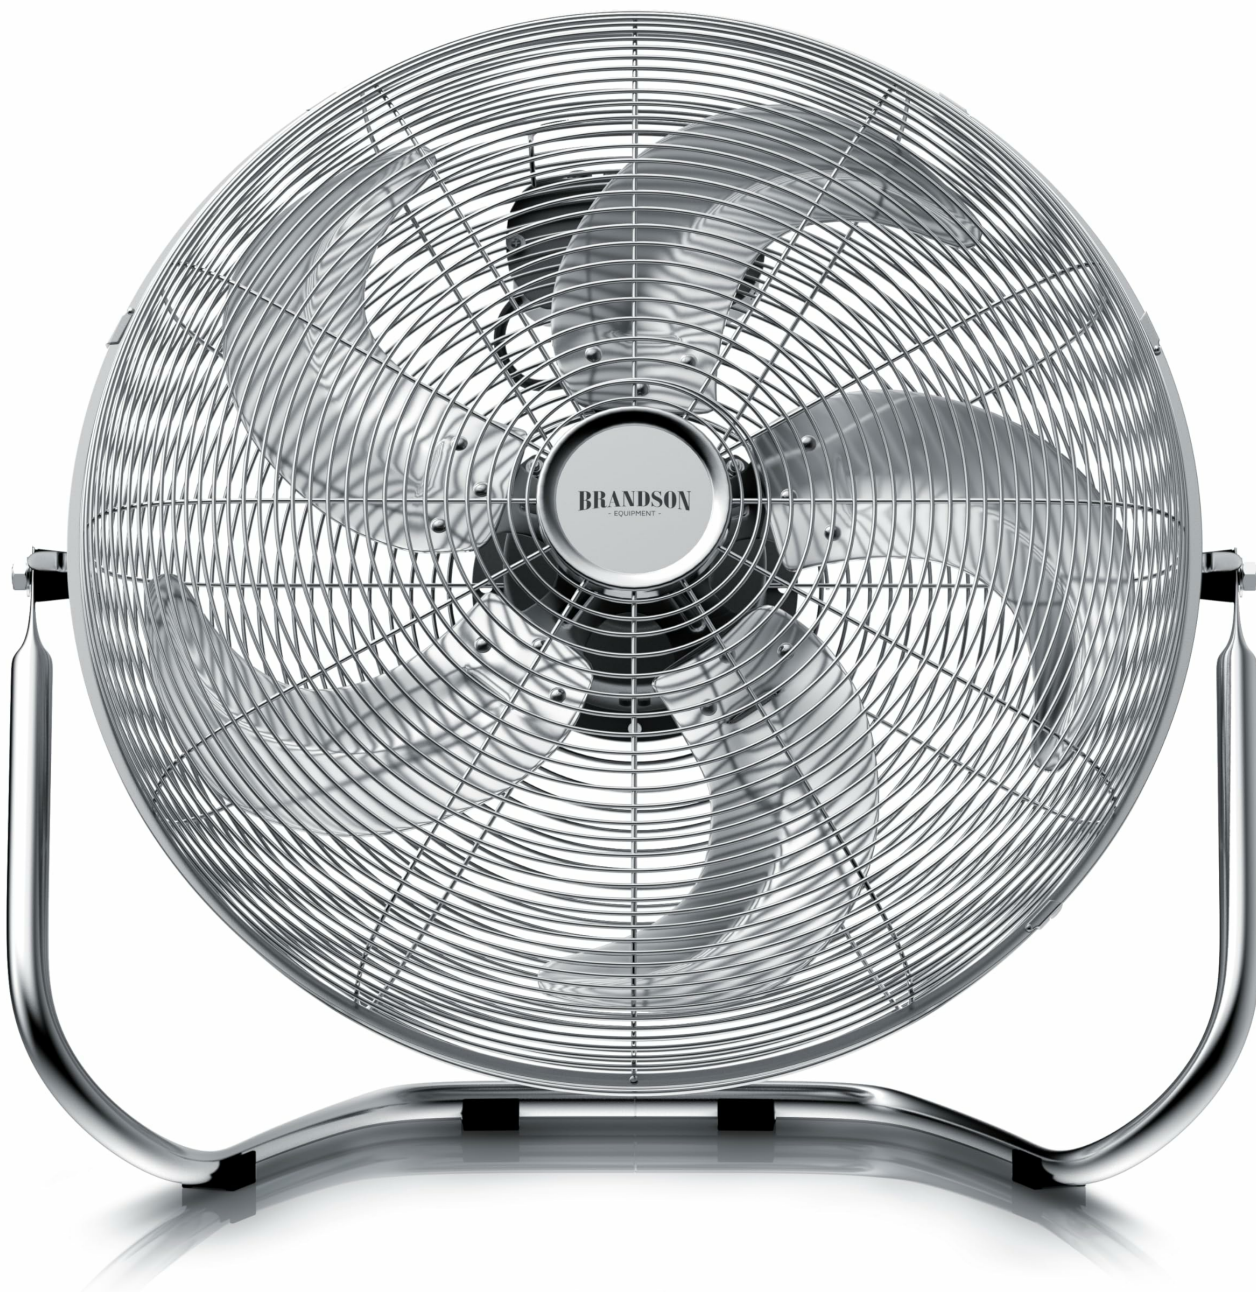 


Image 1: The Brandson Retro Design Floor Fan, showcasing its metallic chrome finish and robust construction. This image provides an overall view of the product.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using this fan.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect fan, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow fingers or foreign objects to enter any ventilation or exhaust opening as this may cause an

electric shock or fire, or damage the fan.

- Do not block air intakes or exhaust in any manner. Do not use on any soft surface, like a bed, where openings may become blocked.
- This fan is intended for indoor use only. Do not use outdoors.
- This fan is not intended for use in wet or damp locations.
- Always place the fan on a stable, flat surface to prevent it from tipping over.
- Unplug the fan from the outlet when not in use, when moving it from one location to another, and before cleaning.
- Do not operate the fan in the presence of explosive and/or flammable fumes.
- Keep the fan out of reach of children.

PRODUCT OVERVIEW

The Brandson Retro Design Floor Fan (Model 301492) is a powerful and stylish ventilation solution. It features a robust metallic construction, a 50 cm diameter, and offers three adjustable speed settings. The fan head can be tilted up to 120 degrees, allowing for precise airflow direction.

Key Features:

- **Retro Metallic Design:** Durable chrome finish for a classic aesthetic.
- **High Airflow:** Powerful 120 Watt motor with 3 blades, delivering up to 1450 RPM.
- **Adjustable Speeds:** Three speed settings (low, medium, high) for customized comfort.
- **120° Tilt Function:** Manually adjust the fan head to direct airflow precisely where needed.
- **Integrated Carry Handle:** For easy portability.
- **Stable Base:** Designed for floor mounting, ensuring stability.

BRANDSON
- EQUIPMENT -

MACHINE À VENT L

DÉTAILS DU PRODUIT



Poignée
de transport
incluse



Pivotant
à 120°



Testé GS pour une
sécurité optimale

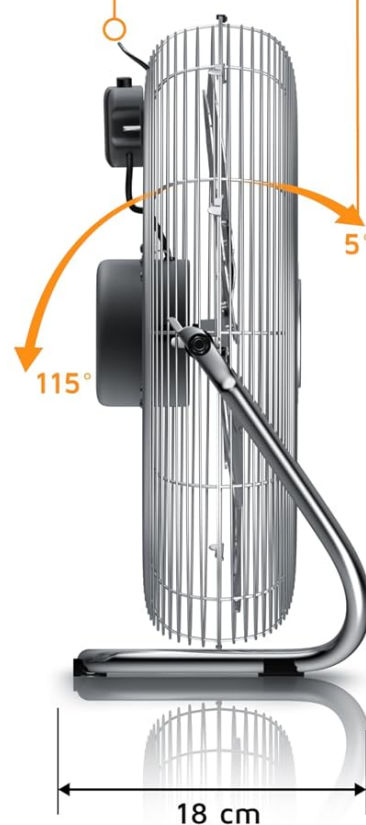 
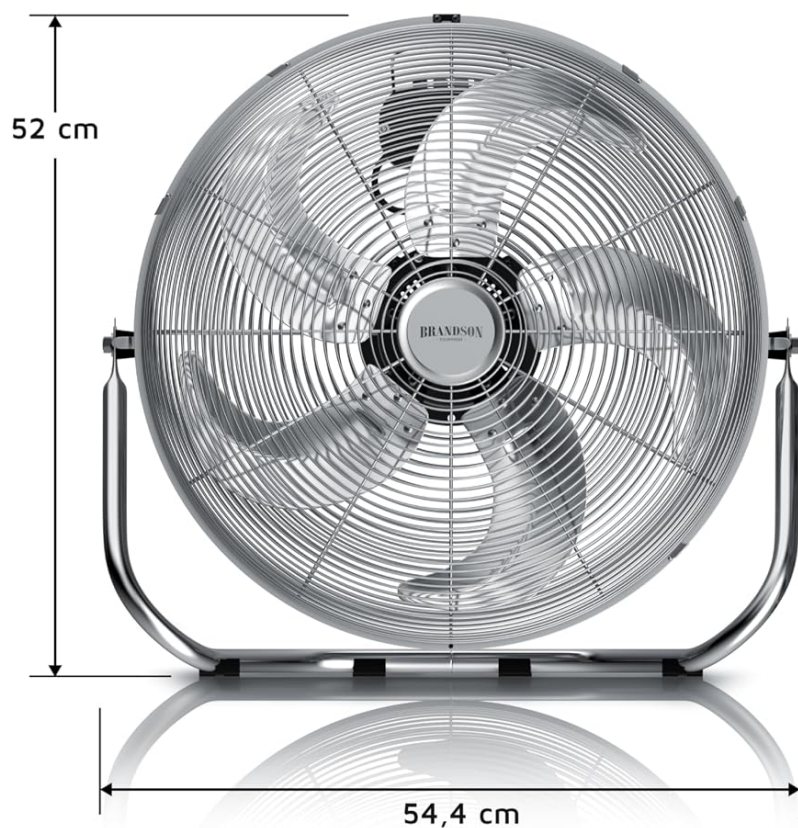 


Image 2: Front and side view of the Brandson Retro Design Floor Fan, illustrating its overall dimensions including a height of 52 cm, a width of 54.4 cm, and a depth of 18 cm. The fan head is shown with a 120-degree tilt capability.



Image 3: Close-up view of the control panel located on the rear of the Brandson Floor Fan. It shows three rotary buttons for speed selection (0, 1, 2, 3) and the power rating of 120 Watts.



Image 4: Detailed view of the fan's rotor and five blades, protected by a solid safety grille. The blade diameter is 42 cm.

SETUP

1. **Unpacking:** Carefully remove the fan from its packaging. Retain the packaging for future storage or transport.
2. **Inspection:** Check the fan for any signs of damage. Do not use if damaged.
3. **Placement:** Place the fan on a firm, level surface. Ensure there is adequate space around the fan for proper air circulation and that the power cord is not obstructed or in a high-traffic area. Keep the fan at a safe distance from walls, curtains, and other objects that could obstruct airflow or be drawn into the fan blades.
4. **Power Connection:** Ensure the fan is switched off (speed setting '0') before plugging it into a standard 220V-240V AC electrical outlet.

OPERATING INSTRUCTIONS

Your Brandson Floor Fan is designed for simple operation.

1. **Power On/Off:** Locate the rotary switch on the rear of the fan (refer to Image 3). Turn the switch from '0' (Off) to '1', '2', or '3' to turn the fan on and select a speed. To turn off the fan, rotate the switch back to '0'.
2. **Adjusting Fan Speed:**
 - Setting '1': Low speed for gentle air circulation.
 - Setting '2': Medium speed for moderate cooling.
 - Setting '3': High speed for maximum airflow.
3. **Adjusting Tilt Angle:** The fan head can be manually tilted up or down to direct the airflow. Gently hold the fan body and adjust the head to your desired angle within its 120-degree range. Do not force the fan head beyond its designed tilt limits.

MAINTENANCE AND CLEANING

Regular cleaning will help maintain your fan's performance and extend its lifespan.

1. **Before Cleaning:** Always ensure the fan is switched off and unplugged from the power outlet before cleaning or performing any maintenance.
2. **Exterior Cleaning:** Wipe the exterior surfaces of the fan with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the finish.
3. **Grille and Blades:** Dust and lint can accumulate on the fan grille and blades. Use a vacuum cleaner with a brush attachment or a soft, dry cloth to carefully clean these areas. For thorough cleaning, the front grille may be removable (consult a qualified technician if unsure).
4. **Storage:** When not in use for extended periods, store the fan in its original packaging in a cool, dry place, away from direct sunlight and moisture.

TROUBLESHOOTING

If you encounter issues with your fan, please refer to the following common problems and solutions:

- **Fan does not turn on:**
 - Check if the power cord is securely plugged into a working electrical outlet.
 - Ensure the speed control switch is set to a speed setting (1, 2, or 3) and not '0' (Off).
 - Verify that the circuit breaker or fuse for the outlet has not tripped.
- **Airflow is weak:**
 - Increase the fan speed setting.
 - Ensure the fan grille and blades are clean and free from dust or obstructions.
 - Adjust the tilt angle to direct airflow more effectively.
- **Fan makes unusual noise:**
 - Unplug the fan and check for any loose parts or foreign objects caught in the blades or grille.
 - Ensure the fan is placed on a stable, level surface.

If the problem persists after trying these solutions, please contact Brandson customer support.

TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	301492
Part Reference	A301492x42
Brand	Brandson
Type	Floor Fan / Table Fan
Material	Metal (Chrome finish)
Dimensions (L x W x H)	54 x 22.5 x 54 cm
Weight	5 kg
Grille Diameter	45 cm
Blade Diameter	42 cm
Power	120 Watts
Voltage	220 Volts
Number of Speeds	3
Max Speed	1450 RPM
Tilt Angle	Up to 120°
Power Connector Type	Type C (Europlug)
Usage	Indoor

Note: While some general specifications may indicate outdoor suitability, for optimal safety and product longevity, indoor use is recommended for this electrical fan.

WARRANTY AND SUPPORT

Your Brandson Retro Design Floor Fan comes with a**24-month warranty** from the date of purchase. This warranty covers manufacturing defects and material faults under normal use conditions. For warranty claims, technical support, or inquiries regarding spare parts (e.g., replacement blades), please contact Brandson customer service. You can find more information and potentially download a PDF version of this manual on our official website:

www.brandson-equipment.com

Please have your model number (301492) and proof of purchase ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question