

[manuals.plus](#) /

- › [Easytry123](#) /
- › [Easytry123 Replacement Remote Control RM-ADU006 User Manual](#)

Easytry123 RM-ADU006

Easytry123 Replacement Remote Control RM-ADU006 User Manual

For Sony DAV-DZ555K, DAV-DX250, DAV-DZ100, DAV-DX170, RM-ADU006, DAV-HDX287WC, DAV-HDX585 DVD Home Theater Systems

1. INTRODUCTION

This manual provides essential instructions for the setup and operation of your Easytry123 RM-ADU006 replacement remote control. This remote is designed to be compatible with various Sony DVD Home Theater Systems, including models DAV-DZ555K, DAV-DX250, DAV-DZ100, DAV-DX170, DAV-HDX287WC, and DAV-HDX585.

Please note that as a replacement unit, some advanced or specific functions of your original remote control may not be fully supported. Refer to this guide for basic functionality and troubleshooting.

2. SETUP

2.1 Battery Installation

The remote control requires two (2) AA batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.



Figure 1: Battery compartment with cover removed, showing where to insert two AA batteries.



Figure 2: Back of the remote control with the battery cover closed.

2.2 Initial Use

This remote control operates using infrared (IR) technology. No programming or pairing is typically required. Once batteries are installed, point the remote directly at your Sony DVD Home Theater System and press the desired function button.

3. OPERATING INSTRUCTIONS

The remote control features a standard layout for controlling your DVD Home Theater System. Below is an overview of the main buttons and their general functions.





Figure 3: Front view of the RM-ADU006 Remote Control.

3.1 Button Functions Overview

- **Power Buttons (/ TV)** Turns the system or TV on/off.
- **TV Input / TV Vol / TV CH** Controls basic TV functions (input source, volume, channel).
- **OPEN/CLOSE**: Opens or closes the disc tray.
- **DISPLAY**: Shows on-screen information.
- **DISC SKIP**: Skips to the next disc in a multi-disc changer (if applicable).
- **FUNCTION**: Cycles through various functions or modes of the home theater system.
- **SOUND FIELD / MOVIE/MUSIC / DYNAMIC BASS** Adjusts audio settings and sound modes.

- **VIDEO FORMAT:** Changes the video output format.
- **AUDIO / SUBTITLE:** Selects audio tracks or subtitle languages.
- **Numeric Keypad (0-9, 10/0, ---/CLEAR):** For direct track selection, channel input, or menu navigation.
- **TOP MENU / DVD MENU:** Accesses the main menu or DVD menu.
- **MUTING:** Mutes the audio output.
- **Navigation Buttons (▲ ▼ ← → / ENTER):** Used to navigate menus and confirm selections.
- **VOLUME (+ / -):** Adjusts the system volume.
- **RETURN:** Goes back to the previous screen or menu.
- **Playback Controls (◀◀ / ▶ / ▶▶ / ■ /)** Standard play, pause, stop, fast forward, and rewind functions.
- **STEP / ADVANCE / DISPLAY:** Controls frame-by-frame playback or advances through content.
- **TUNING (+ / -) / PRESET (+ / -)** For radio tuner control (if applicable).

4. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AA batteries.
 - Check for any obstructions between the remote control and the infrared sensor on your home theater system.
 - Ensure you are within a reasonable range and pointing the remote directly at the system.
- **Certain functions do not work:**
 - As a replacement remote, some specific or advanced functions of your original Sony remote may not be supported. This is normal for universal or replacement units.
 - Verify that your specific Sony model is listed as compatible in the introduction.

5. SPECIFICATIONS

- **Model:** RM-ADU006
- **Brand:** Easytry123
- **Compatible Devices:** Sony DAV-DZ555K, DAV-DX250, DAV-DZ100, DAV-DX170, DAV-HDX287WC, DAV-HDX585 DVD Home Theater Systems
- **Connectivity Technology:** Infrared (IR)
- **Controller Type:** Button Control
- **Power Source:** 2 x AA Batteries (not included)

6. WARRANTY AND SUPPORT

Specific warranty information for this replacement remote control is not provided within this manual. For any warranty claims, technical support, or further assistance, please contact the seller or retailer from whom you purchased the product.

© 2023 Easytry123. All rights reserved.