

[Manuals.plus](#) /

› [UBay](#) /

› UBay BN59-01223A Remote Control User Manual

UBay UBay BN59-01223A

UBay BN59-01223A Remote Control User Manual

Model: BN59-01223A

INTRODUCTION

This manual provides detailed instructions for the UBay BN59-01223A Remote Control, designed as a compatible replacement for various Samsung Smart TV models. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your remote control.



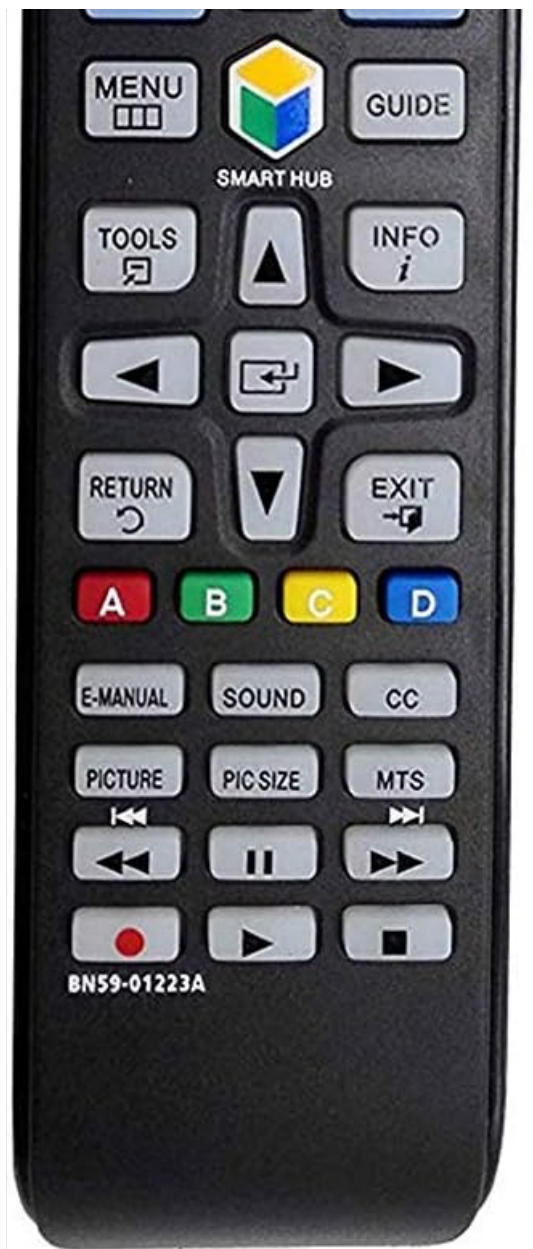


Image: The UBay BN59-01223A remote control, showing its full layout of buttons including power, source, number pad, volume, channel, and navigation keys.

SETUP

Installing Batteries

The UBay BN59-01223A remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Initial Use

This remote control is designed for immediate use with compatible Samsung Smart TVs. No programming or pairing is

required. Simply install new batteries, and the remote will be ready to operate your television.

OPERATING INSTRUCTIONS

Button Functions Overview

Familiarize yourself with the primary functions of the remote control buttons:





Image: An angled view of the UBay BN59-01223A remote control, providing a clearer perspective of the button arrangement and labels.

Button	Function
Power	Turns the TV on or off.
Source	Selects input sources (HDMI, AV, etc.).
Number Pad (0-9)	Direct channel selection.
VOL (+/-)	Adjusts volume up or down.
CH (+/-)	Changes channels up or down.
Mute	Mutes or unmutes the TV sound.
Smart Hub	Accesses the Samsung Smart Hub for apps and streaming services.
Menu	Opens the TV's main menu.
Tools	Accesses quick settings or context-sensitive options.
Guide	Displays the electronic program guide.
Info	Displays information about the current program or input.
Navigation (Up/Down/Left/Right/Enter)	Navigates through menus and confirms selections.
Return	Goes back to the previous screen or menu.
Exit	Exits the current menu or application.
Color Buttons (A, B, C, D)	Context-sensitive functions within certain applications or menus.

COMPATIBILITY

The UBay BN59-01223A Remote Control is compatible with a wide range of Samsung Smart TV models. Some of the compatible models include, but are not limited to:

- UN32J5500AF, UN32J5500AFXZA, UN32J550DAF, UN32J550DAFXZA, UN32J6300AF, UN32J6300AFXZA
- UN40D5500AF, UN40D5500AFXZA, UN40D550DAF, UN40D550DAFXZA, UN40J5500, UN40J5500AF, UN40J5500AFXZA, UN40J6300AF, UN40J6300AFXZA, UN40JU650DAFXZA, UN40JU6500FX
- UN48J5500AF, UN48J5500AFXZA, UN48J550DAF, UN48J550DAFXZA, UN48J6300AF, UN48J6300AFXZA, UN48JU6500FX, UN48JU6500FXZA, UN48JU650DFX, UN48JU650DFXZA
- UN50J5500AF, UN50J5500AFXZA, UN50J550DAF, UN50J550DAFXZA, UN50J6300AF, UN50J6300AFXZA, UN50JS7000F, UN50JS7000FXZA, UN50JU6500FX, UN50JU6500FXZA, UN50JU650DFX, UN50JU650DFXZA
- UN55J6300AF, UN55J6300AFXZA, UN55JS700DF, UN55JS700DFXZA, UN55JS7000F, UN55JS7000FXZA, UN55JU6500FX, UN55JU6500FXZA, UN55JU650DFX, UN55JU650DFXZA
- UN60J6300AF, UN60J6300AFXZA, UN60JS700DF, UN60JS700DFXZA, UN60JS7000F, UN60JS7000FXZA, UN60JU6500F, UN60JU6500FX, UN60JU6500FXZA, UN60JU650DFX, UN60JU650DFXZA, UN60JU7090F, UN60JU7090FXZA
- UN65J6300AF, UN65J6300AFXZA, UN65J630DAF, UN65J630DAFXZA, UN65JU6500FX, UN65JU6500FXZA, UN65JU650DFX, UN65JU650DFXZA
- UN75J630DAF, UN75J630DAFXZA, UN75J6300AF, UN75J6300AFXZA, UN75JU641DF, UN75JU641DFXZA, UN75JU6500FX, UN75JU6500FXZA, UN75JU650DFX, UN75JU650DFXZA

If your Samsung TV model is not listed, please refer to your TV's original manual or contact UBay customer support for compatibility verification.

MAINTENANCE

Cleaning

To maintain the remote control's appearance and functionality, clean it regularly:

- Use a soft, dry cloth to wipe the surface of the remote.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray liquids directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning materials, as these can damage the remote's finish or internal components.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Storage

When not in use for extended periods, store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If storing for several months, it is advisable to remove the batteries to prevent leakage and potential damage to the remote.

TROUBLESHOOTING

If you encounter issues with your UBay BN59-01223A remote control, try the following troubleshooting steps:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the TV's infrared receiver.
 - Point the remote directly at the TV's IR sensor.
- **Specific Buttons Not Working:**
 - Clean the remote control, especially around the non-functioning buttons, to remove any dirt or debris that might be preventing proper contact.
 - If cleaning and battery replacement do not resolve the issue, the button may be physically damaged.
- **Intermittent Operation:**
 - This often indicates low battery power. Replace the batteries.
 - Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the IR signal.

If the problem persists after attempting these steps, please contact UBay customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Model Number	UBay BN59-01223A
Product Dimensions	9 x 1.8 x 0.75 inches
Item Weight	3.2 ounces
Color	Black
Power Source	2 x AAA Batteries (not included)
Compatible Devices	Samsung Televisions
Special Feature	Ergonomic design

WARRANTY AND SUPPORT

For warranty information or technical support regarding your UBay BN59-01223A Remote Control, please refer to the purchase documentation or contact the seller directly. UBay is committed to providing reliable products and customer satisfaction.

For common questions or further assistance, you may also visit the UBay official website or contact their customer service department through the contact information provided with your purchase.

© 2025 UBay. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question