

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Moukey](#) /

› [Moukey MSP-001 Sustain Pedal User Manual](#)

Moukey MSP-001

Moukey MSP-001 Sustain Pedal User Manual

For Keyboard and Digital Piano

INTRODUCTION

The Moukey MSP-001 is a classic-style sustain pedal designed for use with electronic keyboards, synthesizers, and digital pianos. It features a high-quality chrome foot pedal with a rubberized cover and a slip-resistant rubber bottom to ensure stability during use. This pedal is engineered to replicate the feel and function of an acoustic piano's sustain pedal, enhancing your instrument's tone.

SETUP INSTRUCTIONS

Follow these steps to properly set up your Moukey MSP-001 Sustain Pedal:

- Connect the Pedal:** Locate the 1/4-inch (6.35mm) sustain pedal input jack on your electronic keyboard, digital piano, or synthesizer. Insert the standard compatible plug of the MSP-001 pedal firmly into this jack.
- Position the Pedal:** Place the pedal on the floor in a comfortable position for your foot. The slip-resistant rubber bottom is designed to keep the pedal in place during performance.
- Check Polarity (if necessary):** Some keyboards may require a specific polarity setting for the sustain pedal to function correctly. If the sustain effect is inverted (e.g., sustains when not pressed, or does not sustain when pressed), locate the polarity switch on your keyboard or the pedal itself (if present) and adjust it. The MSP-001 pedal is generally compatible with most instruments without requiring a polarity switch on the pedal itself, but instrument settings may vary.



Image: Overview of the Moukey MSP-001 Sustain Pedal, highlighting its main components including the motherboard body, the alloy pedal, and the standard 1/4-inch compatible plug.



Image: The Moukey MSP-001 Sustain Pedal positioned on the floor, connected to a digital keyboard, demonstrating typical setup.

OPERATING INSTRUCTIONS

The Moukey MSP-001 Sustain Pedal functions similarly to an acoustic piano's sustain pedal. When the pedal is pressed down, it sustains the notes played on your instrument, allowing them to ring out longer. Releasing the pedal stops the sustain effect.

- **Sustain Function:** Press the pedal with your foot to activate the sustain. Release to deactivate.
- **Compatibility:** This pedal is compatible with a wide range of electronic musical instruments, including MIDI keyboards, electronic organs, synthesizers, and electric pianos.

DELAY PEDAL IS USED

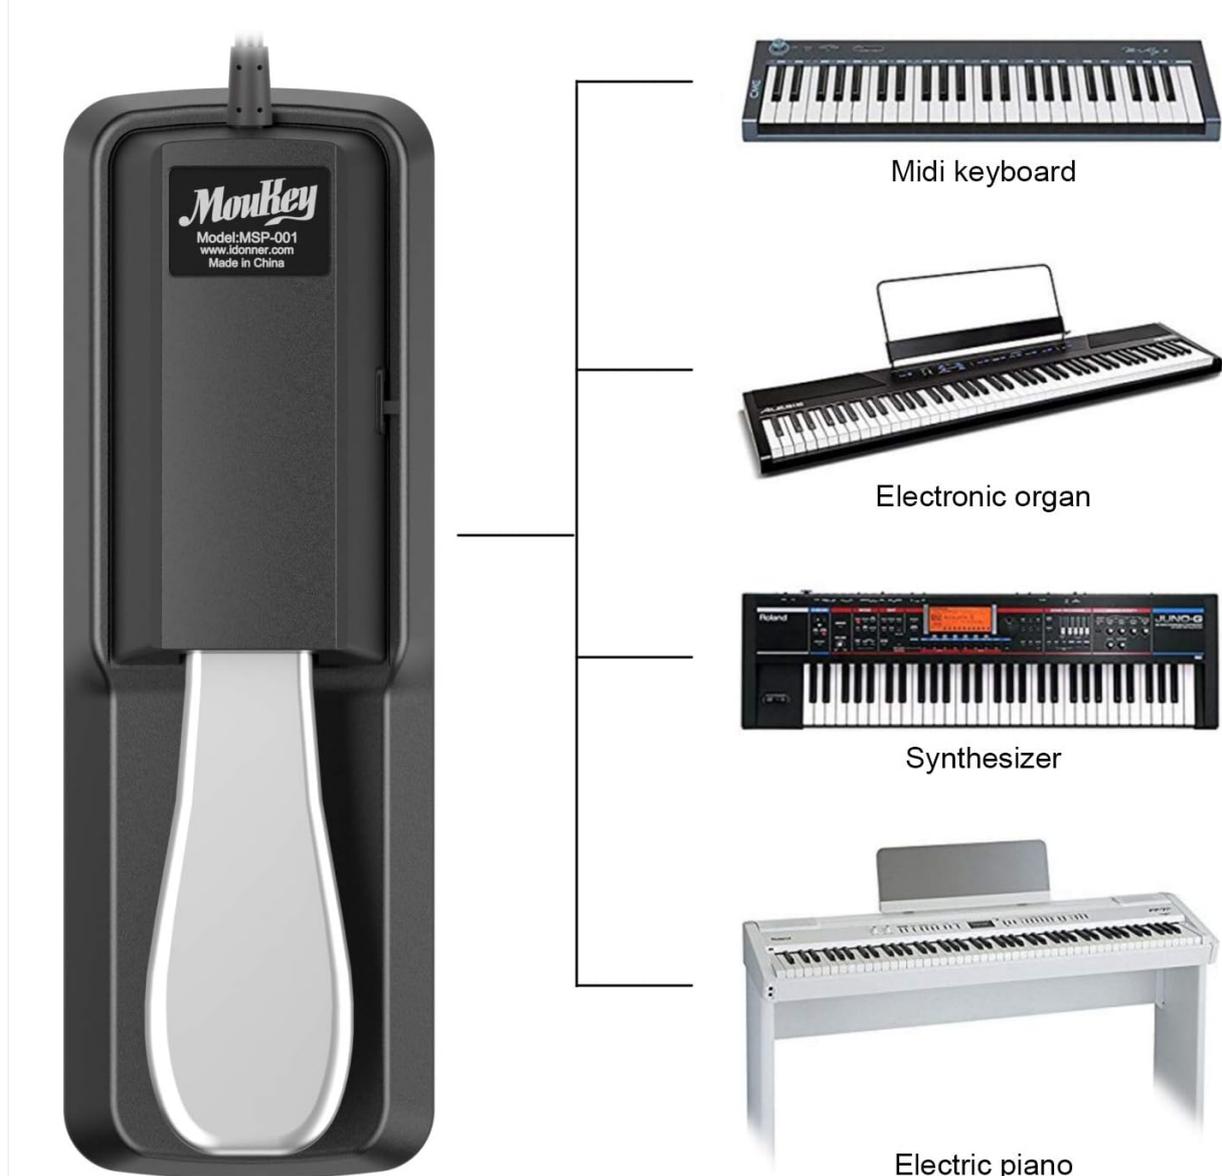


Image: Illustration demonstrating the compatibility of the Moukey MSP-001 Sustain Pedal with different types of electronic musical instruments.

MAINTENANCE

To ensure the longevity and optimal performance of your Moukey MSP-001 Sustain Pedal, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the pedal's surface with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the internal components. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the pedal in a clean, dry environment away from extreme temperatures and direct sunlight.
- **Cable Care:** Avoid kinking or sharply bending the cable. Store it loosely coiled to prevent damage.

TROUBLESHOOTING

If you encounter issues with your Moukey MSP-001 Sustain Pedal, refer to the following common solutions:

- **Pedal Not Sustaining / Sustaining Constantly:**

- Ensure the 1/4-inch plug is fully inserted into the instrument's sustain jack.
- Check the polarity setting on your keyboard or digital piano. Many instruments have a polarity switch (often labeled "Normal/Reverse" or "N.O./N.C.") that needs to be set correctly for the pedal to function as expected. Adjust this switch if the sustain effect is inverted.
- Test the pedal with another compatible instrument if available, to determine if the issue is with the pedal or the instrument.

- **Squeaking Noise:**

- Over time, mechanical parts may develop minor squeaks. A small amount of silicone-based lubricant applied to the pivot points of the pedal mechanism may resolve this. Avoid oil-based lubricants that can attract dust.

- **Pedal Slides on Floor:**

- Ensure the non-slip rubber mat on the bottom of the pedal is clean and free of dust or debris.
- Place the pedal on a surface that provides good grip. If using on a very smooth floor, a small rug or anti-slip mat underneath may help.

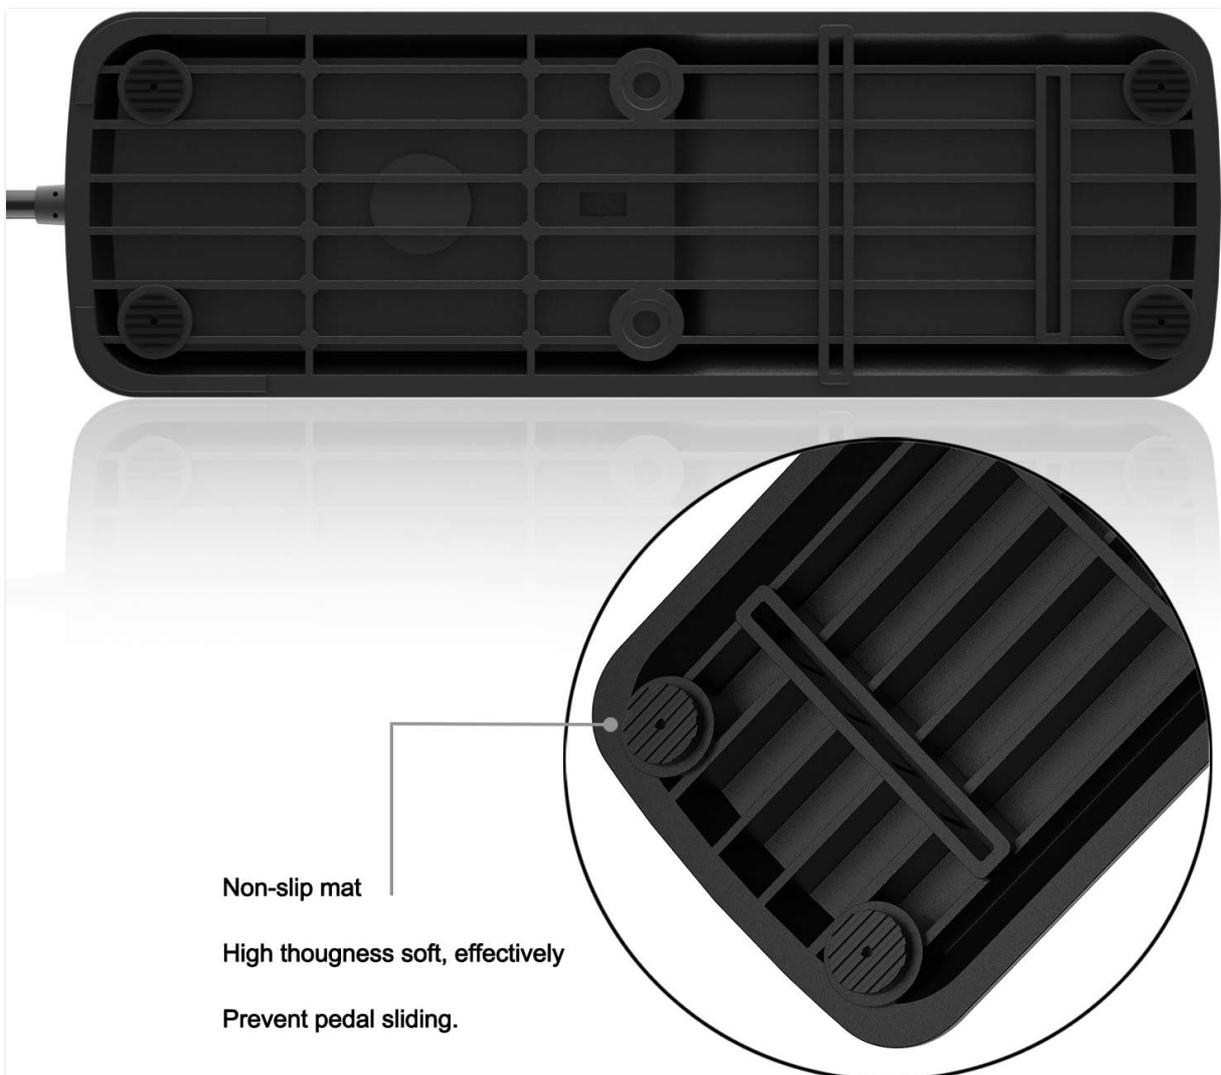


Image: The underside of the Moukey MSP-001 Sustain Pedal, illustrating the non-slip mat and rubber feet designed to prevent sliding during use.

PRODUCT SPECIFICATIONS

Model Number	MSP-001 (Item model number: 4354422472)
ASIN	B07PTPM96Q
Color	Black
Item Weight	15.5 ounces (approximately 439 grams)
Product Dimensions	9.84 x 3.23 x 2.76 inches (approximately 25 x 8.2 x 7 cm)
Cable Length	1.8 meters (63 inches / 70.5 inches from image)
Input Jack	1/4 inch (6.35mm)
First Available Date	March 18, 2019

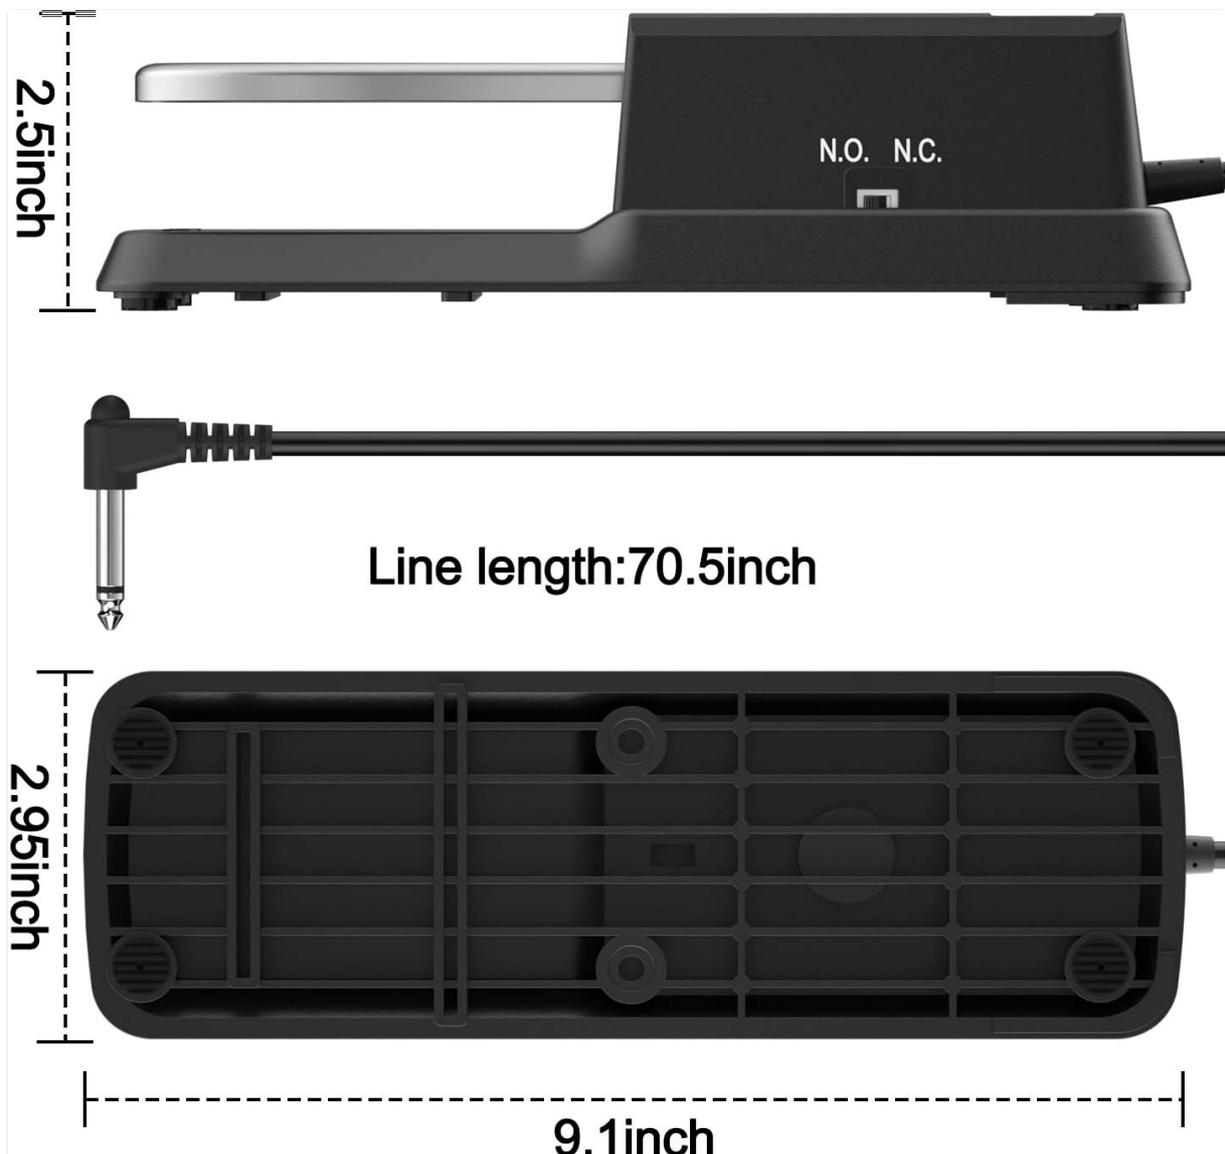


Image: Detailed dimensional drawing of the Moukey MSP-001 Sustain Pedal, including its length, width, height, and cable length.

WARRANTY INFORMATION

The Moukey MSP-001 Sustain Pedal comes with a **1-year warranty** from the date of purchase. This

warranty covers manufacturing defects and ensures the product is free from defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

CUSTOMER SUPPORT

For any questions, technical assistance, or warranty claims regarding your Moukey MSP-001 Sustain Pedal, please contact Moukey customer support. Refer to the contact information provided with your product packaging or visit the official Moukey website for the most up-to-date support details.

When contacting support, please have your product model number (MSP-001) and proof of purchase readily available.