

[Manuals.plus](#) /

› [iClever](#) /

› iClever BK10 Bluetooth Keyboard User Manual

iClever BK10

iClever BK10 Bluetooth Keyboard User Manual

Model: BK10 | Brand: iClever

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your iClever BK10 Bluetooth Keyboard. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

SAFETY INFORMATION

- Keep the keyboard away from liquids and excessive moisture.
- Avoid extreme temperatures.
- Do not attempt to disassemble or repair the keyboard yourself. Contact qualified service personnel.
- Use only the provided or recommended charging cable.

PACKAGE CONTENTS

Verify that all items are present in your package:

- iClever BK10 Bluetooth Keyboard
- USB-C Charging Cable
- Silicone Keyboard Cover
- User Manual (this document)

PRODUCT OVERVIEW

The iClever BK10 is a sleek, wireless Bluetooth keyboard designed for multi-device compatibility and ergonomic comfort. It features a full-size layout with a numeric keypad, low-profile scissor-switch keys for quiet and precise typing, and a durable stainless steel and ABS construction.



Figure 1: Top-down view of the iClever BK10 Bluetooth Keyboard, showcasing its full layout and slim design.

Key Features:

- **Multi-Device Connectivity:** Seamlessly switch between up to 3 devices using Bluetooth 5.1 technology.
- **Ergonomic Design:** Features a 10-degree tilt and low-profile keys for comfortable typing.
- **Quiet Scissor-Switch Keys:** Provides enhanced feedback and stability with minimal noise.
- **Compact with Numeric Keypad:** Full functionality in a space-saving design.
- **Long Battery Life:** Rechargeable battery offers extended use on a single charge.

MULTI DEVICE BLUETOOTH KEYBOARD

Easy to setup and switch between 3 devices at a time



Figure 2: Diagram illustrating the multi-device switching capability of the keyboard, connecting to a smartphone, laptop, and tablet via Channel 1, 2, and 3.

LOW PROFILE KEYS

Thanks to their low profile and scissor switch design, these keys guarantee quiet, comfortable typing

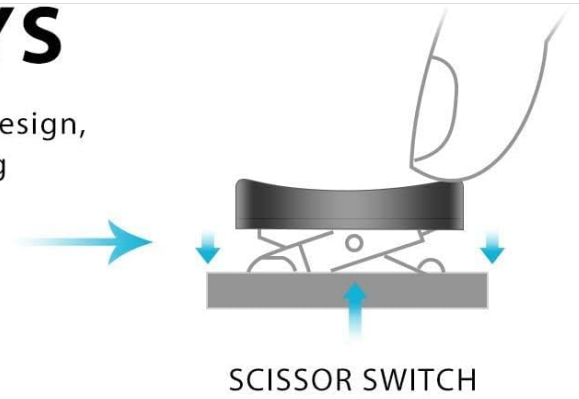


Figure 3: Close-up view of the low-profile keys and an illustration of the scissor-switch mechanism, highlighting quiet and comfortable typing.

ULTRA SLIM DESIGN

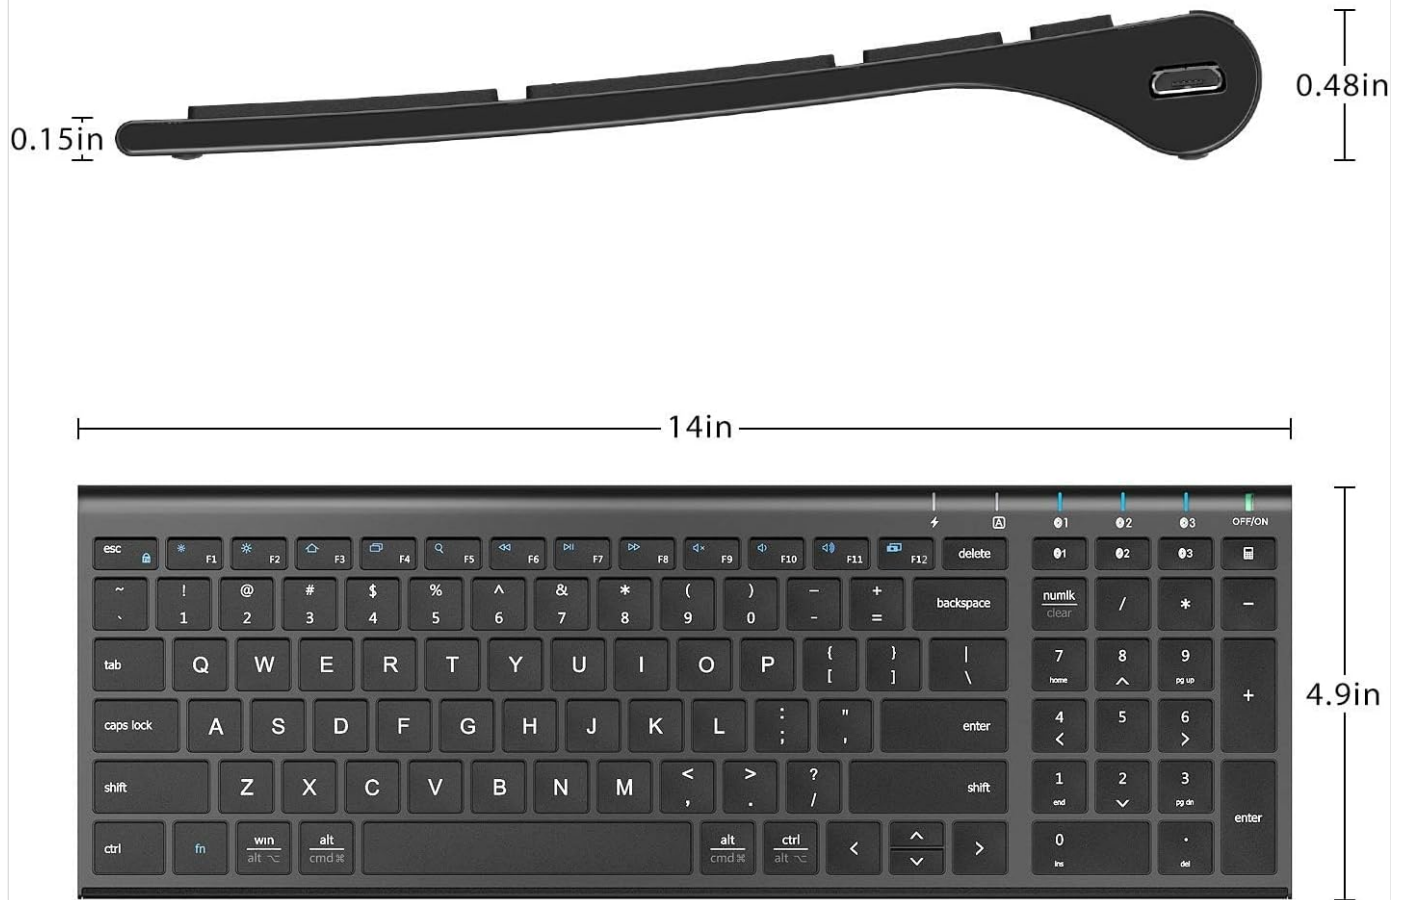


Figure 4: Side and top views of the keyboard detailing its ultra-slim profile and precise dimensions (14 inches long, 4.9 inches wide, 0.48 inches high).



Figure 5: The iClever BK10 keyboard in an office setting, connected to a desktop monitor, laptop, and tablet, demonstrating its multi-device utility.

SETUP

Charging the Keyboard:

Before first use, fully charge the keyboard. Connect the provided USB-C charging cable to the keyboard's charging port and the other end to a USB power source (e.g., computer USB port, USB wall adapter). The charging indicator light will illuminate during charging and turn off when fully charged. A full charge takes approximately 2 hours and provides up to 45 days of use (based on 8 hours/day usage).

USB-C CHARGING KEYBOARD

iClever wireless keyboard standby time of up to 90 days on a single charge.



Lithium Battery Capacity
280 mAh



Charge time: **<2 hours**
Stand- by time: **90 days**



Figure 6: Image showing the USB-C charging port on the keyboard and a cable connected for charging, with details on battery capacity and charging time.

Pairing with Devices:

The iClever BK10 keyboard can connect to up to three devices simultaneously via Bluetooth. Follow these steps to pair your keyboard:

1. Turn on the keyboard using the ON/OFF switch located on the top right edge.
2. Press and hold one of the Bluetooth channel keys (**BT1**, **BT2**, or **BT3**) for 3-5 seconds until its indicator light starts blinking rapidly. This indicates the keyboard is in pairing mode.
3. On your device (computer, tablet, smartphone), enable Bluetooth and search for available devices.
4. Select "iClever BK10" from the list of found devices.
5. If prompted, enter the pairing code displayed on your screen using the iClever BK10 keyboard and press **Enter**.
6. Once paired, the indicator light for the selected channel will stop blinking and remain solid for a few seconds before turning off, indicating a successful connection.
7. Repeat these steps for up to two additional devices using the other Bluetooth channel keys.

The keyboard automatically recognizes different operating systems (Windows, macOS, iOS, Android) and adjusts its layout accordingly.

OPERATING INSTRUCTIONS

Switching Between Devices:

To switch between paired devices, simply press the corresponding Bluetooth channel key **BT1**, **BT2**, or **BT3**) once. The keyboard will quickly connect to the selected device.

Function Keys and Hotkeys:

The iClever BK10 features a row of function keys (F1-F12) that also serve as hotkeys for various system functions. To use the hotkey function, press the **Fn** key simultaneously with the desired function key. Some common hotkeys include:

- **Fn + F1:** Home
- **Fn + F2:** Search
- **Fn + F3:** Select All
- **Fn + F4:** Copy
- **Fn + F5:** Paste
- **Fn + F6:** Cut
- **Fn + F7:** Previous Track
- **Fn + F8:** Play/Pause
- **Fn + F9:** Next Track
- **Fn + F10:** Mute
- **Fn + F11:** Volume Down
- **Fn + F12:** Volume Up
- **Fn + Esc:** Fn Lock (toggles between standard F-key and hotkey functionality)

Power Saving Mode:

To conserve battery life, the keyboard will automatically enter sleep mode after 30 minutes of inactivity. To wake it up, simply press any key.

MAINTENANCE

To ensure the longevity and optimal performance of your iClever BK10 keyboard, follow these maintenance guidelines:

- **Cleaning:** Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to wipe the surface of the keyboard. Avoid harsh chemicals or abrasive materials.
- **Silicone Cover:** The included silicone cover can be used to protect the keys from dust, spills, and debris. Clean the cover regularly with soap and water.
- **Storage:** When not in use for extended periods, turn off the keyboard to save battery. Store it in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Keyboard does not turn on.	Low battery.	Charge the keyboard using the provided USB-C cable.
Unable to pair the keyboard.	Keyboard not in pairing mode; Bluetooth off on device; interference.	Ensure the keyboard is in pairing mode (indicator light blinking). Verify Bluetooth is enabled on your device. Move the keyboard closer to your device. Remove "iClever BK10" from your device's Bluetooth list and try pairing again.
Keys are sticking or repeating characters.	Dust/debris under keys; software glitch; low battery.	Gently clean around and under the affected keys. Ensure the keyboard is fully charged. Restart the keyboard and the connected device. If using a specific Bluetooth channel, try pairing to a different channel (e.g., BT2 instead of BT1).
Keyboard disconnects frequently.	Low battery; distance from device; interference.	Charge the keyboard. Keep the keyboard within the effective Bluetooth range (up to 33 ft). Minimize interference from other wireless devices.

SPECIFICATIONS

Feature	Detail
Model	BK10
Connectivity Technology	Bluetooth 5.1
Operating Range	Up to 33 feet (10 meters)
Multi-Device Support	Up to 3 devices
Compatible Devices	Windows 10/11, macOS 10.15+, iPadOS 13.4+, Android 9+, ChromeOS (BT 4.0+)
Number of Keys	99 (US QWERTY layout)
Key Type	Scissor-switch
Noise Level	< 50 dB
Battery Type	Rechargeable Lithium Ion
Battery Capacity	280 mAh
Charging Time	Approx. 2 hours
Standby Time	Up to 45 days (8 hours/day usage)
Auto-Sleep	After 30 minutes of inactivity
Product Dimensions	14.37 x 4.92 x 0.71 inches (36.5 x 12.5 x 1.8 cm)

Feature	Detail
Item Weight	13.1 ounces (371 grams)
Color	Black

WARRANTY AND SUPPORT

iClever products are designed and manufactured to the highest quality standards. For detailed warranty information, please refer to the warranty card included with your product or visit the official iClever website. If you encounter any issues or have questions regarding your iClever BK10 Bluetooth Keyboard, please contact iClever customer support for assistance.

You can often find support resources, FAQs, and contact information on the official iClever website:www.iclever.com