

Summit Appliance RE203W

Summit RE203W 20-Inch White Electric Range User Manual

Model: RE203W

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your new Summit RE203W 20-Inch White Electric Range. Please read all instructions carefully before installation and use. Keep this manual for future reference.

The Summit RE203W is a slim-fitting 20-inch electric range designed for smaller kitchens, featuring a 220V power supply, four coil burners, and a 2.3 cu.ft. oven. It combines functionality with a compact design.

2. SAFETY INFORMATION

WARNING: This product can expose you to chemicals including Chromium, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

- Always ensure the appliance is properly grounded.
- Do not use the range for space heating.
- Keep flammable materials away from the appliance.
- Supervise children when the appliance is in use.
- Ensure proper ventilation during operation.
- Always use oven mitts when handling hot items.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Inspect the range for any shipping damage. Report any damage immediately to

your dealer.

3.2 Dimensions



Figure 3.1: Front-side view of the Summit RE203W Electric Range with key dimensions labeled. The range measures 41.75 inches in height, 19.5 inches in width, and 25.13 inches in depth.

The range is designed for 20-inch spaces. Ensure adequate clearance around the appliance for proper ventilation and safety.

- **Overall Dimensions:** 41.75" H x 19.5" W x 25.13" D
- **Oven Capacity:** 2.3 cu.ft.

3.3 Electrical Connection

This 220V electric range requires a standard 40 amp 3 or 4-wire range cord (not included). Installation should be performed by a qualified technician in accordance with local electrical codes.

3.4 Anti-Tip Bracket Installation

An anti-tip bracket is included to prevent accidental tipping of the range. Follow the instructions provided with the bracket for proper installation. This is a critical safety feature.

3.5 Backsplash Installation

The backsplash should be installed on the rear part of the range. Secure it using the provided screws as detailed in the separate installation guide.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview



Figure 4.1: The control panel features push-to-turn knobs for each burner and the oven, along with indicator lights for active elements.

4.2 Using the Coil Burners



Figure 4.2: The cooktop features one 8-inch (2400W) and three 6-inch (1250W) coil burners, each with a removable chrome drip pan.

- The range features one 8-inch (2400W) and three 6-inch (1250W) coil burners.
- Each burner is controlled by a dedicated push-to-turn knob located on the front panel.
- Turn the knob to the desired heat setting (Low to High).
- Indicator lights illuminate when a burner is active.
- For safety, each coil is equipped with a sensor that automatically cycles the element off if it reaches dangerous flashpoint temperatures. Heating will resume automatically.

4.3 Using the Oven



Figure 4.3: The oven interior, made from durable porcelain, includes two adjustable racks for versatile cooking.

- The oven has a capacity of 2.3 cu.ft. and is made from durable porcelain.
- It includes two adjustable racks and a two-piece broiler pan.
- The waist-high broiler is conveniently located inside the oven, eliminating the need for a separate drop-down compartment.
- Use the oven control knob to select the desired temperature for baking or broiling.
- An indicator light will show when the oven is in use.

5. MAINTENANCE AND CLEANING

5.1 Cooktop Cleaning

- Allow burners to cool completely before cleaning.
- Remove chrome drip pans and wash with warm, soapy water.
- Wipe the cooktop surface with a damp cloth and mild detergent.
- Do not use abrasive cleaners or scouring pads, as they can damage the finish.

5.2 Oven Cleaning

- Clean the oven interior with warm, soapy water or a specialized oven cleaner, following the product instructions.
- Remove oven racks and clean separately.
- Wipe down the oven door and gasket with a soft cloth.

6. TROUBLESHOOTING

If you encounter any issues with your Summit RE203W Electric Range, please refer to the following basic troubleshooting steps before contacting customer service:

- **Appliance not turning on:** Check if the range is properly plugged into a functional electrical outlet and if the circuit breaker has tripped.
- **Burners not heating:** Ensure the control knobs are correctly set to a heat level and not just 'Off'. Verify that the coil elements are properly seated.
- **Oven not heating:** Confirm the oven control knob is set to the desired temperature and the oven indicator light is on.
- **Uneven cooking:** Ensure cookware is appropriate for electric coil burners and that the oven racks are positioned correctly for the type of food being cooked.

For persistent problems, consult a qualified technician or contact Summit Appliance customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	Summit Appliance
Model Number	RE203W
Dimensions (D x W x H)	25.13"D x 19.5"W x 41.75"H
Oven Capacity	2.3 Cubic Feet
Fuel Type	Electric
Voltage	220 Volts
Number of Heating Elements	4 (Coil Burners)
Heating Element Type	Sealed Coil
Controls Type	Knob
Drawer Type	Broiler
Number Of Racks	2
Material	Metal
Finish Type	White
Item Weight	125 Pounds (57 kg)
Installation Type	Freestanding
Specification Met	ADA
GTIN / UPC	761101058283

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This Summit RE203W Electric Range is covered by the standard[Summit Appliance Warranty](#). Please refer to the warranty document included with your purchase for specific terms and conditions.

8.2 Customer Support

For technical assistance, parts, or service inquiries, please contact Summit Appliance customer support. You can find contact information on the official Summit Appliance website or through your retailer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question