

Manuals.plus /

- › Passion-Electro /
- › User Manual: Replacement Remote Control for MT LOGIC T1430[TV]

Passion-Electro T1430[TV]

User Manual: Replacement Remote Control for MT LOGIC T1430[TV]

Model: T1430[TV] | Brand: Passion-Electro

INTRODUCTION

This manual provides comprehensive instructions for the use and maintenance of your new Passion-Electro Replacement Remote Control for MT LOGIC T1430[TV]. This specialized remote control is designed to replicate all functions of your original remote without the need for complex programming.

Key features include:

- New product, ensuring optimal performance.
- No programming required; ready to use after battery insertion.
- Functionality comparable to the original remote control.

SETUP

Setting up your new remote control is a simple process. No complex pairing or programming is necessary.

1. Battery Installation

The remote control requires two 1.5V AAA (LR03) batteries. Batteries are **not** included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA (LR03) batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect insertion can prevent the remote from functioning.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.



Image: Back view of the remote control, highlighting the battery compartment cover.

Once the batteries are correctly installed, the remote control is ready for immediate use with your MT LOGIC T1430[TV].

OPERATING INSTRUCTIONS

This replacement remote control is designed to function identically to your original MT LOGIC T1430[TV] remote. Simply point the remote at your television and press the desired buttons.

Key Functions Overview



Image: Front view of the remote control, displaying the full button layout.

- **Power Button** (●): Turns the TV on or off. Located at the top left.
- **Mute Button** (): Mutes or unmutes the TV sound. Located at the top right.
- **Numeric Keypad (0-9)**: For direct channel input.
- **Channel Up/Down (P+/P-)**: Changes TV channels.
- **Volume Up/Down (V+/V-)**: Adjusts TV volume.
- **Navigation Buttons (Up, Down, Left, Right, OK)**: Used for menu navigation and selection.
- **Menu Button**: Accesses the TV's main menu.
- **Exit Button**: Exits current menu or function.
- **Source/Input Button**: Cycles through available input sources (HDMI, AV, etc.).
- **Smart TV Buttons**: Dedicated buttons for popular streaming services (e.g., Netflix) and Smart TV functions.

The exact layout and function of some buttons may vary slightly based on the specific model of your MT LOGIC T1430[TV], but the core functionality remains consistent with the original remote.



Images: Various angled views of the remote control, demonstrating its design and button accessibility.

MAINTENANCE

Proper care and maintenance will extend the lifespan of your remote control.

- **Cleaning**: Use a soft, dry cloth to wipe the surface of the remote. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- **Battery Replacement**: Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (1.5V AAA).
- **Storage**: Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops**: Protect the remote from physical impact. Dropping it can damage internal components or the casing.
- **Liquid Exposure**: Keep the remote away from liquids. Liquid damage can cause malfunctions and is typically not covered by warranty.

TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries. Obstruction between remote and TV. Remote out of range.	Check battery polarity and replace batteries if necessary. Ensure nothing is blocking the infrared sensor on the TV or remote. Move closer to the TV.
Some buttons not working.	Dirt or debris under buttons. Damaged internal circuit.	Clean the remote surface. If cleaning doesn't help, the remote may be damaged and require replacement.
TV not responding to any remote commands.	TV's infrared sensor is blocked or faulty. TV is off or in standby.	Ensure the TV's sensor is clear. Try turning the TV on manually. Check TV's power supply.

SPECIFICATIONS

Brand: Passion-Electro

Model: T1430[TV] Replacement Remote

Compatible Devices: Television (specifically MT LOGIC T1430[TV])

Special Features: Universal (in terms of compatibility with the specified model), No programming required

Battery Type: 2 x AAA (LR03) 1.5V Alkaline batteries (not included)

Connector Type: Infrared

Item Weight: Approximately 100 g

WARRANTY AND SUPPORT

Information regarding specific warranty terms or direct customer support contact details for this product is not provided in the available documentation. Please refer to your purchase receipt or the seller's information for details on returns, refunds, or warranty claims.

For general inquiries or assistance, you may contact the seller, Passion-electro, through the platform where the purchase was made.