

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [VINABTY](#) /

> [VINABTY AKB75375604 Replacement Remote Control for LG 4K HDR Smart LED UHD TVs User Manual](#)

VINABTY AKB75375604

VINABTY AKB75375604 Replacement Remote Control User Manual

Model: AKB75375604

1. INTRODUCTION

This manual provides instructions for the VINABTY AKB75375604 replacement remote control, designed for various LG 4K HDR Smart LED UHD TV models. This remote is pre-programmed and requires no additional setup for compatible televisions. Please read this manual thoroughly to ensure proper use and to maximize your experience.

2. PRODUCT OVERVIEW

The VINABTY AKB75375604 remote control is a direct replacement for original LG TV remotes, offering immediate functionality without programming. It includes dedicated hot keys for popular streaming services.

2.1 Compatible LG TV Models

- LG 4K HDR Smart LED UHD TV models including: 50UK6090PUA, 49UK6090PUA, 43UK6090PUA, 55UK6090PUA, 60UK6090PUA, 65UK6090PUA, UK6090PUA
- LG TV models: 32LK540BBUA, 32LK540BP UA, 43LK5400BUA, 43LK5400PUA, 49LK5400BUA, 49LK5400PUA
- Additional compatible models: 55SK9000, 55SK8000, 55UK7700, 70UK6570, 49UK6300PUE, AKB75375604 (original remote model)
- And many other LG TV models listed in the product description.

2.2 Remote Control Layout





Figure 1: Front view of the VINABTY AKB75375604 remote control, showing all buttons and their layout.



Figure 2: Detailed view of the VINABTY AKB75375604 remote control, highlighting the button layout and labels for easy identification.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery cover.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery cover securely.

Note: This remote control is pre-programmed and does not require additional pairing or programming steps for compatible LG TVs. Once batteries are installed, it should function immediately.

4. OPERATING INSTRUCTIONS

The VINABTY AKB75375604 remote control provides standard functionality for your LG TV. Refer to Figure 1 for button locations.

- **Power Button (●):** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.
- **VOL +/-:** Adjusts the volume level.
- **CH PAGE +/-:** Changes channels sequentially.
- **Mute Button (□):** Mutes or unmutes the TV audio.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Navigate through menus and select options.
- **BACK:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or application.
- **GUIDE:** Displays the electronic program guide (EPG).
- **INFO:** Displays information about the current program or input.
- **NETFLIX / Amazon Hot Keys:** Directly launch the Netflix or Amazon Prime Video applications.
- **Color Buttons (Red, Green, Yellow, Blue):** Functionality varies depending on the TV menu or application.

5. MAINTENANCE

5.1 Cleaning the Remote

To clean your remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Ensure no liquid enters the remote's interior.

5.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with new ones.
 - Ensure there are no obstructions between the remote and the TV's infrared sensor.
 - Confirm the remote is pointed directly at the TV.
- **Specific buttons not working:**
 - Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris.
 - If only certain advanced functions (e.g., specific smart TV features) are not working, ensure your TV model fully supports those functions with a standard replacement remote.
- **Short operating range:**
 - Replace the batteries.
 - Ensure the TV's infrared sensor is not blocked.

7. SPECIFICATIONS

Model Number	AKB75375604
Brand	VINABTY

Product Dimensions	5 x 1.9 x 0.5 inches (approximately)
Item Weight	2.39 ounces
Batteries Required	2 AAA batteries (not included)
Compatible Devices	LG Televisions (various 4K HDR Smart LED UHD models)
Special Feature	Pre-programmed, no setup required for compatible models, two hot app keys.





Figure 3: Dimensions of the VINABTY AKB75375604 remote control, showing approximate length and width.

8. WARRANTY AND SUPPORT

This product is manufactured by VINABTY factory. For specific warranty information or technical support, please refer to the retailer's return policy or contact the seller directly. No explicit warranty details are provided in this manual.