

[manuals.plus](#) /› [Severin](#) /› [SEVERIN KM 3865 Multi-Chopper Instruction Manual](#)

Severin KM 3865

SEVERIN KM 3865 Multi-Chopper Instruction Manual

Model: KM 3865

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your SEVERIN KM 3865 Multi-Chopper. Please read all instructions carefully before operating the appliance and retain this manual for future reference.

The SEVERIN KM 3865 is a compact kitchen appliance designed for various food preparation tasks, including chopping, grating, and emulsifying. It features a 400 W motor and high-quality stainless steel blades.

Key Features:

- Powerful 400 W motor for efficient processing.
- High-quality stainless steel blades with a four-blade design for optimal cutting results.
- Multi-emulsifier disc for preparing mayonnaise, whipped cream, and similar mixtures.
- Safety switch ensures operation only when the appliance is correctly assembled and closed.
- Non-slip rubber feet for stable operation.
- Removable parts are dishwasher safe for easy cleaning.

2. IMPORTANT SAFETY INSTRUCTIONS

Always observe the following safety precautions to prevent injury or damage to the appliance:

- Read all instructions before use.
- Ensure the appliance is unplugged before assembly, disassembly, or cleaning.
- Keep hands and utensils out of the container while operating to prevent severe personal injury and/or damage to the food chopper.
- Never touch the blades directly. They are extremely sharp. Handle with care.
- Do not operate the appliance if any part is damaged, especially the power cord or plug. Contact customer service for repair.

- This appliance is equipped with a safety switch and will only operate when the lid is correctly locked in place. Do not attempt to bypass this safety feature.
- Ensure the appliance is placed on a stable, flat, and dry surface during operation. The non-slip rubber feet provide stability.
- Do not immerse the motor unit in water or any other liquid.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your SEVERIN KM 3865 Multi-Chopper:

- **Motor Unit:** Contains the motor and control switch.
- **Processing Container:** Transparent bowl for ingredients.
- **Lid:** Secures the container and activates the safety switch.
- **Four-Blade Chopping Knife:** For general chopping and mincing.
- **Multi-Emulsifier Disc:** For whipping and emulsifying liquids.
- **Grating Attachment:** Includes a pusher, feed tube, and grating disc for slicing and grating.

Innovative Multi-Emulgierscheibe zur Zubereitung von Mayonnaise, Schlagsahne, Eischnee u.v.m.



Figure 3.1: Exploded view of the SEVERIN KM 3865 Multi-Chopper components, showing the motor unit, processing container, lid, four-blade chopping knife, and grating attachment parts. This illustrates how the various parts fit together for assembly and disassembly.



Figure 3.2: Close-up view of the interchangeable accessories: the four-blade chopping knife, the multi-emulgierscheibe, and the grating disc with its holder. These are essential for the different functions of the multi-chopper.

4. SETUP AND ASSEMBLY

Before first use, clean all removable parts as described in the 'Cleaning and Maintenance' section.

General Assembly for Chopping/Emulsifying:

1. Place the motor unit on a stable, flat surface.
2. Fit the processing container onto the motor unit, ensuring it is securely locked into position.
3. Carefully place either the four-blade chopping knife or the multi-emulsifier disc onto the central shaft inside the container. Ensure it sits firmly.
4. Add your ingredients to the container. Do not exceed the 'MAX' fill line.
5. Place the lid onto the processing container and twist it clockwise until it locks securely. The appliance will not operate if the lid is not correctly locked.
6. Plug the appliance into a suitable power outlet.

Assembly for Grating:

1. Follow steps 1 and 2 from the 'General Assembly' section.
2. Insert the grating disc into its holder and place it onto the central shaft in the container.
3. Attach the grating attachment's feed tube and lid onto the processing container, ensuring it locks securely.
4. Plug the appliance into a suitable power outlet.

5. OPERATING INSTRUCTIONS

The SEVERIN KM 3865 Multi-Chopper features a control switch with multiple settings: **P (Pulse)**, **0 (Off)**, **I (Speed 1)**, and **II (Speed 2)**. Use the pulse function for short bursts of power and to control the consistency of ingredients.

5.1 Chopping and Mincing

Use the four-blade chopping knife for processing herbs, nuts, vegetables, and meat.

1. Assemble the multi-chopper with the four-blade chopping knife as described in 'Setup and Assembly'.
2. Add ingredients to the container. For best results, cut larger items into smaller, uniform pieces.
3. Select speed 'I' or 'II' for continuous operation, or use the 'P' (Pulse) setting for controlled chopping. The pulse function allows you to achieve desired consistency by operating in short bursts.
4. Process until the desired fineness is achieved.
5. Once finished, switch to '0' (Off), unplug the appliance, and carefully remove the lid and blade before emptying the container.



Figure 5.1: The multi-chopper prepared for chopping herbs like basil. The transparent container allows monitoring of the chopping process.



Figure 5.2: Chopping nuts in the multi-chopper. The four-blade system ensures even and efficient processing of ingredients like almonds.

5.2 Emulsifying

Use the multi-emulsifier disc for preparing mayonnaise, whipped cream, or other emulsified sauces.

1. Assemble the multi-chopper with the multi-emulsifier disc as described in 'Setup and Assembly'.
2. Add liquid ingredients to the container.
3. Select speed 'I' or 'II' and process until the desired consistency is achieved.
4. Switch to '0' (Off), unplug the appliance, and carefully remove the lid and disc before emptying.

SEVERIN



**Platzsparend
und multifunktional
im edlen Design**

Figure 5.3: The multi-emulsifier disc in action, preparing mayonnaise. The disc is designed to incorporate air and blend liquids smoothly.

5.3 Grating and Slicing

Use the grating attachment for grating vegetables like carrots or cheese.

1. Assemble the multi-chopper with the grating attachment as described in 'Setup and Assembly'.
2. Place a bowl or plate under the output chute of the grating attachment.
3. Switch the appliance to speed 'I' or 'II'.
4. Carefully feed ingredients into the feed tube using the pusher. Never use your fingers or other utensils to push food into the feed tube.
5. Once finished, switch to '0' (Off), unplug the appliance, and carefully disassemble the grating attachment before cleaning.

Einfache Reinigung durch entnehmbare Einzelteile.



Figure 5.4: The multi-chopper configured with the grating attachment, demonstrating the grating of a carrot. The grated output is collected in a separate bowl.

6. CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and hygiene of your multi-chopper.

1. Always unplug the appliance from the power outlet before cleaning.
2. Disassemble all removable parts: the lid, processing container, blades/discs, and grating attachment components.
3. All removable parts are dishwasher safe. Alternatively, they can be washed by hand using warm water and mild dish soap. Rinse thoroughly.
4. Exercise extreme caution when handling the blades, as they are very sharp.
5. Wipe the motor unit with a damp cloth. Never immerse the motor unit in water or any other liquid.
6. Ensure all parts are completely dry before reassembling or storing the appliance.
7. No lubrication is required for any part of the appliance.

7. TROUBLESHOOTING

If you encounter issues with your multi-chopper, refer to the following common problems and solutions:

- **Appliance does not turn on:**

- Ensure the power cord is securely plugged into a working outlet.
- Verify that the lid and processing container are correctly assembled and locked into place. The safety switch prevents operation if not properly secured.

- **Motor runs, but blades do not turn:**

- Check that the blade or disc is correctly seated on the central shaft.
- Ensure the container is not overfilled, which can jam the blades.

- **Uneven chopping results:**

- Process ingredients in smaller batches.
- Use the 'P' (Pulse) function for better control over consistency.
- Ensure ingredients are cut into uniform sizes before processing.

- **Appliance stops during operation:**

- The appliance may have overheated. Turn it off, unplug it, and allow it to cool down for at least 30 minutes before resuming use.
- Check for blockages or if the container is overfilled.

If the problem persists after attempting these solutions, please contact customer support.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Severin
Model Name	KM 3865
Power	400 W
Product Dimensions (L x W x H)	7.87"D x 5.51"W x 13.58"H (20 x 14 x 34.5 cm)
Item Weight	3.72 pounds (1.7 kg)
Color	Stainless Steel/Black
Blade Material	Stainless Steel
Number of Speeds	2 (plus Pulse function)
Dishwasher Safe Parts	Yes (removable parts)
Power Source	AC Adapter

9. WARRANTY AND SUPPORT

Your SEVERIN KM 3865 Multi-Chopper is manufactured to high-quality standards. In the unlikely event of a defect, please refer to the warranty terms provided at the time of purchase.


The EU spare part availability duration for this product is 1 year.

For technical support, warranty claims, or to inquire about spare parts, please contact your local SEVERIN service center or the retailer from whom you purchased the product. Please have your model number (KM 3865) and proof of purchase ready.

You can find more information and contact details on the official Severin website:www.severin.com

Related Documents - KM 3865

 <p>ART.-NO. KM 3865 DE: Gebrauchsanleitung EN: Instructions for use FR: Notice d'utilisation NL: gebruiksaanwijzing ES: Manual de instrucciones IT: Manuale d'uso PT: Manual de instruções SE: Bruksanvisning DK: Brugshåndbog FI: käyttöohje PL: instrukcja obsługi SV: Bruksanvisning</p>	<p>SEVERIN ZB 5592 Multi-Dicer Attachment User Manual</p> <p>User manual and instructions for the SEVERIN ZB 5592 Multi-Dicer Attachment, providing details on structure, safety, operation, cleaning, and disposal for use with the KM 3866 food processor.</p>
 <p>ART.-NO. KM 3865 DE: Gebrauchsanleitung EN: Food chopper FR: Notice d'utilisation NL: gebruiksaanwijzing ES: Manual de instrucciones IT: Manuale d'uso PT: Manual de instruções SE: Bruksanvisning DK: Brugshåndbog FI: käyttöohje PL: instrukcja obsługi SV: Bruksanvisning</p>	<p>SEVERIN KM 3865 Food Chopper Bedienungsanleitung</p> <p>Umfassende Bedienungsanleitung und Sicherheitshinweise für den SEVERIN KM 3865 Food Chopper. Erfahren Sie mehr über Funktionen, sichere Handhabung, Reinigung und Wartung des Küchengeräts.</p>
 <p>ART.-NO. UZ 3861 DE: Gebrauchsanleitung EN: Universal chopper FR: Notice d'utilisation NL: gebruiksaanwijzing ES: Manual de instrucciones IT: Manuale d'uso PT: Manual de instruções SE: Bruksanvisning DK: Brugshåndbog FI: käyttöohje PL: instrukcja obsługi SV: Bruksanvisning</p>	<p>SEVERIN UZ 3861 Universalzerkleinerer Bedienungsanleitung</p> <p>Die Bedienungsanleitung für den SEVERIN UZ 3861 Universalzerkleinerer bietet detaillierte Informationen zur sicheren Handhabung, Pflege und Anwendung des Küchengeräts.</p>
 <p>ART.-NO. SM 3771 / SM 3772 DE: Gebrauchsanleitung EN: Stabmixer FR: Notice d'utilisation NL: gebruiksaanwijzing ES: Manual de instrucciones IT: Manuale d'uso PT: Manual de instruções SE: Bruksanvisning DK: Brugshåndbog FI: käyttöohje PL: instrukcja obsługi SV: Bruksanvisning</p>	<p>SEVERIN SM 3771 / SM 3772 Stabmixer - Gebrauchsanweisung</p> <p>Umfassende Bedienungsanleitung für den SEVERIN Stabmixer SM 3771 und SM 3772. Enthält Sicherheitshinweise, Bedienung, Reinigung und technische Daten.</p>
 <p>ART.-NO. ZB 5592 DE: Gebrauchsanleitung EN: Multi-chopper FR: Notice d'utilisation NL: gebruiksaanwijzing ES: Manual de instrucciones IT: Manuale d'uso PT: Manual de instruções SE: Bruksanvisning DK: Brugshåndbog FI: käyttöohje PL: instrukcja obsługi SV: Bruksanvisning</p>	<p>SEVERIN ZB 5592 Multizerkleinerer-Aufsatz - Bedienungsanleitung</p> <p>Diese Anleitung bietet detaillierte Informationen zur sicheren Verwendung und Pflege des SEVERIN ZB 5592 Multizerkleinerer-Aufsatzes für die Küchenmaschine KM 3866. Enthält Anleitungen für verschiedene Sprachen.</p>

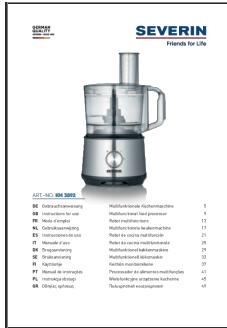

SEVERIN KM 3892 Multifunktionale Küchenmaschine Bedienungsanleitung

Umfassende Bedienungsanleitung für die SEVERIN KM 3892 Multifunktionale Küchenmaschine.
Enthält Anleitungen zur Bedienung, Sicherheitshinweise und Wartung für optimale Leistung und Langlebigkeit des Geräts.