

Mugast Mugast4u39wxoqy5

Universal Projector Remote Control User Manual

Brand: Mugast | Model: Mugast4u39wxoqy5

1. INTRODUCTION

This manual provides comprehensive instructions for the proper use and maintenance of your Mugast Universal Projector Remote Control. Please read this manual thoroughly before operating the device to ensure optimal performance and longevity. This remote control is designed for ease of use and broad compatibility with various projector models.

2. PRODUCT FEATURES

- Constructed from durable ABS material, ensuring long-lasting use and resistance to wear.
- Offers a remote control distance greater than 8 meters, though actual distance may vary depending on the specific projector model and environmental conditions.
- Serves as a reliable replacement for your original projector remote control.
- Universal compatibility with a wide range of projectors, including EMP-7800, EMP-7850, EMP-7900, EMP-7950, EMP-8300, EMP-830, EMP-835, EMP-1830, and EMP-1815.

3. PACKAGE CONTENTS

Please verify that all items are present in the package:

- 1 x Universal Projector Remote Control

4. SETUP

4.1 Battery Installation

The remote control requires two (2) AA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open the compartment.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.



Figure 4.1: Open battery compartment for AA battery insertion.

5. OPERATING INSTRUCTIONS

This universal remote control is designed to mimic the functions of your original projector remote. Point the remote directly at the projector's infrared receiver for optimal performance.



Figure 5.1: Overview of the remote control buttons.

5.1 Basic Functions

- **Power Button ():** Turns the projector on or off.
- **Source Search / Computer / Video / USB** Selects the input source for the projector.
- **A/V Mute:** Mutes audio and/or video output.
- **Freeze:** Pauses the current projected image.
- **User / Num (1-9):** Numeric buttons for direct input or specific functions.
- **Help:** Accesses the projector's help menu.
- **Auto:** Automatically adjusts the image settings.
- **Aspect / Color Mode:** Changes the aspect ratio or color mode.
- **Pointer:** Activates or deactivates the on-screen pointer.
- **Volume (+/-):** Adjusts the audio volume.
- **Up / Down / Page Up / Page Down** Navigates through menus or pages.
- **E-Zoom (+/-):** Electronically zooms in or out on the image.
- **Menu:** Opens the projector's main menu.
- **Navigation Arrows (Up, Down, Left, Right):** Navigates within menus.
- **Enter:** Confirms a selection.

- **Esc:** Exits a menu or cancels an action.



High quality replacement original remote control
for your projector.



Figure 5.2: Remote control in use with a projector.



The remote control distance is greater than 8M

the machine model is different and the distance is different.

Figure 5.3: The remote control offers an operating distance greater than 8 meters.

6. COMPATIBILITY

This universal remote control is compatible with a wide range of projector models. It is specifically designed to work seamlessly with the following projector series:

- EMP-7800
- EMP-7850
- EMP-7900
- EMP-7950
- EMP-8300
- EMP-830
- EMP-835
- EMP-1830
- EMP-1815

For models not listed, functionality may vary. Please refer to your projector's manual for remote control compatibility.



Figure 6.1: Wide compatibility with various projector models.

7. MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the surface of the remote control. Do not use abrasive cleaners, solvents, or alcohol, as these can damage the finish and internal components.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.
- **Avoid Drops:** While made of durable ABS, avoid dropping the remote control, as this can cause internal damage.

8. TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following table for common problems and their solutions:

Problem	Possible Cause	Solution
Remote control is not responding.	Dead or incorrectly installed batteries. Obstruction between remote and projector. Remote not compatible with projector.	Check battery orientation and replace if necessary. Ensure clear line of sight to projector's IR receiver. Verify projector model compatibility.
Limited operating range.	Low battery power. Interference from other devices.	Replace batteries with new ones. Minimize interference from strong light sources or other IR devices.
Certain buttons do not work.	Button malfunction. Projector does not support the function.	Ensure the button is not stuck. Confirm if your projector model supports the specific function.

9. SPECIFICATIONS

Detailed technical specifications for the Mugast Universal Projector Remote Control:

Feature	Specification
Shell Material	ABS
Remote Control Distance	Greater than 8 meters (varies by machine model)
Battery Model	2 * AA (not included)
Product Dimensions (L*W*H)	Approx. 140 * 48 * 25 mm / 5.5 * 1.9 * 1.0 in
Weight	47 g
Connectivity Type	Infrared



Figure 9.1: Front and back view of the remote control.



10. WARRANTY AND SUPPORT

Information regarding product warranty and customer support was not provided in the available product details. For any warranty claims or technical assistance, please refer to the seller or manufacturer's official website, or contact their customer service directly using the contact information provided at the point of purchase.