

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Geepas](#) /

› [Geepas GTP7187 Executive Telephone User Manual](#)

Geepas GTP7187

Geepas GTP7187 Executive Telephone User Manual

INTRODUCTION

The Geepas GTP7187 is a corded executive telephone designed for clear communication and convenience. It features Caller ID, a large 16-digit LCD, hands-free calling, and auto-redial functionality. This manual provides detailed instructions for setting up and operating your telephone, ensuring optimal performance and longevity.

BOX CONTENTS

Please check the package contents carefully. If any items are missing or damaged, contact your retailer.

- Telephone Handset
- Base Unit
- Power Adapter
- User Manual
- Warranty Card
- Phone Cord

PRODUCT OVERVIEW

Familiarize yourself with the main components of your Geepas GTP7187 telephone.



Figure 1: The Geepas GTP7187 Executive Telephone base unit and handset placed on a wooden desk. This image provides a general view of the product in a typical setting.

- **LCD Display:** Extra-large, 16-digit display for Caller ID, call history, and menu navigation.
- **Keypad:** Standard numeric keys (0-9, *, #) for dialing.
- **Handset:** For private conversations.
- **Speakerphone (H.F button):** Enables hands-free communication.
- **Function Buttons:**
 - **DEL:** Delete button.
 - **UP/DOWN:** Navigation buttons for menus and call history.
 - **BACKWARD/CHECK:** Used for reviewing information or navigating.
 - **MEMO:** Memory function button.
 - **M1-M10:** One-touch memory dial buttons.
 - **FLASH/SET:** Flash function or setting mode activation.
 - **RD/PAUSE:** Redial or pause function.
- **Visual Ring Indicator:** A flashing light to indicate an incoming call.



Figure 2: A detailed close-up of the Geepas GTP7187 telephone's main interface, highlighting the large LCD screen, numeric keypad, and dedicated function buttons like M1-M10 for speed dialing.

SETUP

Follow these steps to set up your Geepas GTP7187 telephone.

1. **Connect the Handset:** Plug the coiled cord from the handset into the designated port on the left side of the telephone base unit.
2. **Connect the Phone Line:** Plug one end of the phone cord into the LINE port on the back of the telephone base unit and the other end into your wall telephone jack.
3. **Connect Power Adapter:** Insert the small end of the power adapter into the DC IN port on the back of the telephone base unit. Plug the other end of the power adapter into a standard electrical outlet.
4. **Initial Check:** Once connected, the LCD display should light up. Lift the handset or press the H.F button to check for a dial tone.



Figure 3: The back panel of the Geepas GTP7187 telephone, illustrating the various connection ports for the phone line, handset, and power adapter. Ensure all connections are secure.

OPERATING INSTRUCTIONS

Making Calls

- **Standard Dialing:** Lift the handset or press the **H.F** button for speakerphone. Dial the desired phone number using the keypad.
- **Memory Dialing (M1-M10):** To dial a stored number, lift the handset or press **H.F**, then press the desired memory button (e.g., **M1**).
- **Auto-Redial:** If the number dialed is engaged, or to redial one of the last 15 outgoing calls, lift the handset or press **H.F**, then press the **RD/PAUSE** button.

Receiving Calls

- When an incoming call is received, the telephone will ring, and the visual ring indicator will flash.
- To answer, lift the handset or press the **H.F** button to answer in speakerphone mode.

Caller ID and Call History

- The LCD display shows the incoming caller's number (if available from your service provider).
- The telephone records up to 50 incoming calls and 15 outgoing calls.
- Use the **UP** and **DOWN** buttons to scroll through the call history.
- Press **CHECK** to view details of a selected call.

Hands-Free Calling

- To activate hands-free mode during a call, press the **H.F** button. The microphone and speaker on the base unit will become active.
- To switch back to the handset, simply lift the handset.

Phonebook Function

- The built-in phonebook allows you to store frequently called numbers.
- To store a number: Press **MEMO**, enter the number, then press **MEMO** again and select a memory location (e.g., M1-M10) or a general phonebook entry. Refer to the detailed instructions in the included user manual for specific steps.
- When the phonebook memory is full, the display will show "100%".

Ringtone Selection

- The telephone offers 16 different ringtones.
- To change the ringtone, access the settings menu using the **FLASH/SET** button and navigate with **UP/DOWN**.

MAINTENANCE

Proper care ensures the longevity of your telephone.

- **Cleaning:** Wipe the telephone with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Avoid Liquids:** Keep the telephone away from water and other liquids.
- **Placement:** Place the telephone on a stable surface, away from direct sunlight, heat sources, and excessive dust.

TROUBLESHOOTING

If you encounter issues with your Geepas GTP7187 telephone, try the following solutions:

Problem	Possible Cause	Solution
No dial tone	Phone cord or power adapter not connected properly.	Ensure all cords are securely plugged into their respective ports and the wall jack/power outlet.
Cannot hear caller / Caller cannot hear me	Handset or speakerphone volume too low; faulty connection; line interference.	Adjust volume. Check handset and phone line connections. Test with another phone if possible to rule out line issues.
Caller ID not displayed	Caller ID service not activated; incorrect phone line connection.	Contact your telephone service provider to ensure Caller ID is active. Verify phone line connection.

Problem	Possible Cause	Solution
Buttons not responding	Temporary software glitch; dirt/debris under buttons.	Unplug the power adapter and phone line, wait a few minutes, then reconnect. Clean the keypad surface.

SPECIFICATIONS

Key technical specifications for the Geepas GTP7187 Executive Telephone.

- **Brand:** Geepas
- **Model:** GTP7187
- **Colour:** Black
- **Telephone Type:** Corded
- **Material:** Plastic
- **Power Source:** Corded Electric
- **Dialer Type:** Single Keypad
- **Answering System Type:** Digital
- **Compatible Devices:** Multi-line phone setup
- **Multiline Operation:** Yes
- **Phone Standby Time:** 72 Hours
- **Caller ID:** Yes
- **Enclosure Material:** Plastic
- **Item Weight:** 660 g

WARRANTY AND SUPPORT

Your Geepas GTP7187 Executive Telephone comes with a warranty and support information.

- **Warranty:** This product is covered by a **2 Years Warranty** from the date of purchase. Please retain your purchase receipt for warranty claims.
- **Support:** For technical assistance, troubleshooting beyond this manual, or warranty service, please contact Geepas customer support. Refer to the contact information provided on the warranty card or the official Geepas website.