

- Manuals.plus /
- > [Beyution](#) /
 - > User Manual for Beyution ER-22601A Remote Control Compatible with Hisense TV

Beyution BE-ER-22601A

User Manual for Beyution ER-22601A Remote Control

Model: ER-22601A / BE-ER-22601A

1. PRODUCT OVERVIEW

The Beyution ER-22601A is a replacement infrared remote control designed for seamless compatibility with a wide range of Hisense TV models. This remote provides all essential functions for controlling your television, offering a straightforward and reliable user experience without the need for complex programming.





Image 1.1: Front view of the ER-22601A remote control. This image displays the full layout of the remote's buttons, including power, channel, volume, navigation, and numeric keys.

2. SETUP GUIDE

2.1 Battery Installation

The ER-22601A remote control requires two (2) AAA batteries for operation. For optimal performance and to avoid issues, it is highly recommended to use brand new alkaline batteries.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.







Image 2.1: Back view of the ER-22601A remote control with the battery compartment open. This image illustrates where the AAA batteries should be inserted.

3. OPERATING INSTRUCTIONS

3.1 Basic Operation

This remote control operates using infrared (IR) technology. For proper function, ensure there is a clear line of sight between the remote control and the IR receiver on your Hisense TV. Point the remote directly at the television when pressing buttons.

- **Power Button ():** Press to turn the TV on or off.
- **TV/DTV, TV/Radio, Source Buttons:** Use to switch between input sources or modes.
- **Numeric Buttons (0-9):** Directly enter channel numbers.
- **CH+/CH- (Channel Up/Down):** Navigate through channels sequentially.
- **VOL+/VOL- (Volume Up/Down):** Adjust the audio volume.
- **Mute Button:** Temporarily silence the TV audio.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.
- **Menu Button:** Access the TV's main menu.
- **Exit Button:** Exit from menus or on-screen displays.
- **Media Button:** Access media playback functions.
- **Sleep Button:** Set a sleep timer for the TV.

3.2 Compatible Hisense TV Models

This replacement remote control is compatible with the following Hisense TV models:

- 24D33
- 24E33
- 24F33
- 32D33
- 32D36
- 32D50
- 40D50
- 40D50P
- 50D36P
- 16A3000
- 32M2160
- 32D60TSP
- 40D60TSP
- 40K220PW
- 40M2160P
- HL24K20D
- HL32K20D

- F40B7000H
- H40M2100C
- LHD24D33EU
- LHD32D33EU
- LHD32D36EU
- LHD32D50AU
- LHD24D33SEU
- LHD24W26CEU
- LHD32D31TUK
- LHD32D33SEU
- LHD32W26CEU
- LTDN40D36EU
- LTDN40D50AU
- LTDN40D50EU
- LHD32A300JEU
- LTDN40D36SEU
- LTDN40D36TUK
- LHD32A300JSEU
- LTDN40E139TUK

4. CARE AND MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these simple care and maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries promptly when the remote's performance degrades. Always use new alkaline batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

5. TROUBLESHOOTING

5.1 Common Issues and Solutions

- **Remote is not working or unresponsive:**
 - Ensure you have installed **brand new alkaline batteries**. Rechargeable batteries may not provide sufficient power.
 - Check the battery orientation (+/-) to ensure they are inserted correctly.
 - Verify that there are no obstructions between the remote control and the TV's infrared receiver.
 - Make sure you are pointing the remote directly at the TV.
- **Some buttons are not functioning as expected:**
 - Confirm that your Hisense TV model is listed in the "Compatible Hisense TV Models" section (Section 3.2). While this remote is a replacement, specific TV models may have unique functions not supported by a universal replacement.

- Ensure the remote is clean and free of debris that might be jamming buttons.

6. PRODUCT SPECIFICATIONS

Model Number	BE-ER-22601A
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	2 ounces
Batteries Required	2 x AAA batteries (Alkaline recommended)
Connectivity Technology	Infrared (IR)
Compatible Devices	Hisense Televisions
Max Number of Supported Devices	1 (Television)

7. WARRANTY AND SUPPORT

7.1 Warranty Information

Specific warranty details for this replacement remote control are not provided in the product information. Please refer to the retailer or manufacturer's website for any applicable warranty policies or return information.

7.2 Customer Support

If you encounter issues not covered in this manual, or if your specific Hisense TV model is not listed in the compatibility section, please contact the seller or manufacturer for further assistance. Providing your TV's model number will help them determine the correct solution or remote control for your device.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07PW36MT6>

More documents and user manuals: <https://manuals.plus/>