

[Manuals.plus](#) /

› [EDUP HOME](#) /

› EDUP HOME 15" 3D LED Digital Wall Clock User Manual

## EDUP HOME EH-LED1301

# EDUP HOME 15" 3D LED Digital Wall Clock User Manual

Model: EH-LED1301

### INTRODUCTION

This manual provides comprehensive instructions for the EDUP HOME 15" 3D LED Digital Wall Clock. Designed for clear visibility and modern aesthetics, this clock offers multiple functions including time, date, temperature display, and alarm capabilities. Its versatile design allows for both wall mounting and tabletop placement, making it suitable for various environments such as living rooms, bedrooms, offices, and gyms.



Image: Front view of the EDUP HOME 15 inch 3D LED Digital Wall Clock, showcasing its large, clear digital display.

## KEY FEATURES

- **Large 15-inch LED Display:** Provides excellent visibility, making it easy to read from a distance.
- **Multi-function Display:** Shows time (12/24 hour format), date, and temperature.
- **Alarm Function:** Includes snooze capability for convenience.
- **Adjustable Brightness:** Features 4-level brightness adjustment, including an auto-dimming mode for optimal viewing day or night.
- **Remote Control:** Allows for easy adjustment of settings from a distance of up to 8-10 meters.
- **Power Source:** USB cable powered, with a built-in battery for time recording during power outages.
- **Elegant 3D Design:** Modern aesthetic that complements various home and office decors.

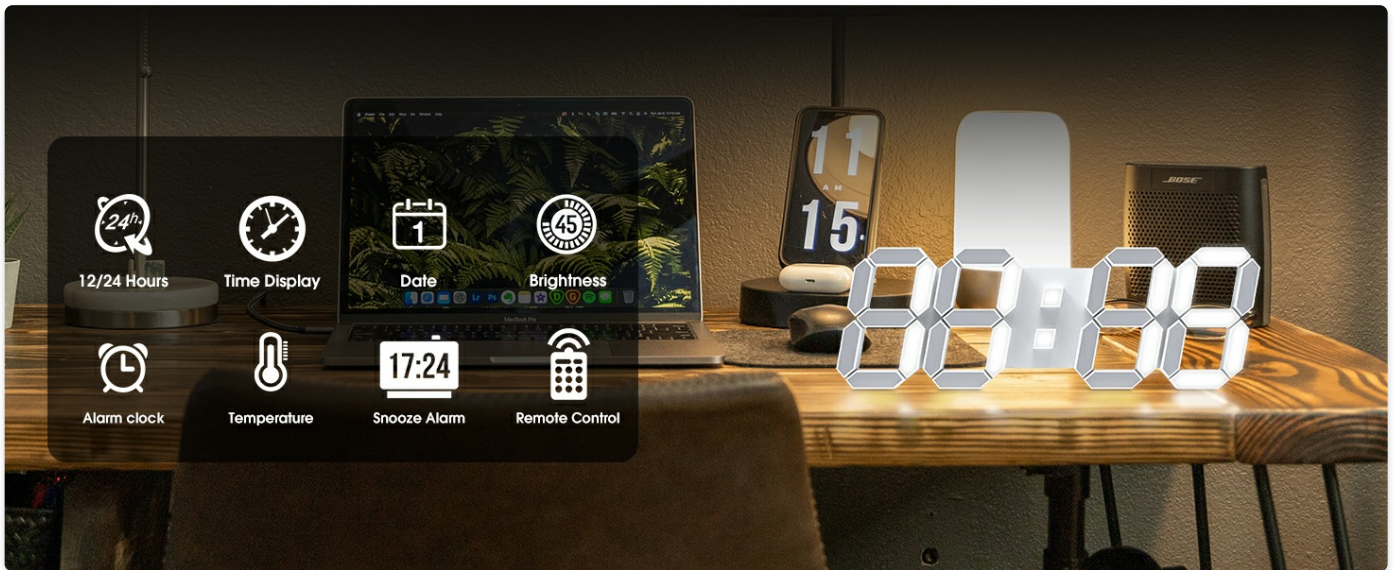 


Image: Visual representation of the clock's multi-functional capabilities, including time, date, temperature, alarm, and brightness controls.

## WHAT'S IN THE BOX

Upon unboxing your EDUP HOME 3D LED Digital Wall Clock, you should find the following components:

- 1 x EDUP HOME 15" 3D LED Digital Wall Clock
- 1 x Remote Control
- 1 x USB Power Cable
- 1 x Desk Mount Stand (for tabletop use)
- Wall Mounting Hardware (screws and anchors)
- 1 x User Manual
- 1 x LR44 Battery (pre-installed for time memory)



Image: All components included in the product packaging, laid out for clear viewing.

## SETUP INSTRUCTIONS

### Power Connection

1. Unpack all components from the box.
2. Locate the USB power cable.
3. Insert the small end of the USB cable into the power port located on the back of the clock.
4. Plug the larger end of the USB cable into a standard USB power adapter (not included) or a powered USB port.
5. The clock display will illuminate once power is connected.

### Mounting Options

The clock offers two primary mounting options:

#### A. Wall Mounting

1. Choose a desired location on your wall. Ensure there is a power outlet nearby or a discreet path for the USB cable.
2. Use the provided wall mounting hardware (screws and anchors) to secure the clock. The back of the clock features keyhole slots for easy hanging.
3. Carefully hang the clock onto the installed screws.



Image: The clock displayed prominently on a wall, demonstrating its wall-mounting capability.

### **B. Tabletop Placement**

1. Attach the included desk mount stand to the bottom of the clock. The stand slides into designated slots.
2. Place the clock on any flat surface, such as a desk, nightstand, or shelf.



Image: The clock positioned on a desk, illustrating its use with the included tabletop stand.

### Video: Setting up the EDUP HOME 3D LED Clock

Your browser does not support the video tag.

This video demonstrates the unboxing, connection of the power cable, and placement options for the 3D LED Digital Wall Clock.

## OPERATING INSTRUCTIONS

The clock can be operated using the included remote control or the buttons on the back of the unit.

### Remote Control Functions

The remote control provides convenient access to all clock settings:

- **Power Button:** Turns the display on/off.
- **SET:** Enters setting mode for time, date, and alarm.
- **Arrow Buttons (Up/Down/Left/Right):** Navigate through settings and adjust values.
- **ENTER:** Confirms selections during setting.
- **CLOCK/TEMP/DATE:** Cycles through time, temperature, and date display modes.
- **ALARM:** Activates/deactivates the alarm and enters alarm setting mode.
- **LIGHT (Brightness):** Adjusts the display brightness (4 levels).
- **12/24H:** Toggles between 12-hour and 24-hour time formats.

## Setting Time and Date

1. Press the **SET** button on the remote. The hour digits will start blinking.
2. Use the **Up/Down** arrow buttons to adjust the hour.
3. Press the **Right** arrow button to move to the minute digits, then adjust with **Up/Down**.
4. Continue this process for setting the year, month, and day.
5. Press **ENTER** to save your settings and exit.

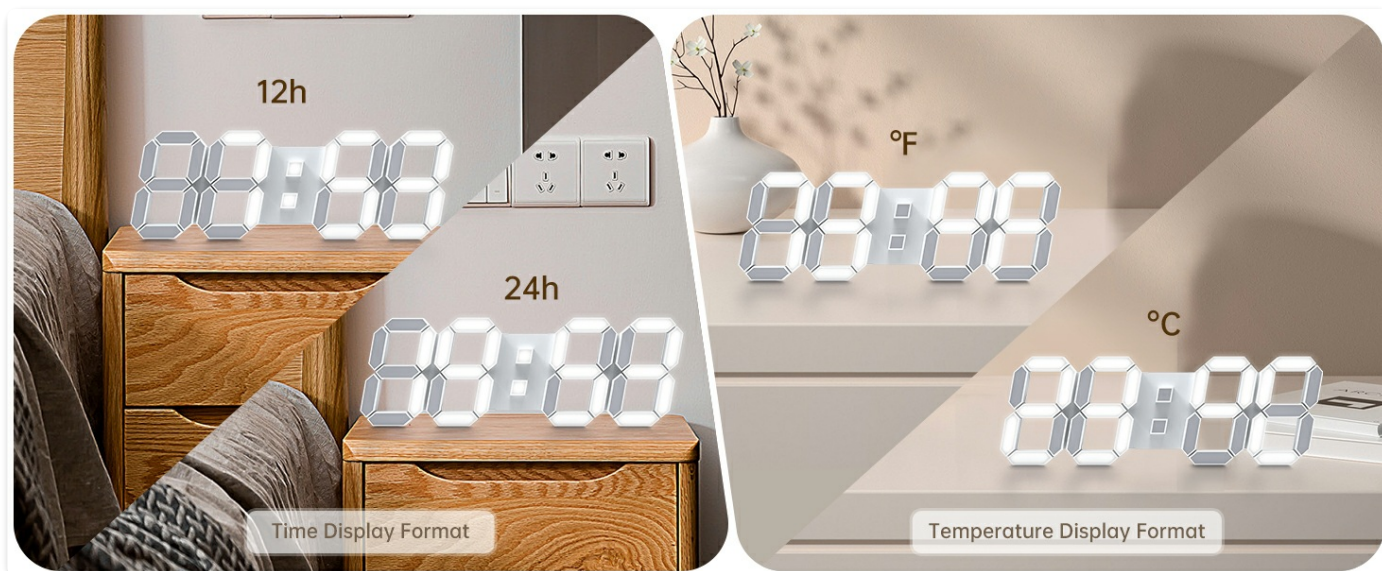 


Image: The clock showing different display formats for time (12h/24h) and temperature (°F/°C).

## Setting the Alarm

1. Press the **ALARM** button on the remote. The alarm hour digits will blink.
2. Adjust the alarm hour using the **Up/Down** arrow buttons.
3. Press the **Right** arrow to move to alarm minutes, then adjust with **Up/Down**.
4. Press **ENTER** to confirm.
5. To activate/deactivate the alarm, press the **ALARM** button again. An alarm icon will appear/disappear on the display.
6. To snooze, press any button on the remote (except power) when the alarm sounds.

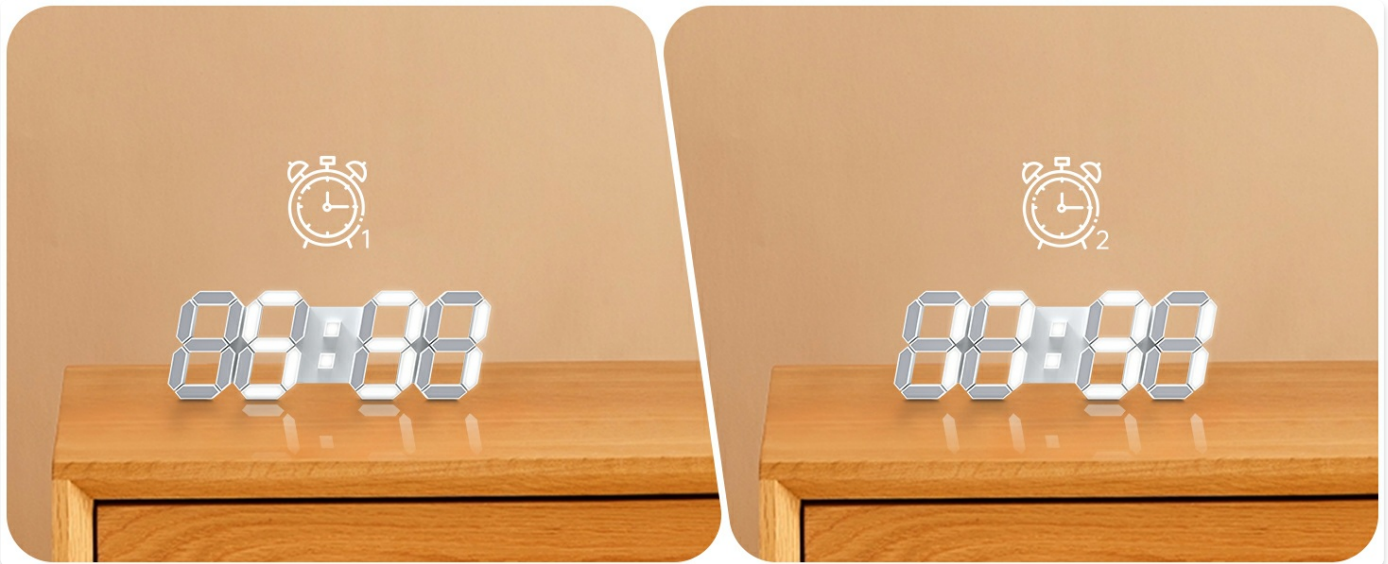 


Image: The clock displaying two distinct alarm settings, indicating its dual alarm capability.

## Adjusting Brightness

The clock has 4 levels of brightness. You can manually adjust it or use the auto-dimming feature.

- Press the **LIGHT** button on the remote to cycle through the 4 brightness levels.
- The clock also features an automatic dimming function that adjusts brightness based on ambient light.

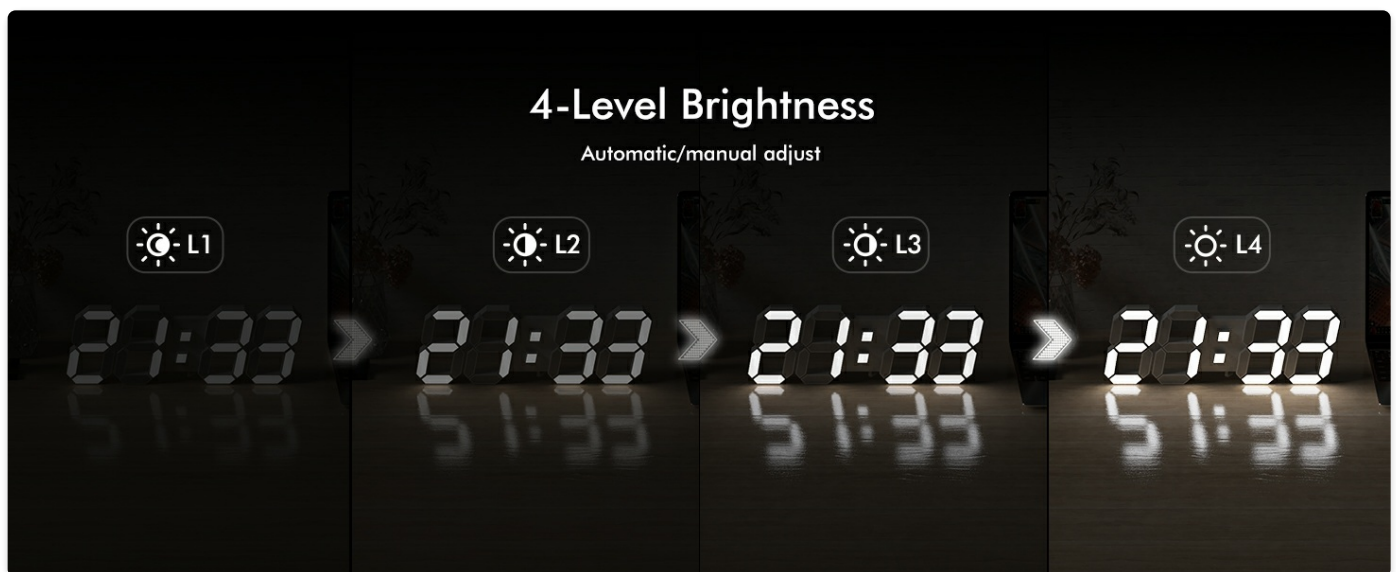 


Image: A visual guide demonstrating the four adjustable brightness levels of the clock, from dim to very bright.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the clock's surface. Avoid abrasive cleaners or solvents that may damage the acrylic material.
- **Power Supply:** Ensure the USB cable is not bent or damaged, as this can affect performance.
- **Battery:** The clock contains a built-in LR44 battery for time memory during power outages. This battery is not user-replaceable for primary operation. The clock is powered solely by the USB cable.

TROUBLESHOOTING

| Problem                                   | Possible Cause                             | Solution                                                                                                                                                                    |
|-------------------------------------------|--------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Clock not turning on.                     | No power supply or loose connection.       | Ensure the USB cable is securely plugged into the clock and a working power source. Try a different USB adapter or port.                                                    |
| Display flickering or glitching.          | Unstable power connection or faulty cable. | Unplug the USB cable from both the clock and the power source for a few minutes, then reconnect. Check the cable for any visible damage.                                    |
| Remote control not working.               | Remote battery depleted or obstruction.    | Ensure there are no obstructions between the remote and the clock's sensor. Replace the remote battery if necessary.                                                        |
| Time/Date not retaining after power loss. | Internal backup battery issue.             | While the clock has a built-in battery for time recording, prolonged power loss or a depleted internal battery may cause settings to reset. Ensure consistent power supply. |

SPECIFICATIONS

| Feature              | Detail                                                       |
|----------------------|--------------------------------------------------------------|
| Brand                | EDUP HOME                                                    |
| Model Number         | EH-LED1301                                                   |
| Display Type         | Digital LED                                                  |
| Dimensions           | 15"W x 5"H                                                   |
| Material             | Acrylic                                                      |
| Power Source         | Corded Electric (USB)                                        |
| Battery (for memory) | 1 LR44 battery (included)                                    |
| Brightness Levels    | 4 levels + Auto-dimming                                      |
| Remote Control Range | 8-10 meters                                                  |
| Functions            | Time (12/24H), Date, Temperature, Alarm, Snooze, Night Light |
| Mounting Type        | Wall Mount / Tabletop                                        |
| Item Weight          | 12.3 ounces                                                  |

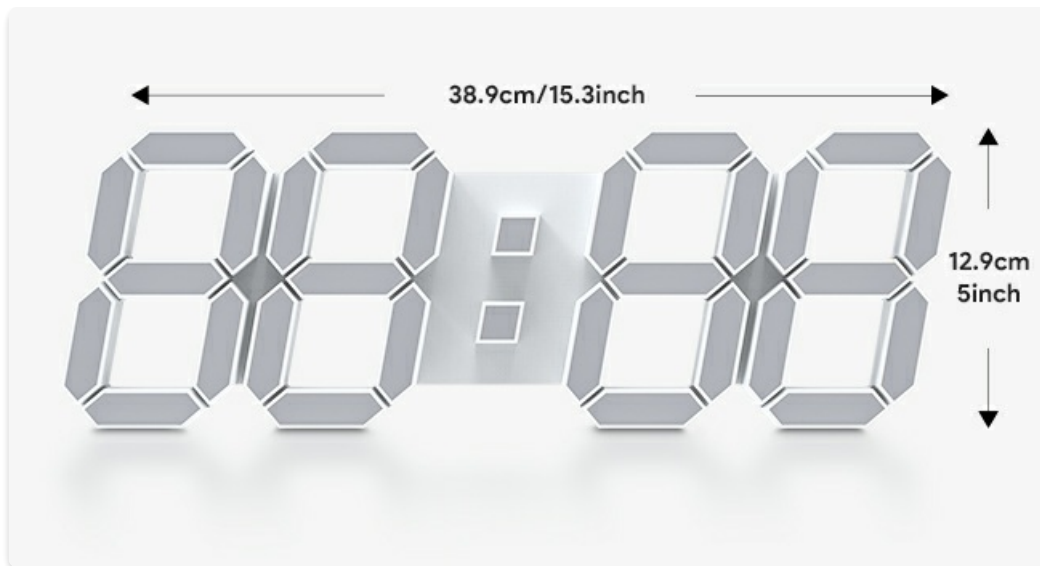 


Image: A diagram illustrating the precise dimensions of the clock for accurate placement and planning.

## WARRANTY AND SUPPORT

EDUP HOME offers a two-year manufacturer replacement warranty for this product. Additionally, a 90-day no-questions-asked return policy is in place.

For any questions, concerns, or support needs, please feel free to contact us via Amazon message. You can also refer to the official User Manual PDF for more detailed information.

Official User Manual (PDF): [Download Here](#)

© 2024 EDUP HOME. All rights reserved.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**