

Epson ET-2720

Epson EcoTank ET-2720 Wireless Color All-in-One Printer User Manual

Model: ET-2720

1. INTRODUCTION

This manual provides instructions for the Epson EcoTank ET-2720 wireless all-in-one printer. The ET-2720 is designed for printing, scanning, and copying, featuring high-capacity, refillable ink tanks. This printer supports wireless connectivity and offers a color display for navigation.

2. WHAT'S IN THE BOX

Verify that all components are present in the packaging:

- Epson EcoTank ET-2720 all-in-one printer
- Manual
- CD-ROM for product setup
- Power cord
- 1x bottle 522 Black ink (65 mL)
- 1x bottle each 522 Cyan, Magenta, Yellow ink (65 mL)

In the box

EcoTank® ET-2720 All-in-One Cartridge-Free Supertank Printer



All-in-One Supertank Printer



*The NPD Group, Inc., Total Channel Tracking Service, U.S. & Canada, Printers, Refillable ink tank included, based on units, August 2017 – July 2018. Supertank printers are defined as refillable ink tank printers.



EcoTank 522 Ink Bottles

We recommend genuine Epson® ink for the best print quality and performance.



Power Cord

(USB cable not included)



CD and Documentation

Image: The Epson EcoTank ET-2720 printer shown with its included accessories: ink bottles, power cord, and setup CD-ROM.

3. INITIAL SETUP

3.1 Unpacking and Placement

Remove all protective materials and tape from the printer. Place the printer on a stable, flat surface with adequate space for paper loading and output.

3.2 Filling Ink Tanks

The EcoTank ET-2720 uses high-capacity ink tanks. Follow these steps to fill the ink tanks:

1. Open the ink tank unit cover on the side of the printer.
2. Open the cap for the corresponding color ink tank.
3. Uncap the ink bottle and insert it into the filling port. The EcoFit bottles are uniquely keyed to fit only the correct color tank.
4. Allow the ink to fill the tank. The bottle will stop filling automatically when the tank is full.
5. Remove the ink bottle and securely close the tank cap and the ink tank unit cover.
6. Repeat for all ink colors.

Uniquely keyed EcoFit™ auto-stop ink bottles



Image: A hand demonstrates filling an ink tank on the Epson EcoTank ET-2720 using a keyed EcoFit ink bottle, ensuring correct color placement and mess-free refilling.

3.3 Power Connection

Connect the power cord to the printer and then to an electrical outlet. Press the power button to turn on the printer.

3.4 Software Installation and Wireless Setup

Insert the included CD-ROM into your computer's drive and follow the on-screen instructions to install the printer software. During installation, you will be guided through connecting the printer to your wireless network. Alternatively, you can download the latest software from the Epson support website.

4. BASIC OPERATIONS

At a glance




EcoTank® ET-2720 All-in-One Cartridge-Free Supertank Printer



Wireless



Print

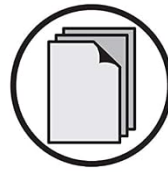


Copy



Scan

Additional features

- ✓ Save up to 90 percent with low-cost replacement ink bottles vs. ink cartridges¹
- ✓ Cartridge-Free Printing — up to 2 years of ink with each included or replacement ink set²
- ✓ Replacement ink bottle set — enough ink to print up to 4,500 pgs bk/7,500 clr³
- ✓ Set of replacement bottles equivalent to about 80 individual cartridges⁴
- ✓ 2-year limited warranty with registration*

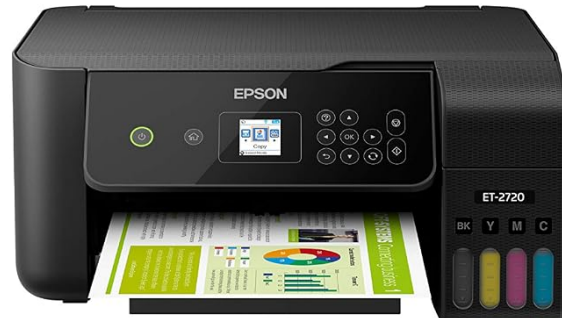

Ink bottles



EcoTank 522 Ink Bottles

We recommend genuine Epson® ink for the best print quality and performance.

- ¹ Actual savings and costs will vary considerably based on print tasks, print volumes and usage conditions. Savings and cost per ISO page are based on the cost of replacement ink bottles and the cost of enough standard cartridges to achieve the total page yields of the bottles using the MSRP (USD) and yields for Epson standard-capacity ink cartridges for similarly featured Epson consumer inkjet printers as of February 2019.
- ² Based on average monthly document print volumes of about 125 pages.
- ³ Part of the ink from the included bottles is used for initial setup; yields are lower than those of replacement ink bottles. Replacement and included ink bottle yields based on the ISO/IEC 24712 pattern with Epson's methodology. Actual ink yields will vary considerably for reasons including images printed, print settings, temperature and humidity. Yields may be lower when printing infrequently or predominantly with one ink color. All ink colors are used for printing and printer maintenance, and all colors must be available for printing. For more information, visit www.epson.com/inkinfo
- ⁴ Individual cartridges estimate based on print yields of a replacement set of black and color ink bottles as compared to Epson standard-capacity ink cartridges for similarly featured printers as of June 2019.

***SCROLL DOWN TO "FROM THE MANUFACTURER" TO LEARN MORE.**

Image: Icons representing the core functions of the Epson EcoTank ET-2720: Wireless connectivity, Printing, Copying, and Scanning.

4.1 Loading Paper

Open the paper support and pull out the output tray. Load paper into the rear paper feed slot, adjusting the edge guides to fit the paper width. The printer supports various paper types and sizes, including 4" x 6", 5" x 7", A6, Half Letter, Letter, A4, Executive, and Legal.

4.2 Printing

To print a document or photo:

- **From a Computer:** Select 'Print' from your application, choose the Epson ET-2720, and adjust settings as needed before confirming.
- **Wireless Printing:** Ensure your printer is connected to your wireless network. You can print directly from tablets and smartphones using the Epson Smart Panel App.
- **Voice-Activated Printing:** The printer supports voice-activated printing through Amazon Alexa and Google Assistant. Refer to the respective voice assistant's setup guide for integration.

4.3 Copying

To make a copy:

1. Place your document face-down on the scanner glass.
2. Use the printer's control panel and color display to select 'Copy'.
3. Adjust settings such as number of copies, color/black & white, and paper size.
4. Press the Start button to begin copying.

4.4 Scanning

To scan a document or photo:

1. Place your document face-down on the scanner glass.
2. From your computer, open the Epson Scan software or use the Epson Smart Panel App on your smart device.
3. Select 'Scan' and choose your desired settings (e.g., resolution, document type, destination).
4. Initiate the scan. The scanned image will be saved to your specified location.

EcoTank® ET-2720 All-in-One Cartridge-Free Supertank Printer



***SCROLL DOWN TO "FROM THE MANUFACTURER" TO LEARN MORE.**

Image: The Epson EcoTank ET-2720 printer highlighting its 1.44-inch color display, voice-activated printing compatibility, and smartphone/tablet printing capabilities.

5. MAINTENANCE

5.1 Ink Level Monitoring and Refilling

Regularly check the ink levels in the transparent ink tanks. When an ink tank is low, refill it using genuine Epson 522 series EcoFit ink bottles. Refer to section 3.2 for detailed ink filling instructions.



Image: The Epson Genuine Ink Promise logo, emphasizing the recommendation to use authentic Epson inks for optimal print quality and printer performance.

5.2 Nozzle Check and Head Cleaning

If print quality declines (e.g., missing lines, incorrect colors), perform a nozzle check to identify clogged nozzles. If necessary, perform a print head cleaning. These functions can typically be accessed through the printer's control panel or the printer utility software on your computer. Note that head cleaning consumes a small amount of ink.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your Epson ET-2720 printer.

6.1 Printer Not Responding

- Ensure the printer is powered on and connected to a power source.
- Check the USB cable connection if using a wired connection.
- For wireless connections, verify that the printer is connected to the correct Wi-Fi network and that the network is operational. Restarting your router and printer may resolve connectivity issues.
- Check for any error messages on the printer's display.

6.2 Poor Print Quality

- Perform a nozzle check and print head cleaning (refer to section 5.2).
- Ensure genuine Epson ink is used and ink tanks are adequately filled.
- Check print settings in your application to ensure they match the paper type and desired quality.
- Use high-quality paper suitable for inkjet printing.

6.3 Paper Jams

- Turn off the printer and carefully remove any jammed paper from the input tray, output tray, or inside the printer.
- Ensure paper is loaded correctly and not exceeding the maximum capacity.
- Avoid using wrinkled or damaged paper.

7. SPECIFICATIONS

Feature	Specification
Product Dimensions	13.7"D x 14.8"W x 8.7"H
Item Weight	8.8 pounds
Connectivity Technology	Wi-Fi, USB
Printing Technology	Inkjet
Printer Output	Color
Maximum Print Speed (Monochrome)	10 ppm
Maximum Print Speed (Color)	5 ppm
Maximum Print Resolution	5760 x 1440 dpi (Color & Black/White)
Scanner Type	Flatbed
Max Input Sheet Capacity	100 sheets
Compatible Devices	Tablets, Amazon Alexa, Android, Vera
Ink Color	Cyan, Magenta, Yellow, Black
Control Method	Voice, Display Screen
Memory Storage Capacity	64 MB
Power Consumption	13 watts

8. WARRANTY INFORMATION

The Epson EcoTank ET-2720 printer includes a 12-month standard limited warranty or 30,000 plain paper sheets (whichever occurs first). For an additional 12-month extended service plan (total of 24 months or 30,000 plain paper sheets, whichever occurs first), you must register your product and use genuine Epson ink bottles. Refer to the official Epson website for complete warranty details.



Image: A graphic indicating a 2-year product protection plan available with registration for the Epson EcoTank ET-2720 printer.

9. SUPPORT AND RESOURCES

For further assistance and detailed information, please refer to the following resources:

- **Official User Manual (PDF):** [Download PDF Manual](#)
- **Epson Brand Store:** [Visit Epson Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question