

Toastermaster TM26TS

Toastermaster 2-Slice Toaster Instruction Manual

Model: TM26TS

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before operating the toaster.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect, turn any control to "off", then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
14. A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
15. Do not attempt to dislodge food when toaster is plugged in.
16. Do not operate unattended.

PRODUCT OVERVIEW

The Toastmaster 2-Slice Toaster is designed for efficient and convenient toasting of various bread types. It features a cool-touch exterior for safe handling and multiple functions for customized toasting.



Image: The Toastmaster 2-Slice Toaster in black with stainless steel accents, shown with two slices of bread inserted into the wide slots.

2-Slice Cool Touch Toaster



2.09 POUNDS



850 WATTS



120 VOLTS

Image: A diagram illustrating the dimensions of the toaster (10.98 inches length, 6.61 inches width, 6.93 inches height) and key specifications: 2.09 pounds, 850 watts, 120 volts.

Key Features:

- **Cool-Touch Exterior:** Designed for safe handling during and after operation.
- **Adjustable Browning Control:** A dial allows you to select your preferred toast shade from light to dark.
- **Wide, Self-Centering Slots:** Accommodates various bread types, including thick slices, bagels, and artisanal breads.
- **High-Rise Toast Lift:** Lifts smaller items higher for easy and safe retrieval.
- **Three Function Buttons:** Includes dedicated buttons for Bagel, Frozen, and Cancel.
- **Hinged Crumb Tray:** For easy cleaning and maintenance.
- **Powerful 850 Watts:** Ensures fast and efficient toasting performance.

Thoughtful Design



Wide slots



High rise
toast lift



Hinged
crumb tray

**COOL
TOUCH**
EXTERIOR



Image: An illustration highlighting the toaster's thoughtful design, pointing out the wide slots, high-rise toast lift, and hinged crumb tray, along with a "Cool Touch Exterior" label.

Wide, self-centering slots



Bagel Function



Frozen function

ADJUSTABLE
BROWNING
CONTROL



Image: A close-up view of the toaster's top, emphasizing the wide, self-centering slots and the adjustable browning control dial. Labels indicate "Bagel Function" and "Frozen function".

SETUP AND FIRST USE

1. **Unpack:** Carefully remove the toaster and all packaging materials.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials like curtains or walls. Ensure adequate ventilation around the toaster.
3. **Initial Operation (Burn-off):** Before first use, operate the toaster without bread on the highest browning setting (6) for a few minutes. This will burn off any manufacturing residues and eliminate initial odors. A slight smoke or odor is normal during this process. Ensure the area is well-ventilated.
4. **Clean Crumb Tray:** After the burn-off cycle, allow the toaster to cool completely, then remove and clean the crumb tray.

OPERATING INSTRUCTIONS

1. **Plug In:** Insert the power plug into a standard 120V AC electrical outlet.
2. **Insert Bread:** Place up to two slices of bread, bagels, or other items into the toasting slots. The self-centering guides will hold the bread in place.
3. **Select Browning Level:** Turn the browning control dial to your desired setting. Settings range from 1 (lightest) to 6 (darkest). Start with a medium setting (e.g., 3 or 4) and adjust as needed for future use.
4. **Lower Lever:** Press the toast lever down until it locks into place. The toasting cycle will begin.
5. **Using Special Functions:**
 - **Bagel Function:** Press the "BAGEL" button after lowering the lever. This function toasts the cut side of the bagel while warming the other side. The indicator light will illuminate.
 - **Frozen Function:** Press the "FROZEN" button after lowering the lever. This function adds extra toasting time to properly toast frozen items. The indicator light will illuminate.
6. **Toasting Complete:** Once the selected browning level is reached, the toast will automatically pop up, and the lever will release.
7. **Cancel Function:** To stop the toasting cycle at any time, press the "CANCEL" button. The toast will pop up immediately.
8. **Retrieve Toast:** Use the high-rise toast lift feature by gently lifting the toast lever upwards to raise smaller items for easier and safer removal.
9. **Unplug:** Always unplug the toaster from the outlet when not in use.

Three Function Buttons

✓ Frozen

✓ Bagel

✓ Cancel



Image: A detailed view of the toaster's control panel, showing the "BAGEL" button, the browning control dial (settings 1-6), the toast lever, and the "FROZEN" button. The image clearly labels "Three Function Buttons".

MAINTENANCE AND CLEANING

Regular cleaning will help maintain the performance and longevity of your toaster.

1. **Unplug and Cool:** Always unplug the toaster from the electrical outlet and allow it to cool completely before cleaning.
2. **Crumb Tray:**
 - Locate the hinged crumb tray at the bottom of the toaster.
 - Open the crumb tray and slide it out.
 - Discard crumbs. Wipe the tray with a damp cloth and dry thoroughly.

- Slide the crumb tray back into place and close it securely.
 - *Note:* The crumb tray should be cleaned frequently to prevent crumb buildup, which can cause a fire hazard.
3. **Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as they may scratch the surface.
4. **Interior:** Do not insert any objects into the toasting slots to clean the interior. If food becomes lodged in the slots, unplug the toaster and carefully turn it upside down to dislodge the food.
5. **Storage:** When not in use, store the toaster in a clean, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet not working; toast lever not fully depressed.	Ensure toaster is securely plugged into a working outlet. Press the toast lever down until it locks.
Toast is too light or too dark.	Browning control setting is incorrect.	Adjust the browning control dial to a higher setting for darker toast or a lower setting for lighter toast.
Toast is stuck in the slots.	Bread slice is too thick or unevenly cut; food lodged.	Unplug the toaster. Use the high-rise lift feature. If still stuck, carefully dislodge with non-metallic tongs. Never use metal utensils.
Smoke coming from toaster.	Crumbs accumulated in crumb tray; food lodged and burning.	Immediately press the CANCEL button and unplug. Allow to cool. Clean crumb tray. Remove any lodged food.
Toaster smells during first use.	Manufacturing residues burning off.	This is normal. Ensure good ventilation. The smell will dissipate after a few uses.

SPECIFICATIONS

Brand:	Toastmaster
Model Number:	TM26TS
Colour:	Black
Material:	Plastic, Stainless Steel
Power/Wattage:	850 watts
Voltage:	120 Volts
Number of Slices:	2

Product

Dimensions: 16.79 x 27.89 x 17.6 cm (6.61 x 10.98 x 6.93 inches)

Item Weight: 948.01 g (2.09 lbs)

Special Features: Cool Touch Exterior, Wide Slots, High Rise Toast Lift, Hinged Crumb Tray, Defrost/Bagel/Cancel Functions

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or contact Toastmaster customer service. Keep your purchase receipt as proof of purchase.

For further assistance, you may visit the official Toastmaster website or contact their customer support line. Specific contact details are typically provided in the product packaging or on the manufacturer's website.

© 2025 Toastmaster. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question