

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Tefal](#) /

› [Tefal Easygrill 2 in 1 Electric Barbecue + Grill 2100W \(Model BG930812\) User Manual](#)

Tefal BG930812

Tefal Easygrill 2 in 1 Electric Barbecue + Grill 2100W (Model BG930812) User Manual

Thank you for choosing the Tefal Easygrill. Please read these instructions carefully before first use and keep them for future reference.

IMPORTANT SAFETY INSTRUCTIONS

To ensure safe operation and prevent injury or damage, always follow these basic safety precautions:

- Read all instructions thoroughly before operating the appliance.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Always place the appliance on a stable, heat-resistant surface.
- Unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool before handling or cleaning parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- Do not use accessories or attachments not recommended by the manufacturer, as this may cause injuries.
- Do not use the appliance for anything other than its intended use.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to 'off', then remove the plug from the wall outlet.
- Surfaces are hot during use. Do not touch hot surfaces. Use handles or knobs.
- This appliance is designed for outdoor electric grilling. Ensure proper ventilation when in use.

PRODUCT OVERVIEW

The Tefal Easygrill 2 in 1 Electric Barbecue + Grill offers versatile cooking options with its interchangeable grill and plancha plates. Familiarize yourself with the components before assembly and use.

Components



Image: Exploded view of the Tefal Easygrill, illustrating its main components including the base, water tray, heating element, grill grate, and plancha plate.

1. **Base Unit:** The main housing that supports all other components.
2. **Water Tray:** Collects grease and juices, and helps reduce smoke.
3. **Heating Element:** Provides the heat for cooking.
4. **Temperature Control Dial:** Adjusts the cooking temperature.
5. **Grill Grate:** For traditional barbecue grilling.
6. **Plancha Plate:** For flat-surface grilling, ideal for delicate foods or vegetables.
7. **Power Cord:** Connects the appliance to the electrical outlet.



Image: The Tefal Easygrill base unit with the grill grate installed, and the separate plancha plate positioned next to it, highlighting the 2-in-1 functionality.

SETUP

Follow these steps to prepare your Tefal Easygrill for its first use.

Unpacking

1. Carefully remove all components from the packaging.
2. Remove any protective films or packaging materials from the appliance.
3. Wash the grill grate, plancha plate, and water tray with warm, soapy water. Rinse thoroughly and dry completely. The grill grate and plancha plate are dishwasher-safe.
4. Wipe the base unit with a damp cloth. Do not immerse the base unit in water.

Assembly



Image: The fully assembled Tefal Easygrill, showing the grill grate in place and the temperature control dial on the front.

1. Place the base unit on a stable, flat, heat-resistant surface.
2. Insert the water tray into the base unit. Ensure it is properly seated.
3. Place the heating element assembly over the water tray, ensuring it rests securely.
4. Choose your desired cooking surface: either the grill grate or the plancha plate. Place it on top of the heating element, ensuring it sits flat and stable.
5. Ensure the temperature control dial is set to '0' (off) before plugging in the appliance.

First Use Preparation

- Before each use, fill the water tray with approximately 1.5 liters of water. This helps to collect grease, reduce smoke, and prevent food from drying out. Do not overfill.
- Plug the power cord into a suitable electrical outlet.

OPERATING INSTRUCTIONS

Your Tefal Easygrill offers two cooking modes: traditional barbecue grilling and plancha grilling.

Temperature Control



Image: The Tefal Easygrill with its heating element visibly hot and glowing red, indicating it is in operation. The temperature control dial is set to a high heat level.

- The appliance features an adjustable thermostat with settings from 1 to 5.
- Turn the temperature control dial clockwise to select the desired heat level. Setting 1 is the lowest, and 5 is the highest.
- Allow the grill to preheat for approximately 5-10 minutes before placing food on the cooking surface.

Grilling with the Barbecue Plate



Image: The Tefal Easygrill in use, with chicken pieces, sausages, asparagus, and other vegetables cooking on the metal grill grate, showing typical barbecue preparation.

1. Ensure the grill grate is properly installed on the heating element.
2. Preheat the grill to your desired temperature setting.
3. Lightly brush the grill grate with cooking oil if desired, especially for delicate foods.
4. Place food directly onto the hot grill grate.
5. Cook food according to your recipe or until desired doneness is achieved, turning as necessary.

Grilling with the Plancha Plate



Image: The Tefal Easygrill with the flat plancha plate installed, cooking salmon fillets, shrimp, scallops, and sliced vegetables, demonstrating its use for diverse ingredients.

1. Ensure the plancha plate is properly installed on the heating element.
2. Preheat the plancha to your desired temperature setting.
3. Add a small amount of cooking oil or butter to the plancha surface if needed.
4. Place food directly onto the hot plancha plate.
5. Cook food according to your recipe or until desired doneness is achieved, turning as necessary.

After Use

- Turn the temperature control dial to '0' (off).
- Unplug the appliance from the wall outlet.
- Allow the appliance to cool completely before cleaning or storing.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your Tefal Easygrill.

General Cleaning

1. Ensure the appliance is unplugged and completely cool before cleaning.
2. Remove the grill grate/plancha plate, heating element, and water tray.
3. Empty the water tray and discard any accumulated grease and water.
4. Wash the grill grate, plancha plate, and water tray with warm, soapy water. Use a non-abrasive sponge or brush to remove food residue.
5. The grill grate and plancha plate are dishwasher-safe for convenient cleaning.
6. Wipe the heating element with a damp cloth. Do not immerse the heating element in water.
7. Wipe the exterior of the base unit with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
8. Ensure all parts are thoroughly dry before reassembling or storing.

Storage

- Store the clean and dry appliance in a cool, dry place.

- Do not wrap the power cord tightly around the appliance.

TROUBLESHOOTING

If you encounter issues with your Tefal Easygrill, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; temperature dial not set.	Ensure the power cord is securely plugged into a working outlet. Turn the temperature dial to a setting above '0'.
Food not cooking evenly.	Insufficient preheating time; uneven food placement.	Allow the grill to preheat for 5-10 minutes. Distribute food evenly across the cooking surface.
Excessive smoke.	Water tray empty or low; too much grease on heating element.	Ensure the water tray is filled with water. Clean the heating element if there is excessive grease buildup (only when cool and unplugged).
Temperature not reaching desired level.	Temperature dial set too low; external factors (e.g., strong wind).	Increase the temperature setting. Ensure the grill is placed in a sheltered area if used outdoors.

SPECIFICATIONS

Key technical specifications for the Tefal Easygrill 2 in 1 Electric Barbecue + Grill.

Feature	Specification
Brand	Tefal
Model Number	BG930812
Power/Wattage	2100 W
Voltage	230 Volts
Material	Metal Stainless Steel
Product Dimensions (D x W x H)	34.9 x 46 x 12 cm
Item Weight	2.9 kg
Special Features	2-in-1 with plancha plate, temperature control
Cooking Surface	735 cm ² (approximate)
Capacity	Up to 8 people

WARRANTY AND SUPPORT

Your Tefal Easygrill is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical assistance, spare parts, or any questions regarding your appliance, please contact Tefal customer service. Contact information can typically be found on the Tefal website or in your product packaging.