

[Manuals.plus](#) /

> [SanJie](#) /

> SanJie DS17 Wireless Door Chime Instruction Manual

SanJie DS17

SanJie DS17 Wireless Door Chime Instruction Manual

Model: DS17

INTRODUCTION

The SanJie DS17 Wireless Door Chime is a versatile contact sensor alarm system designed to alert you when a door or window is opened. Ideal for homes, businesses, offices, or stores, this system provides enhanced awareness and security. It features a long wireless range, multiple chime options, and adjustable volume levels to suit various environments and needs.

PACKAGE CONTENTS

Please verify that all components are present in your package:

- 2 x Receivers (Plug-in Chime Units)
- 2 x Sensors (Magnetic Contact Sensors)
- Adhesive Tape (for sensor mounting)
- Screws (for optional sensor mounting)
- Product Manual



Image: Components included in the SanJie Door Chime package, showing two receivers, two sensors, adhesive tape, screws, and the manual.

Your browser does not support the video tag.

Video: An overview of the SanJie door chime package contents, demonstrating what is included in the box.

SETUP & INSTALLATION

1. Receiver Installation

1. Plug the receiver unit into a standard electrical outlet in your desired location. The unit will emit a default chime sound upon initial power-up.



STEP 1

Plug the receiver in the socket




STEP 2

Place magnetic part on the door or window with double-sided tape or screws. (Included in the package)
Now you're ready to protect!



Scare off intruders

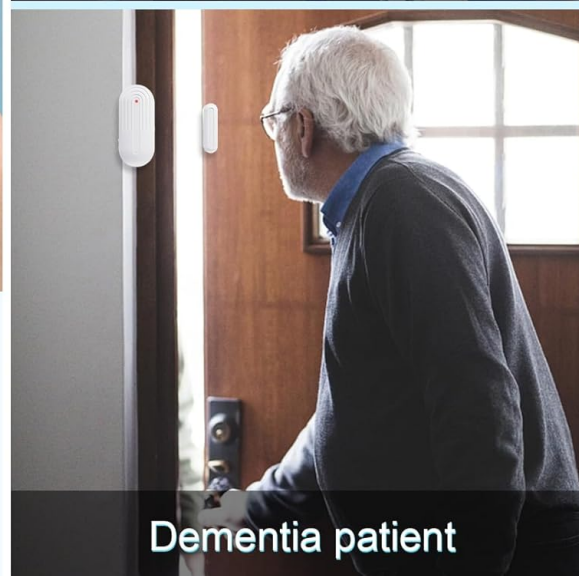

Dementia patient

Image: A hand plugging the receiver unit into a wall socket, illustrating the first step of installation.

2. Sensor Installation

The door sensor consists of two parts: a main sensor unit and a smaller magnetic unit. These two parts must be aligned closely (less than 0.4 inches apart) when the door/window is closed.

1. Ensure the sensor unit is switched ON (if applicable, some models have an on/off switch).
2. Attach the two parts of the door sensor onto your door/window and its frame using either the provided double-sided adhesive tape or screws. Ensure the main sensor unit is on the fixed frame and the magnetic unit is on the moving part (door/window).
3. Verify that the gap between the two sensor parts is less than 0.4 inches (approximately 1 cm) when the door/window is closed. When the door/window opens, the two parts separate, triggering the chime.

How to Install



Image: A step-by-step visual guide on how to install the SanJie door chime sensor using adhesive tape, showing proper alignment and gap requirements.

Your browser does not support the video tag.

Video: Demonstration of how the wireless door chimes when a door opens, showing the sensor being triggered.

OPERATING INSTRUCTIONS

Adjusting Volume

The receiver unit has 5 adjustable volume levels, ranging from mute to 110dB. Press the Volume +/- buttons on the side of the receiver to cycle through the volume options.

Changing Chimes

The system offers 26 different chimes. Use the Forward and Back buttons on the receiver to select your preferred ringtone. The receiver has a memory function that retains the last selected tune even after being unplugged.

Pairing Additional Sensors/Receivers

Your units come pre-paired. If you wish to pair additional sensors or receivers, or re-pair existing ones:

1. Plug in the receiver unit.
2. Press and hold the Volume (Set) button on the receiver until the LED light emits a ding to enter pairing mode.
3. Quickly separate the door sensor from its magnetic counterpart. The door sensor indicator light will flash, and the receiver will make a "dingding" sound, indicating successful pairing.
4. To pair multiple sensors/receivers, repeat the above pairing process for each unit. You can also pair different ringtones to each sensor to identify which door is triggered.



Image: Detailed view of the receiver and sensor, highlighting the LED indicators, volume controls, and chime selection buttons.

Your browser does not support the video tag.

Video: Instructions on how to pair SanJie door chime sensors and change ringtones.

MAINTENANCE

Battery Replacement (Sensors)

The sensors require 12V batteries. When the sensor's indicator light no longer flashes or the chime unit does not respond to the sensor, it is time to replace the battery. Use a small screwdriver (often included) to open the sensor casing and replace the battery. The average battery life is approximately 1 year.

Cleaning

Wipe the units with a soft, dry cloth. Do not use abrasive cleaners or solvents.

TROUBLESHOOTING

- **No chime sound:** Ensure the receiver is plugged in and powered on. Check the volume level. Verify the sensor battery is not depleted. Re-pair the sensor and receiver if necessary.
- **Short range:** Ensure there are no major obstructions (thick walls, large metal objects) between the sensor and receiver. The maximum range is 500 feet in open areas, but indoor range may be reduced.
- **False alarms:** Check that the sensor parts are securely mounted and the gap is correct when the door/window is closed. Ensure the sensor is not exposed to extreme vibrations.

SPECIFICATIONS

Feature	Detail
Model Number	DS17
Voltage	120 Volts (AC)
Control Method	Remote
Noise Level	Up to 110 Decibels
Maximum Range	500 Feet
Sensor Technology	Contact Sensor
Item Weight	8.4 ounces (0.24 Kilograms)
Product Dimensions	4.33 x 3.62 x 3.62 inches
Material	ABS
Installation Method	Self-Adhesive
Included Components	Adhesive tape, Product manual, Receiver, Screws, Sensor (battery included)
Battery Cell Type	Alkaline (12V batteries required for sensors)
Average Battery Life	1 year

WARRANTY & SUPPORT

Warranty Information

The SanJie Door Chime comes with a lifetime warranty. For any product issues, please contact customer service through your order details.

Customer Service

For assistance with setup, troubleshooting, or any other inquiries, please refer to the contact information provided with your purchase or on the official SanJie website. Free return and exchange are available within 30 days of purchase.