

[Manuals.plus](#) /

› [Bang & Olufsen](#) /

› Bang & Olufsen Beoplay H8i Wireless Bluetooth On-Ear Headphones with Active Noise Cancellation, Transparency Mode and Microphone
- Pink

Bang & Olufsen 1645152

Bang & Olufsen Beoplay H8i Wireless Bluetooth On-Ear Headphones

User Manual

INTRODUCTION

The Bang & Olufsen Beoplay H8i are premium wireless on-ear headphones designed to deliver rich audio quality with advanced features for an enhanced listening experience. These headphones feature Active Noise Cancellation (ANC) to minimize ambient distractions and a Transparency Mode to allow you to hear your surroundings when needed. Equipped with a built-in proximity sensor, the H8i automatically pauses audio when removed and resumes playback when worn. With extended Bluetooth range and dual microphones for clear calls, the Beoplay H8i offers both freedom and functionality. The accompanying Beoplay app allows for personalized sound profiles and control over ANC settings. Crafted with durable aluminum, leather, and soft lambskin, these headphones combine luxurious design with comfortable wear for extended periods.



Image: Beoplay H8i headphones in pink, showcasing their design and material finish.

WHAT'S IN THE BOX

Your Beoplay H8i package includes the following components:

- Beoplay H8i Headphones
- 1.2m audio cord with 3.5mm jack
- 1.25m USB-A to USB-C cable (for charging)
- Flight adaptor
- Protective Case
- User Manual (this document)

SETUP

1. Charging Your Headphones

Before first use, fully charge your Beoplay H8i headphones. A full charge takes approximately 3.5 hours.

1. Connect the small end of the included USB-A to USB-C cable to the USB-C port on your headphones.
2. Connect the larger end of the USB-A cable to a USB power adapter (not included) or a computer's USB port.
3. The indicator light on the headphones will show charging status. It will turn solid green when fully charged.



Image: Side profile of the Beoplay H8i, highlighting the USB-C charging port and control buttons.

2. Pairing via Bluetooth

The Beoplay H8i can be paired with up to two devices simultaneously.

1. Ensure your headphones are charged and turned off.
2. Press and hold the power button for 5 seconds until the indicator light flashes blue, indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "Beoplay H8i" from the list of found devices.
5. Once connected, the indicator light on the headphones will turn solid blue.

For optimal experience and advanced settings, download the Bang & Olufsen app from your device's app store. The app allows you to adjust sound profiles, manage ANC, and update firmware.

OPERATING YOUR HEADPHONES

Controls

The Beoplay H8i features intuitive touch and button controls located on the earcups.

- **Power On/Off:** Press and hold the power button.

- **Volume Control:** Use the dedicated volume buttons on the earcup.
- **Play/Pause:** Press the center button.
- **Next Track:** Double-press the center button.
- **Previous Track:** Triple-press the center button.
- **Answer/End Call:** Press the center button during an incoming call.
- **Reject Call:** Press and hold the center button during an incoming call.



Image: Detail of the Beoplay H8i earcup, illustrating the location of the control buttons.

Active Noise Cancellation (ANC)

ANC reduces ambient noise for a more immersive listening experience.

- To activate or deactivate ANC, use the dedicated ANC button on the earcup or control it via the Bang & Olufsen app.

Transparency Mode

Transparency Mode allows you to hear your surroundings without removing your headphones.

- To activate or deactivate Transparency Mode, use the dedicated button on the earcup or control it via the Bang & Olufsen app.

Proximity Sensor

The built-in proximity sensor automatically pauses audio when you remove the headphones and resumes when you put them back on.

- To disable this function: With headphones powered on, press and hold the middle button on the right headphone for 5 seconds until the indicator light flashes blue, then double-press the middle button. The indicator light will turn red.
- To re-enable: Repeat the same steps until the indicator light turns green.

MAINTENANCE

Proper care will ensure the longevity of your Beoplay H8i headphones.

- **Cleaning:** Use a soft, dry cloth to wipe the surfaces of the headphones. For the leather headband and lambskin ear cushions, use a specialized leather cleaner if necessary, following the product instructions.
- **Storage:** When not in use, store the headphones in the provided protective case to prevent scratches and damage.
- **Avoid Moisture:** These headphones are not water resistant. Avoid exposure to liquids, high humidity, or extreme temperatures.
- **Battery Care:** For optimal battery life, avoid fully discharging the battery frequently. Charge the headphones regularly, even if not in constant use.

TROUBLESHOOTING

If you encounter issues with your Beoplay H8i headphones, refer to the table below for common solutions.

Problem	Possible Cause / Solution
Headphones do not turn on.	Battery is depleted. Charge the headphones fully.
Cannot pair via Bluetooth.	Ensure headphones are in pairing mode (flashing blue light). Make sure Bluetooth is enabled on your device. Move headphones closer to the device. Forget "Beoplay H8i" from your device's Bluetooth settings and try pairing again. Restart both headphones and your device.
Audio cuts out or is intermittent.	Move closer to the paired device to reduce interference. Ensure no physical obstructions are between the headphones and the device. Disconnect other Bluetooth devices from your source device.

Problem	Possible Cause / Solution
Proximity sensor not working correctly.	Ensure the sensor area on the earcup is clean and unobstructed. Try disabling and re-enabling the proximity sensor function as described in the "Operating Your Headphones" section.
Bang & Olufsen app not connecting.	Ensure headphones are powered on and connected to your device via Bluetooth. Close and reopen the app. Uninstall and reinstall the Bang & Olufsen app.

SPECIFICATIONS

Feature	Detail
Model Name	Beoplay H8i Pink
Dimensions (H x W x D)	7 x 1 x 7 inches
Weight	7.58 Ounces (approx. 215g)
Connectivity	Bluetooth 4.2, 3.5mm audio jack, USB-C
Frequency Range	20 22,000 Hz
Impedance	21 Ohm
Noise Control	Active Noise Cancellation (ANC), Transparency Mode
Battery Life	Up to 30 hours (with ANC)
Charging Time	Approx. 3.5 hours
Materials	Aluminum, Leather, Lambskin, Memory Foam
Control Method	Touch and Physical Buttons
Water Resistance	Not Water Resistant

WARRANTY AND SUPPORT

For warranty information and technical support, please visit the official Bang & Olufsen website or contact their customer service directly.

Official Bang & Olufsen Website: www.bang-olufsen.com

You can also find additional support and FAQs on the [Bang & Olufsen Store on Amazon](#).

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question