



Manuals.plus /

- › Honeywell Home /
- › Honeywell Decorative Wall Lantern with LED Vintage Filament Bulb User Manual

Honeywell Home B07PXG7MJ1

Honeywell Decorative Wall Lantern with LED Vintage Filament Bulb User Manual

Model: B07PXG7MJ1

INTRODUCTION

This manual provides instructions for the safe installation, operation, and maintenance of your Honeywell Decorative Wall Lantern with LED Vintage Filament Bulb. This lantern is designed to provide warm white illumination for outdoor spaces, featuring a dusk-to-dawn sensor for automatic operation.

SAFETY INFORMATION

- **WARNING:** Risk of electric shock. Disconnect power at the fuse or circuit breaker before installation or servicing.
- This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
- Use only the bulb type and wattage specified.
- Do not install near combustible materials.
- Ensure all connections are secure and properly insulated.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Decorative Wall Lantern Fixture
- LED Vintage Filament Bulb (E26 base, 800 Lumens, 2700K Warm White)
- Mounting Hardware (screws, wire nuts)
- Instruction Manual

SETUP AND INSTALLATION

1. **Turn Off Power:** Before starting, ensure the power to the installation area is turned off at the circuit breaker or fuse box.
2. **Prepare Mounting Surface:** Ensure the wall surface is clean, dry, and structurally sound to support the lantern.
3. **Mount the Fixture:**
 - Attach the mounting bracket to the junction box using the provided screws.
 - Connect the electrical wires: connect the black wire from the fixture to the black (hot) wire from the junction box, the white wire from the fixture to the white (neutral) wire from the junction box, and the ground wire from the fixture to the ground wire from the junction box. Secure connections with wire nuts.
 - Carefully tuck all wires into the junction box.
 - Align the lantern fixture with the mounting bracket and secure it with the provided screws or nuts.
4. **Install the Bulb:** Carefully screw the LED Vintage Filament Bulb into the E26 socket until snug. Do not overtighten.
5. **Restore Power:** Once installation is complete and all connections are secure, restore power at the circuit breaker.



Image: Honeywell Decorative Wall Lantern installed on an exterior wall, providing illumination for an outdoor patio. The lantern features a black finish and a clear glass shade, showcasing the vintage-style LED filament bulb.

OPERATING INSTRUCTIONS

This lantern features a built-in dusk-to-dawn sensor for automatic operation.

- **Automatic On/Off:** The lantern will automatically turn on when ambient light levels fall (at dusk) and turn off when ambient light levels rise (at dawn).
- **Sensor Placement:** Ensure the dusk-to-dawn sensor (typically a small clear or opaque dome on the fixture) is not obstructed by objects, eaves, or other light sources, as this can interfere with its proper function. Avoid installing the fixture where direct artificial light (e.g., from another porch light or street light) can shine directly onto the sensor, which may cause it to turn off prematurely.

MAINTENANCE

- **Cleaning:** To clean the fixture, ensure power is off. Wipe with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the finish or electrical components.
- **Bulb Replacement:**
 - Turn off power to the fixture at the circuit breaker.
 - Allow the bulb to cool completely before touching.
 - Unscrew the old bulb counter-clockwise.
 - Screw in a new E26 base LED bulb of appropriate wattage (maximum 8W LED equivalent).
 - Restore power.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power to the fixture. Bulb is loose or faulty. Sensor is covered or faulty.	Check circuit breaker. Tighten or replace bulb. Ensure sensor is clear and not obstructed.
Light stays on during the day.	Sensor is obstructed or in a dark location. Sensor is faulty.	Relocate fixture or clear obstruction from sensor. Contact customer support if sensor is faulty.
Light flickers.	Loose bulb connection. Incompatible dimmer switch (not designed for dimming). Faulty bulb.	Tighten bulb. Ensure fixture is not connected to a dimmer. Replace bulb.

SPECIFICATIONS

- **Model:** B07PXG7MJ1
- **Brand:** Honeywell Home
- **Bulb Type:** LED Vintage Filament (included)
- **Bulb Base:** E26
- **Light Output:** 800 Lumens
- **Color Temperature:** 2700K Warm White
- **Wattage:** 8 Watts (LED)
- **Voltage:** 2700 Volts
- **Finish Type:** Black Finish

- **Mounting Type:** Wall Mount
- **Water Resistance Level:** Not Water Resistant
- **Features:** Dusk-to-Dawn Sensor

Important Note: The specification "Not Water Resistant" for an outdoor lantern suggests careful placement is required to protect it from direct rain or water exposure. Consult a qualified electrician if unsure about suitable installation locations. The listed voltage of "2700 Volts" appears to be an error in the source data; typical household voltage is 120V in North America. Please refer to the product packaging for accurate voltage information.

WARRANTY

Honeywell Home products are manufactured to high-quality standards. For specific warranty information, please refer to the documentation included with your product packaging or visit the official Honeywell Home website. Keep your purchase receipt for warranty claims.

CUSTOMER SUPPORT

If you have any questions or require assistance with your Honeywell Decorative Wall Lantern, please contact Honeywell Home customer support. Contact details can typically be found on the product packaging or their official website.

